

Philips
DVD Mini Hi-Fi System

DVD
USB Direct
FM
240W

FWD410



Enjoy rich sound from DVDs and MP3 CDs

with USB Direct

Get more from movies with the FWD410. Its rich and crystal clear audio is delivered powerfully at outputs of 200W RMS and 3300W PMPO. The mini hi-fi system is also DivX certified for DivX video playback, and plays MP3 files via USB.

Enrich your movie experience

- Play DVD, (S)VCD, MP3-CD, CD(RW) and Picture CD
- Dolby Digital for ultimate movie experience
- Progressive Scan component video for optimized image quality
- DivX Certified for standard playback of DivX videos

Enrich your sound experience

- 200W RMS/ 3300W PMPO total output power
- MAX Sound for instant power boost
- Dynamic Bass Boost for deep and dramatic sound
- Digital Sound Control for optimized music style settings


Continuous enjoyment of your favorite music

- Digital tuning with preset stations for extra convenience
- USB Direct for easy MP3 music playback

PHILIPS


Highlights

Dolby Digital

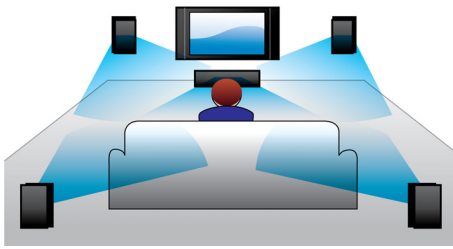

Because Dolby Digital, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb quality surround sound audio with realistic spatial cues.

Progressive Scan

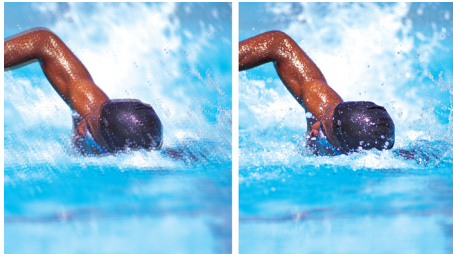

Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending a field comprising the odd lines to the screen first, followed by the field with the even lines, both fields are written at one time. A full image is created instantaneously, using the maximum resolution. At such a speed, your eye perceives a sharper picture with no line structure.

MAX Sound



MAX Sound technology produces an instant boost in bass, maximizing volume performance


and instantly creating the most impressive listening experience with just the touch of a button. Its sophisticated electronic circuitry calibrates existing sound and volume settings, instantly boosting bass and volume to maximum levels without distortion. The end result is a noticeable amplifying of both sound spectrum and volume and a potent audio boost that will add mileage to any music.

Dynamic Bass Boost




Dynamic Bass Boost maximizes your music enjoyment by emphasizing the bass content of the music throughout the range of volume settings - from low to high - at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

Digital tuning with presets

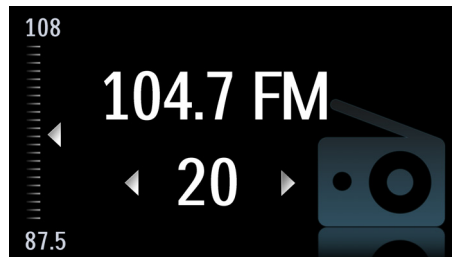

Simply tune into the station that you want to preset, press and hold the preset button to memorize the frequency. With preset radio stations that can be stored, you can quickly access your favorite radio station without having to manually tune the frequencies each time.

DivX Certified

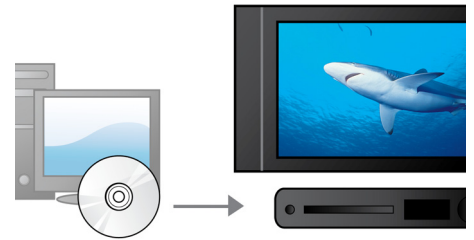

With DivX support, you are able to enjoy DivX encoded videos in the comfort of your living room. The DivX media format is an MPEG4-based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW, and DVD recordable discs.

Digital Sound Control



Digital Sound Control offers you a choice of pre-set Optimal, Jazz, Techno and Rock controls you can use to optimise the frequency ranges for different musical styles. Each mode uses graphic equalizing technology to automatically adjust the sound balance and enhance the most important sound frequencies in your chosen music style. Ultimately, Digital Sound Control makes it easy for you get the most out of your music by precisely adjusting the sound balance to match the type of music you are playing.

200W RMS/ 3300W PMPO

200W RMS/ 3300W PMPO total output power

Specifications

Audio playback

- Playback media: MP3-CD, CD, CD-R, CD-RW
- Disc playback modes: repeat/shuffle/program
- Number of decks: 1
- USB Direct playback modes: fast backward/fast forward, play/pause, previous/next, repeat, stop

Sound

- Total Sound Power (RMS): 200 W
- Output power: 3300W PMPO
- Sound enhancement: MAX sound, digital sound control, Dynamic Bass Boost, Dolby Digital

Loudspeakers

- Number of speaker boxes: 2
- Speaker drivers: 2" tweeter, 5.25" woofer
- Loudspeaker enhancement: 2-way
- Speaker types: bass reflex speaker system

Video Playback

- DVD region code: 3
- Playback media: DVD, DVD+R/+RW, DVD-R/-RW, SVCD, video CD, picture CD, DivX
- Video enhancement: progressive scan
- Disc playback modes: disc menu, OSD, fast backward, fast forward, slow backward, slow forward, A-B Repeat, angle, Zoom, resume playback from stop
- USB Direct Playback: JPEG

Tuner/Reception/Transmission

- Tuner bands: FM stereo, MW
- Station presets: 40
- Tuner enhancement: auto digital tuning, auto scan

Connectivity

- Audio/Video output: 2xRCA (Audio), component

- video out, composite video (CVBS) out, S-Video out
- USB: USB host

Convenience

- Number of discs: 1
- Display type: LCD display
- Loader type: top, tray
- Clock: sleep timer
- On-Screen display languages: English, French, Portuguese, Spanish, Thai

Accessories

- Remote control
- Cables/Connection: audio cable, composite video cable (Y)
- Others: Quick start guide
- User Manual: English
- Warranty: World Wide Guarantee booklet

Dimensions

- Packaging depth: 293 mm
- Packaging height: 363 mm
- Packaging width: 733 mm
- Product dimensions (WxDxH): 640 x 262 x 313 mm

Power

- Power supply: 100 - 240V AC, 50/60Hz

Digital photo playback

- Playback media: Kodak Picture CD, picture CD
- Picture Enhancement: flip photos, rotate, slideshow, Zoom
- Picture Compression Format: JPEG



Issue date 2014-06-12

Version: 1.0.5

12 NC: 8670 000 86679
EAN: 87 12581 63290 8

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com