



Philips Fidelio
docking sound system

Bluetooth
with Lightning connector



DTM5095

Enjoy iPod/iPhone/iPad music wirelessly

Obsessed with sound

Listen to your music wirelessly with Bluetooth®. This Philips docking station also plays music from your CD or iPod/iPad/iPhone via Lightning connector, delivering wide, immersive & crystal-clear sound - thanks to LivingSound & Pure Digital

Enrich your sound experience

- LivingSound for wider, immersive stereo sound
- 3.1 speaker system with a built-in subwoofer
- Pure digital processing technology for best sound clarity
- 200W RMS total output power

Enjoy your music from multiple sources

- Wireless music streaming via Bluetooth
- Fast charging and play music via Lightning connector
- Play MP3/WMA-CD, CD and CD-RW
- USB Direct for MP3/WMA music playback
- Audio-in for portable music playback
- FM digital tuning with presets

Design that blends into your interior(s)

- Unique tower design to fit your lifestyle

PHILIPS
Fidelio

Docking sound system
Bluetooth with Lightning connector

Highlights

Play and charge via Lightning



Enjoy your favorite music while charging your iPod/iPhone/iPad via the new Lightning connector! Just dock it directly on the speaker to play your hand-picked tunes in superb sound. It also charges your device quickly while playing, so you don't have to worry about the battery running out.

Wireless music streaming

Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favorite music, sound from video or game wireless on this speaker easily.

LivingSound



Philips' patent-pending LivingSound vastly expands the sweet spot (the ideal listening location in your room) so you can enjoy truly immersive music over a wider area. Combining various sound processes, LivingSound recovers the richness and spatial details of the soundstage that are often lost with a compact stereo system. The effect is a larger than expected sweet spot - one that is extensively


and evenly distributed around the room. Now your music enjoyment is not confined to the traditionally narrow area anymore. Enjoy optimum stereo sound in a wider area.

Pure digital sound



Advanced pure digital sound processing technology offers vastly superior sound performance compared to the conventional analog audio processing technology that is found in docking players that use the analog audio output from an iPod/iPhone. By collecting the iPod's/iPhone's digital audio output and employing digital processing at each stage of the circuit, a much higher Signal-to-Noise ratio is produced. The result is unsurpassed sound clarity that is in perfect balance.

200W RMS

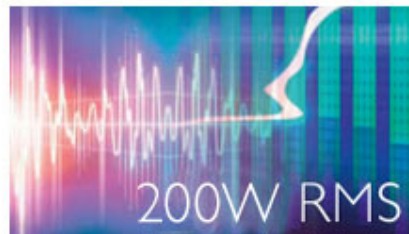

This system has 200W RMS total output power. RMS refers to Root Mean Square which is a typical measurement of audio power, or rather, the electrical power transferred from an audio amplifier to a loudspeaker, which is measured in watts. The amount of electrical power delivered to the loudspeaker and its sensitivity determines the sound power that is generated. The higher the

wattage, the better the sound power emitted by the speaker.

USB Direct



With the USB Direct mode, simply plug in your USB device to the USB port on your Philips device and your digital music will be played directly from the Philips device.

Play MP3/WMA-CD, CD and CD-RW



Audio compression technology allows large digital music files to be reduced up to 10 times in size without radically degrading their audio quality. MP3 or WMA are two of the compression formats that let you enjoy a world of digital music on your Philips player. Download MP3 or WMA songs from authorized music sites on the Internet or create your own MP3 or WMA music files by ripping your audio CDs and transferring them onto your player.



Specifications

Sound

- Output power (RMS): 200W
- Sound enhancement: digital sound control 4 modes, Dynamic Bass Boost, LivingSound
- Volume control: up/down

Loudspeakers

- Main Speaker: 5" woofer, Bass Reflex Speaker System
- No. of built-in speakers: 4
- Subwoofer types: passive

Audio Playback

- Playback Media: CD, CD-R, CD-RW, MP3-CD, WMA-CD, USB flash drive
- Disc Playback Modes: Repeat/one/all/program, Shuffle Play, 20-Track Programmable, Fast Forward/Backward, Next/Previous Track Search
- Loader Type: Motorised, Tray
- ID3-tag support
- USB Direct Modes: Fast Backward/Fast Forward, Play/Pause, Previous/Next, Program Play, Repeat, Shuffle, Stop
- Cradle playback mode: Charging iPhone, Charging iPod, Charging iPad

Tuner/Reception/Transmission

- Tuner Bands: FM Stereo
- Auto digital tuning
- Tuner Enhancements: Auto Store
- RDS: Program Type, Station Name, RDS Clock Set
- Station presets: 20
- Antenna: FM antenna

Connectivity

- Other connections: FM Antenna
- 3.5mm stereo line in: MP3 Link
- Rear Connections: AUX in
- Bluetooth profiles: A2DP

Convenience

- Alarms: CD Alarm, Radio Alarm, Sleep timer, USB alarm
- Clock: On main display, sleep timer

- Display Type: VFD display
- Eco Power Standby: 0.5 watt
- Indications: DIM mode
- Charging device: iPad, iPhone, iPod, iPad Mini
- Display type: VFD display

Accessories

- Included accessories: AC Power Cord, FM antenna
- Quick start guide: English, German, Dutch, French, Spanish, Italian
- Remote control
- User Manual: 16 languages
- Cables/Connection: 3.5 mm stereo line in cable, power cord
- Others: User Manual

Dimensions

- Packaging dimensions (W x H x D): 422 x 1130 x 398 mm
- Gross weight: 18 kg
- Net weight: 14.5 kg
- Main unit depth: 300 mm
- Main unit height: 978 mm
- Main unit width: 300 mm

Power

- Power supply: 220-240V, 50Hz

Audio playback

- Docking playback modes: fast forward and backward, next and previous track, play and pause
- Playback media: CD, MP3-CD, USB flash drive, WMA-CD

iPod compatibility

- Compatible with: iPod nano 7th generation, iPod touch 5th generation

iPhone compatibility

- Compatible with: iPhone 5

iPad compatibility

- Compatible with: iPad mini, iPad with Retina display



Issue date 2014-09-24

Version: 2.1.9

12 NC: 8670 000 99256
EAN: 08 71258 16741 13

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com