

Philips
DVD home theater system

Hi-Speed USB 2.0 Link

HTS3366



Now enjoy high definition video and surround sound

with tower speakers

High definition pictures and surround sound delivered by this system provide amazing home entertainment. Enjoy crisp pictures with 1080p HDMI upscaling, and playback from USB drives, portable media players and virtually any sort of disc.

Connect and enjoy multiple sources

- Hi-Speed USB 2.0 Link plays video/music from USB flash drive

Brings audio and video to life

- HDMI 1080p upscales to high definition for sharper pictures
- Karaoke Scoring for fun and exciting song contests at home
- DoubleBASS for an extended, deep bass experience
- DTS, Dolby Digital and Pro Logic II surround sound
- Clear Voice for more audible vocals in movies and music

Plays all your movies and music

- DivX Ultra Certified for enhanced playback of DivX videos
- Plays WMV, DivX, WMA, MP3 and JPEG digital camera photos
- Plays CD, (S)VCD, DVD, DVD+R/RW, DVD-R/RW, DVD+R DL

Easy to set up and use

- EasyLink controls all EasyLink products with a single remote
- Floor standing speakers for freedom of placement

PHILIPS
sense and simplicity


Highlights

HDMI 1080p



HDMI 1080p upscaling delivers images that are crystal clear. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multichannel audio, without conversions to analog - delivering perfect picture and sound quality, completely free from noise.

Hi-Speed USB 2.0 Link

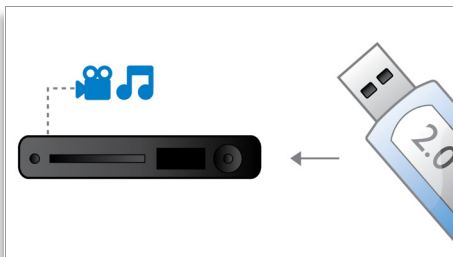

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. Hi-Speed USB devices have a data transfer rate of up to 480 Mbps - up from the 12 Mbps in original USB ones. With Hi-Speed USB 2.0 Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

DivX Ultra Certified




With DivX support, you are able to enjoy DivX encoded videos in the comfort of your living room. The DivX media format is an MPEG4-based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW, and DVD recordable discs. DivX Ultra combines DivX playback with great features like integrated subtitles, multiple audio languages, multiple tracks and menus into one convenient file format.

Karaoke Scoring



Add a dash of fun to your Karaoke sessions with Karaoke Scoring. Allow your performance to be judged for further improvement, or for friendly competitions. Karaoke Scoring automatically rates your singing and gives you a humorous picture that is tied to how well you did. The fun never ends.

DTS, DolbyDigital, ProLogic II

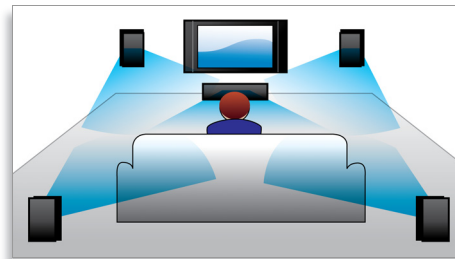


A built-in DTS and Dolby Digital decoder eliminates the need for an external decoder by processing all six channels of audio information to provide a surround sound experience and an astoundingly natural sense of ambience and dynamic realism. Dolby Pro Logic II provides five channels of surround processing from any stereo source.

EasyLink



EasyLink lets you control multiple devices with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

Floor standing speakers

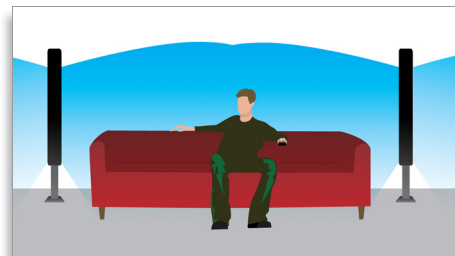

Floor standing speakers for freedom of placement



Specifications

Picture/Display

- D/A converter: 12 bit, 108 MHz
- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive Scan, Video Upscaling(720p, 1080i/p)

Sound

- Output power (RMS): 4x75W, 2x150W
- D/A converter: 24 bit, 192 kHz
- Frequency response: 150-18000 Hz
- Signal to noise ratio: >65 dB
- Sound System: DTS, Dolby Digital, Dolby Prologic II, Stereo
- Sound Enhancement: Class "D" Digital Amplifier, Night Mode
- Equalizer settings: Rock, Action, Classic, Concert, Drama, Lounge, Gaming, Sports

Video Playback

- Compression formats: MPEG1, MPEG2, DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0, DivX Ultra, WMV, MPEG4
- Playback Media: DVD-Video, DVD+R/+RW, DVD-R/-RW, Video CD/SVCD, CD-R/CD-RW
- Video disc playback system: NTSC, PAL

Audio Playback

- Compression format: MP3, WMA
- Playback Media: DVD+R/+RW, DVD-R/-RW, CD-R/RW, USB flash drive
- MP3 bit rates: 32-256 kbps and VBR

Still Picture Playback

- Picture compression format: JPEG
- Playback Media: DVD+R/+RW, CD-R/RW, DVD-R/-RW, USB flash drive
- Picture enhancement: Rotate, Zoom, Slideshow with music playback

Tuner/Reception/Transmission

- Tuner Bands: FM
- No. of preset Audio Channels: 40

Connectivity

- Front / Side connections: Microphone input 3.5mm jack, Hi-Speed USB, MP3 Line-in
- Rear Connections: HDMI output, Component Video output, S-Video out, Composite video (CVBS) output, AUX in, FM Antenna, Easy-Fit speaker connectors, Digital coaxial in

Power

- Power supply: 120/230VAC, 50/60Hz
- Standby power consumption: < 1 W
- Power consumption: 100 W

Loudspeakers

- Satellite Speaker: 2 Floor standing pillars
- Satellite speaker drivers: 3" full range woofer
- Satellite speaker impedance: 3 ohm

- Satellite speaker freq range: 150-20000 Hz
- Center Speaker: Magnetically shielded, 3 way
- Center speaker drivers: 1 x 2" tweeter, 2 x 2.5" woofers
- Center speaker impedance: 6 ohm
- Center freq range: 150-20000 Hz
- Subwoofer driver: 6.5" high efficiency woofer
- Subwoofer impedance: 6 ohm
- Subwoofer freq range: 40-150 Hz
- Subwoofer type: Passive

Accessories

- Included Accessories: Remote Control, 2 x AAA Batteries, CVBS video cable, FM antenna, AM antenna, Power cord, Quick start guide, User Manual, World Wide Warranty leaflet

Dimensions

- Set dimensions (W x H x D): 435 x 58 x 360 mm
- Set weight: 3.7 kg
- Front Speaker Width: 103 mm
- Front Speaker Height: 203 mm
- Front Speaker Depth: 71 mm
- Front Speaker Weight: 0.54 kg
- Rear Speaker Width: 262 mm
- Rear Speaker Height: 1199 mm
- Rear Speaker Depth: 264 mm
- Rear Speaker Weight: 3.53 kg
- Center speaker dimensions (W x H x D): 440 x 105 x 75 mm
- Center Speaker Weight: 1.39 kg
- Subwoofer dimensions (W x H x D): 163 x 363 x 369 mm
- Subwoofer Weight: 5.08 kg
- Packaging dimensions (W x H x D): 970 x 435 x 410 mm
- Weight incl. Packaging: 22.4 kg

Outer Carton

- EAN: 87 12581 38940 6
- Gross weight: 22.2 kg
- Outer carton (L x W x H): 97 x 41 x 43.5 cm
- Nett weight: 18.85 kg
- Number of consumer packagings: 1
- Tare weight: 3.35 kg

Packaging dimensions

- Packaging dimensions (W x H x D): 97 x 43.5 x 41 cm
- EAN: 87 12581 38940 6
- Gross weight: 22.2 kg
- Nett weight: 18.85 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 3.35 kg

Product dimensions

- Cable length: 0 cm
- Product dimensions (W x H x D): 0 x 0 x 0 cm
- Weight: 0 kg



Issue date 2009-06-12

Version: 4.0.7

12 NC: 8670 000 36329
EAN: 87 12581 38940 6

© 2009 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com