



Philips
Portable DVD Player

22.9 cm (9") LCD

5-hr playtime
analog TV

PD9048



Watch your favorite TV shows and DVDs anywhere

with easy setup

Enjoy free-to-air TV programs with the built-in TV receiver on the PD9048 portable DVD player. With the 9" LCD, 5 hours playback and USB connection, you can indulge in movies, music and photos enjoyment on the go.

Play your movies, music and photos on the go

- DVD, DVD+/-R, DVD+/-RW, (S)VCD, CD compatible
- DivX Certified for standard DivX video playback
- MP3-CD, CD and CD-RW playback
- View JPEG images from picture disc

Enjoy portable TV entertainment in real-time

- 22.9 cm (9") TFT color widescreen LCD display
- Supports PAL and SECAM TV standard
- Easy installation and automatic channel search

Extra touches for your convenience

- Up to 5-hour playback with a built-in battery*
- USB connection for video, photo and music playback
- Car mount pouch included for easy in-car use
- Car adaptor and handy remote control included

PHILIPS

Highlights

22.9cm/9" TFT color widescreen




The high resolution color LCD display brings images to life, showing off your treasured photos, favorite movies and music with the same 'real life' rich detail and vibrant colors as high quality prints.

DivX Certified

With DivX® support, you are able to enjoy DivX encoded videos and movies from the Internet, including purchased Hollywood films. The DivX media format is an MPEG-4 based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW and DVD recordable discs, USB storage and other memory cards for playback on your DivX Certified® Philips device.

DVD, DVD+/-RW, (S)VCD, CD

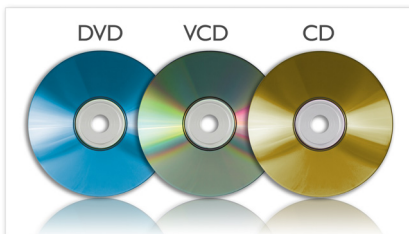

The Philips Portable DVD player is compatible with most DVD and CD discs available in the

market. DVD, DVD+/-R, DVD+/-RW, (S)VCD, and CD – all of them can play on the DVD player. DVD+/-R is a shorthand term for a DVD drive that can accept both of the common recordable DVD formats. Likewise, DVD+/-RW handles both common rewritable disc types.

MP3-CD, CD and CD-RW playback



MP3 is a revolutionary compression technology by which large digital music files can be made up to 10 times smaller without radically degrading their audio quality. A single CD can store up to 10 hours of music.

View JPEG from picture disc



Play JPEG photos that are saved on your disc. Relive your favorite moments with family and friends anytime you want!

5-hour built-in battery*



This Philips player comes with a compact built-in rechargeable battery for long-lasting power. Up to 5 hours of continuous movie, photo and music playback enjoyment can be achieved on a single charge. Just plug in the power cable to recharge the player - it's that simple.

Car mount pouch



Mount your portable DVD player easily to your car headrest. You can enjoy DVD movies on the road.

Specifications

Product dimensions

- Product dimensions (W x H x D):
24,04 x 3,94 x 17,84 cm
- Weight: 0,931 kg

Picture/Display

- Display screen type: LCD TFT
- Diagonal screen size (inch): 9 inch
- Resolution: 600(w)x220(H)x3(RGB)

Sound

- Output Power: 250mW RMS(built-in speakers)
- Output power (RMS): 10mW RMS(earphone)
- Signal to noise ratio: >80dB(earphone),
>62dB(built-in speakers)

Video Playback

- Playback Media: DVD, DVD+RW, DVD+R, Picture CD, SVCD, Video CD, DVD-R/-RW, MP3-CD, CD-R/CD-RW, DVD+R/+RW, CD
- Disc Playback Modes: A-B Repeat, Angle, Disc Menu, Fast Backward, Fast Forward, OSD, Repeat, Shuffle Play, Slow Backward, Slow Forward, Zoom, Resume Playback from Stop
- Video disc playback system: NTSC, PAL
- Compression formats: Divx

Audio Playback

- Compression format: Dolby Digital, MP3
- Playback Media: CD, CD-R, CD-RW, MP3-CD
- File systems supported: ISO-9660, Joliet
- MP3 bit rates: 32 - 320 kbps

Connectivity

- AV output: Composite (CVBS) x1
- DC in: 9V
- Headphone jack: 3.5mm Stereo Headphone x 1
- TV connection: Antenna jack

Convenience

- Battery charging indication
- Shock proof

Tuner/Reception/Transmission

- Tuner bands: UHF, VHF
- Video Playback: SECAM, NTSC, PAL

Accessories

- AC/DC Adaptor: DC-in 9V; 100-240v, 50/60Hz
- Cables: 1 x AV Cables
- Car kit: cigarette outlet adaptor, 12vDC
- Included accessories: Aerial antenna
- Remote control
- User Manual: Russian / Ukrainian / English languages
- Pouch: Mounting and carry pouch

Power

- Battery lifetime: Up to 5hrs*
- Battery Type: Built-in battery

Outer Carton

- Gross weight: 5,48 kg
- GTIN: 1 87 12581 64853 1
- Outer carton (L x W x H): 29,1 x 25 x 31 cm
- Nett weight: 4,29 kg
- Number of consumer packagings: 3
- Tare weight: 1,19 kg

Packaging dimensions

- Packaging dimensions (W x H x D):
27,2 x 28,5 x 7,3 cm
- EAN: 87 12581 64853 4
- Gross weight: 1,7 kg
- Nett weight: 1,43 kg
- Number of products included: 1
- Packaging type: Dummy
- Tare weight: 0,27 kg
- Type of shelf placement: Dummy



Issue date 2014-06-06

Version: 1.1.6

12 NC: 8670 000 91149
EAN: 87 12581 64853 4

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* DivX, DivX Certified, and associated logos are trademarks of DivXNetworks, Inc. and are used under license.

* Rechargeable batteries have a limited number of charge cycles and may eventually need to be replaced. Battery life and number of charge cycles vary by use and settings.

* Battery life varies by use and settings.

* Battery life of playtime is approximate and may vary depending on application condition. To optimize battery life, user should turn LCD backlight to minimum, connect to headphones (not built-in speakers) and listen at medium volume level, and use the product at room temperature.