




Philips  
Micro Hi-Fi System

MP3/WMA-CD playback  
USB Direct

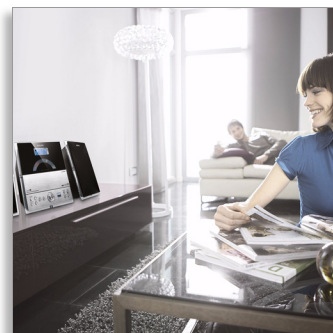

MCM279

## Rich sound in compact design

with USB Direct and CD-ripping

Great sound in a compact, elegant design! The classic MCM279 delivers dynamic sound performance and the essential functionalities that will let you enjoy music just the way you like it.

### Unlimited listening pleasure

- Rip your favorite CDs to MP3
- Enjoy MP3/WMA music directly from your portable USB drives
- Play MP3/WMA-CD, CD and CD-RW

### Enrich your sound experience

- Digital Sound Control for optimized music style settings
- Dynamic Bass Boost for deep and dramatic sound
- Convenient line-in jack for portable music playback
- 1200W PMPO / 60W RMS total power

### Start the day your way

- Wake up and sleep timer functions
- Digital tuning with 40 preset stations for extra convenience

### Watch your disc spin

- Front motorized CD door with viewing window
- Compact design that fits anywhere

# PHILIPS

# Highlights

## Rip your favorite CDs to MP3

Simply plug in your USB mass storage device to the USB port on Philips audio system and start recording your favorite music from CDs to your USB device or MP3 player - with one touch and no computer needed. So you can create your own MP3 files via direct MP3 digital recording.

## USB Direct for MP3/WMA music

Simply plug in your device to the USB port on your Philips Hi-Fi system. Your digital music will be played directly from the device. Now

you can share your favorite moments with family and friends.

## Digital Sound Control

Digital Sound Control offers you a choice of pre-set Jazz, Rock, Pop and Classic controls you can use to optimise the frequency ranges for different musical styles. Each mode uses graphic equalizing technology to automatically adjust the sound balance and enhance the most important sound frequencies in your chosen music style. Ultimately, Digital Sound Control makes it easy for you get the most out of your

music by precisely adjusting the sound balance to match the type of music you are playing.

## Dynamic Bass Boost

Dynamic Bass Boost maximizes your music enjoyment by emphasizing the bass content of the music throughout the range of volume settings - from low to high – at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.



# Specifications

## Sound

- Output power (RMS): 2 x 30W
- Output Power: 1200 watts PMPO
- Sound Enhancement: Digital Sound Control 4 modes, Dynamic Bass Boost

## Loudspeakers

- Main Speaker: 2 way, Bass Reflex Speaker System, 2" tweeter, 4" woofer

## Audio Playback

- Playback Media: CD, CD-R, CD-RW, MP3-CD, WMA-CD
- Disc Playback Modes: Repeat/one/all/program, Shuffle Play, 20-Track Programmable
- Loader Type: Front, Motorised
- ID3-tag support
- USB Direct Modes: Fast Backward/Fast Forward, Play/Pause, Previous/Next, Program Play, Repeat, Shuffle, Stop

## Tuner/Reception/Transmission

- Tuner Bands: FM Stereo, MW
- Auto digital tuning
- Station presets: 40
- Tuner Enhancements: Auto Store

## Connectivity

- Aux in: 3.5 mm
- Headphone: 3.5 mm
- Other connections: FM Antenna, MW Antenna
- USB: USB host

## Convenience

- Alarms: CD Alarm, Radio Alarm, Sleep timer, USB alarm
- Clock: On main display
- Display Type: LCD
- Backlight color: Blue

## Accessories

- Included accessories: AC Power Cord, FM/MW Antenna, Stand, World Wide Warranty leaflet
- Remote control: 40-key with Lithium batteries
- AC/DC Adaptor: Switching power supply
- Quick start guide: Spanish, Brazilian Portuguese
- User Manual: Spanish, Brazilian Portuguese

## Dimensions

- Set dimensions (W x H x D): 211 x 250 x 160 mm
- Main speaker dimensions (W x H x D): 158 x 250 x 185 mm
- Packaging dimensions (W x H x D): 378 x 330 x 310 mm
- Weight incl. Packaging: 5.8 kg

## Audio Recording

- Recording Media: USB device
- USB recording modes: Instant record, Programmed tracks, Single disc, Single track
- USB recording sources: CD

## Power

- Power supply: 100-240VAC, 50/60Hz



Issue date 2014-02-05

Version: 2.0.3

12 NC: 8670 000 36185  
EAN: 87 12581 38814 0

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Avoid extensive use of the set in a volume higher than 85 decibel  
because this may damage your hearing.