



Slim MP3-CD player

with charging cradle and wearable remote

Power up the slim and chic eXp3463 MP3-CD player that comes with its own charging cradle. Enjoy up to 45 hours of non-stop MP3 and WMA music and view artist and song information via its LCD remote control for pure music enjoyment.

Your complete MP3-CD experience

- Enjoy MP3 and WMA playback
- Plays CD, CD-R and CD-RW discs
- Savour up to 45 hours' music playback

Jogproof

- 200 second Magic ESP™

Designed for urban action


- Wearable backlight LCD remote control with ID3 Tag
- Slim portable CD player with round and compact footprint
- Compact and convenient charging cradle

Enhanced bass performance

- Digital Dynamic Bass Boost for optimised bass at any volume

Philips
Portable MP3-CD Player

EXP3463

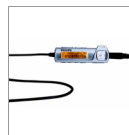

PHILIPS
sense and simplicity

Specifications

Sound

- **D/A converter:** 1-bit
- **Frequency response:** 20 - 20 000 Hz
- **Signal to noise ratio:** > 85dB
- **Sound Enhancement:** Digital Dynamic Bass Boost
- **Output Power:** 2 x 5mW RMS
- **Volume Control:** digital
- **Acoustic Feedback**

Audio Playback

- **Playback Media:** MP3-CD, WMA, CD, CD-R, CD-RW
- **Disc Playback Modes:** 50-Track Programmable, Fast Forward/Backward, Hold, Next/Previous Album Search, Next/Previous Track Search, Repeat one/album/all, Resume Playback from stop, Shuffle album/all
- **Magic ESP (MP3-CD):** 100 seconds
- **Electronic Skip Protection(CD):** 45 seconds
- **File systems supported:** ISO-9660, Joliet, UDF
- **ID3-tag support**
- **MP3 bit rates:** 32 - 320 kbps
- **WMA bit rates:** 32 - 192 kbps

Connectivity

- **DC in:** 4.0 mm, 4.5V, centre +
- **Headphone:** 3.5 mm
- **Line-out:** 3.5 mm

Convenience

- **Remote control:** Wearable LCD remote control
- **Display Type:** LCD
- **Backlight**
- **Backlight colour:** Amber
- **Cradle/ docking station**

- **Charging indication**
- **Indications:** album name, album number, artis name, battery status, Cd functions, DBB, ESP, file name, sound titles, time, track

Accessories

- **Remote control:** AY3802(LCD RC)
- **AC/DC Adaptor:** AY3162(400mA)
- **Cradle:** AY4105 charging cradle
- **Headphones:** SBC HE250
- **Batteries:** AY3363(Ni-MH rechargeable)
- **Included Accessories:** User Manual, AA battery door

Dimensions

- **Housing:** Heat Resistant Body
- **Master carton dimensions:** 377 x 248 x 275 mm
- **Master carton weight:** 3.8 kg
- **Master carton quantity:** 3
- **Packaging dimensions (W x H x D):** 235 x 250 x 120 mm
- **Packaging type:** D-box
- **Product dimensions (WxDxH):** 137X137X21mm
- **Product weight:** 0.18 kg

Power

- **Battery playing time (WMA):** 45h(2xAA alkaline batteries)
- **Battery Playing Time MP3-CD:** 45h(2xAA alkaline batteries)
- **Battery Playing Time CD:** 30h(2xAA alkaline batteries)
- **Battery type:** AA, AAA, LR03, LR6, UM3, UM4
- **Rechargeable**

Product highlights

200 second Magic ESP™

Magic Electronic Skip Protection™ is a convenient feature that ensures skip-free music even when your MP3-CD player is subjected to knocks and jolts while you are jogging or on the move. Devices with Magic Electronic Skip Protection™ have an intelligent electronic buffer that can store different digital music formats such as MP3, WMA and CDDA. The buffer adjusts both its contents and laser spin speeds automatically to guarantee uninterrupted music listening.

Charging Cradle

Enjoy the ease and convenience of recharging your CD player simply by docking it in this compact and portable charging cradle. It fits on any desktop and can be stationed anywhere. When you connect the AC/DC adaptor to the charging cradle, the LED indicator will turn red to show that your CD player is charging. Once the rechargeable batteries in the player are fully charged, the LED indicator will turn green. Now your player is fully powered-up so you can continue enjoying your music.

Digital Dynamic Bass Boost

Digital Dynamic Bass Boost is an intelligent bass booster that delivers maximum bass enhancement at high volumes without sound distortion and at low volumes without compromising on bottom-end bass frequencies. Technologically advanced electronics constantly monitor volume and bass levels, precisely calibrating both to prevent sound distortion, thus producing optimized bass. Digital Dynamic Bass Boost enables the enjoyment of superb bass performance - regardless of the chosen volume level.



Issue date 2007-12-07

Version: 6.0

12 NC: 9073 101 01618
EAN: 87 10895 85303 3

© 2007 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com

* Battery life varies by use and settings.
* Windows Media and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.
* Based on 64 kbps WMA encoding.