

Philips
Soundbar speaker

2.1 CH wireless slim subwoofer

Bluetooth® aptX, AAC and NFC
1 HDMI in and HDMI out ARC
320 W

HTL5145B



Powerful sound for any TV

with slim wireless subwoofer

The Philips HTL5145B soundbar combines a wafer-thin profile with quality sound and thundering bass. Its ultra-slim subwoofer can be placed anywhere to maximise impact.

Designed to enhance your living space

- Minimalistic chic design to suit a modern decor
- Slim wireless subwoofer for vertical and horizontal placement

Connect and enjoy all your entertainment

- Bluetooth® (aptX® and AAC) for wireless music streaming
- One-Touch with NFC-enabled smartphones for Bluetooth pairing
- HDMI ARC to access all the sound from your TV
- Connect to one HDMI in for great picture and sound quality

Richer sound for watching TV and movies

- Virtual Surround Sound for a realistic movie experience
- Dual reflex system for impactful bass
- Dolby Digital and DTS for great surround sound
- Mylar material tweeter for high definition sound
- Powerful 320-W sound output

PHILIPS

Soundbar speaker

2.1 CH wireless slim subwoofer Bluetooth® aptX, AAC and NFC, 1 HDMI in and HDMI out ARC, 320 W

HTL5145B/12


Highlights

Dual reflex system



Most subwoofers on the market use a single bass port and a single driver, but for bigger and clearer bass, two bass ports are needed. The larger volume of open space created by two bass ports increases airflow, which reduces distortion while simultaneously allowing more bass to be created. With two 6.5" drivers and two bass ports, the dual bass reflex system far surpasses the bass created by a normal subwoofer.

Bluetooth® (aptX® and AAC)

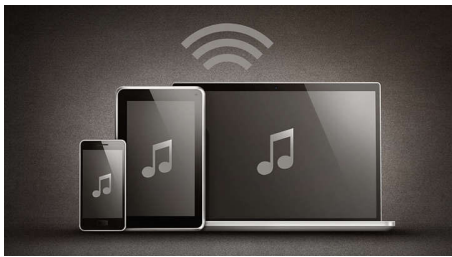

Bluetooth® (aptX® and AAC) for wireless music streaming

NFC technology



Pair Bluetooth devices easily with one-touch NFC (Near Field Communications) technology. Just tap the NFC-enabled

smartphone or tablet on the NFC area of a speaker to turn the speaker on, start Bluetooth pairing and begin streaming music.


HDMI ARC

HDMI ARC to access all the sound from your TV

One HDMI in available


Enjoy larger-than-life 3D playback and crystal-clear 5.1 or 7.1 audio by simply plugging our player's audio one HDMI in output into the connection on your non-3D AV receiver.

Wireless subwoofer

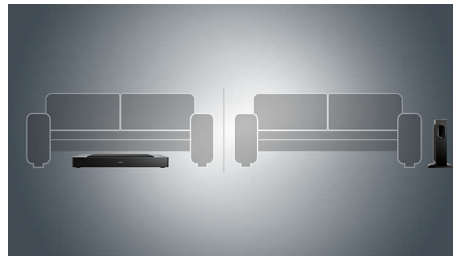

Slim wireless subwoofer for vertical and horizontal placement

Virtual Surround Sound

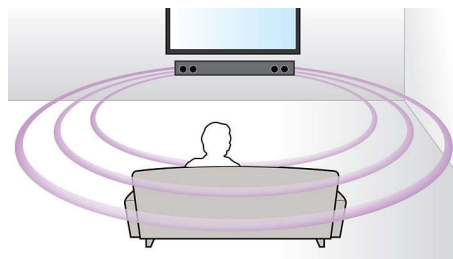

Philips Virtual Surround Sound produces rich and immersive surround sound from a less than five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. Any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase

extra speakers, wires or speaker stands to appreciate room-filling sound.


Mylar tweeter

The unique Mylar material used in the tweeters ensures incredible sound definition. The full range of high frequencies is perfectly reproduced, so music comes to life and films sound like they were meant to. An integral part of the 2-way design, the tweeter improves high frequencies resulting in cleaner, more spacious and more accurate sound in tandem with the woofer. Improved clarity means you can identify all the different elements in the music. Listen to the individual instruments, hear the vocals more clearly, enjoy your music in refreshing detail.

Powerful 320-W sound output

Two units, each one with 4 woofers and 2 tweeters inside, keep sound perfectly balanced. As a whole, they output 320 W of sound, which is matched by powerful bass from a 17-l subwoofer box.

Dolby Digital and DTS

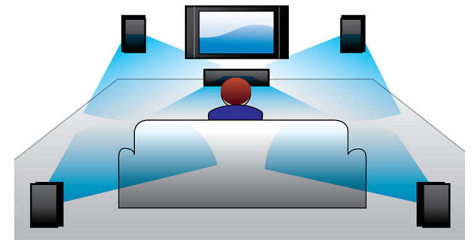

Go digital and get the most out of your music and movies. Even stereo music sounds great because Dolby Digital and DTS Digital Surround enhance digital music and videos, pumping it up so you get truly immersive surround sound out of your home cinema speaker.

Minimalistic chic design

Minimalistic chic design to suit a modern decor

Soundbar speaker

2.1 CH wireless slim subwoofer Bluetooth® aptX, AAC and NFC, 1 HDMI in and HDMI out ARC, 320 W

HTL5145B/12

Specifications

Sound

- Sound Enhancement: Treble and Bass Control, Audio sync, Auto Volume Leveller, Night Mode, Virtual Surround Sound
- Sound System: DTS Digital Surround, Dolby Digital
- Subwoofer output power: 220 W
- Speaker output power: 100 W
- Total Power RMS @ 10% THD: 320 W

Loudspeakers

- Subwoofer driver: 2 X 6.5" woofers
- Subwoofer type: Wireless subwoofer, Bass reflex system
- Drivers per Soundbar: 2 X 1" Mylar tweeters, 4 racetrack woofers

Connectivity

- Integrated Connections: NFC, Bluetooth APT-X
- Rear Connections: Digital optical in, HDMI 1.4 output (ARC), HDMI IN 1, Audio-in 3.5 mm jack, USB
- Wireless connection: Bluetooth APT-X and AAC, Wireless subwoofer

Outer Carton

- EAN: 48 95185 60274 5
- Length: 80 cm
- Number of consumer packages: 1
- Width: 40 cm
- Gross weight: 13.8 kg
- Height: 26.4 cm
- Net weight: 10.55 kg
- Tare weight: 3.25 kg

Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, Remote Control-

Passthrough

- HDMI Features: Audio Return Channel (ARC), Content Type

Power

- Power supply: 110-240V, 50 Hz
- Standby power consumption: <0.5 W

Packaging dimensions

- Height: 26.4 cm
- Packaging type: Carton
- Type of shelf placement: Laying
- Width: 80 cm
- Depth: 40 cm
- Number of products included: 1
- EAN: 48 95185 60274 5
- Gross weight: 13.8 kg
- Net weight: 10.55 kg
- Tare weight: 3.25 kg

Product dimensions

- Height: 4.9 cm
- Width: 104.5 cm
- Depth: 7.2 cm
- Weight: 2.05 kg

Accessories

- Included accessories: 2 x AAA Batteries, Power cord, Remote Control, Safety and Legal Leaflet, Trademarks Sheet, User Manual, World Wide Warranty leaflet

Design

- Wall mountable

Dimensions

- Main Unit (W x H x D): 1045.2 X 48.9 X 66.5 mm
- Subwoofer (W x H x D): 730 X 83 X 330 mm



Issue date 2024-04-13

Version: 5.3.4

EAN: 48 95185 60274 5

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com