



Philips  
Original radio mini

**FM/MW**

Audio-in  
3W

**OR2000B**

## Set the trend with the Original Radio mini

This Philips Original radio mini brings back the fun in radio. Delightfully retro, it offers Bass Reflex Speaker System's powerful bass, and a large analog tuning knob that is lit to help you get to your favorite stations with perfect ease.

### **High fidelity radio experience**

- Bass Reflex Speaker System delivers a powerful, deeper bass
- FM/MW analogue radio tuning

### **Easy to use**

- Large analogue tuning knob for easy tuning
- Illuminated tuning pointer for easy viewing and tuning
- Audio-in for easy portable music playback

### **Contemporary retro design**

- Contemporary reinterpretation of the iconic Philetta design

# PHILIPS


# Highlights

## Bass Reflex Speaker System



Bass Reflex Speaker System delivers a deep bass experience from a compact loudspeaker box system. It differs from a conventional loudspeaker box system in the addition of a bass pipe that is acoustically aligned to the woofer to optimize the low frequency roll-off of the system. The result is deeper controlled bass and lower distortion. The system works by resonating the air mass in the bass pipe to vibrate like a conventional woofer. Combined with the response of the woofer, the system extends the overall low frequency sounds to create a whole new dimension of deep bass.

## FM/MW analogue tuning

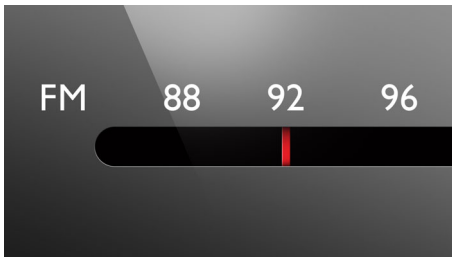

FM/MW analogue radio tuning



## Large analogue tuning knob for Large analogue tuning knob for easy tuning

## Illuminated tuning pointer

Illuminated tuning pointer for easy viewing and tuning

## AUDIO-IN (3.5mm)



Make one easy connection and enjoy all your music from portable devices and computers. Simply plug your device to the AUDIO-IN (3.5 mm) port on your Philips set. With computers, the connection is typically made from the headset output. Once linked, you can enjoy your entire music collection directly, on a set of superior speakers. Philips simply delivers better sound.

## Iconic Philetta design

Inspired by 1955 Original Radio - This original radio mini carries forward the iconic elements of the legendary 1955 Philips radio, also known as Philetta "BF 102 U". At the time this compact radio wowed its audiences with simplicity design, big sound and crystal clear reception. Philips radio heritage dates back to 1927. Over the decades many models have become renowned radio icons and collectors' items.

# Specifications

## Tuner/Reception/Transmission

- Analogue tuning
- Tuner bands: FM, MW
- Frequency range [FM]: 87.5 - 108 MHz
- Frequency range [MW]: 531 - 1,602 kHz

## Sound

- Sound System: Mono
- Volume control: rotary (digital)

## Loudspeakers

- Speaker types: bass reflex speaker system
- Built-in speakers: 1

## Connectivity

- Audio in (3.5mm)

## Power

- Power type: AC Input
- Power supply: 220-240V, 50Hz

## Dimensions

- Packaging dimensions (WxDxH): 336 x 158 x 183 mm
- Product dimensions (WxDxH): 245 x 123 x 122 mm
- Product weight: 1.33 kg

## Accessories

- Quick start guide
- Warranty: Warranty leaflet



Issue date 2014-10-10

Version: 1.0.5

12 NC: 8670 001 20764  
EAN: 48 95185 60449 7

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)