




Philips  
Portable MP3-CD Player

EXP2301

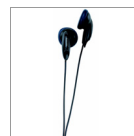

## Enjoy MP3 Music!

For the fun and only you! Enjoy 10 hours of MP3-CD playback on the easy-to-use eXp2301 with no interruption thanks to 100-second Magic ESP™. Unique 4-Mode Equalizer lets you enjoy your favorite music styles in optimum sound.

### **Play your CDs and MP3-CDs**

- Enjoy over 10 hours of music on one MP3-CD
- Play CD, CD-R and CD-RW discs

### **Jogproof**

- 100-second Magic ESP™

### **Enhanced bass performance**

- Equalizer to suit your music preferences

# PHILIPS

# Specifications

## Sound

- Acoustic Feedback
- D/A converter: 1-bit
- Frequency response: 20 - 20 000 Hz
- Signal to noise ratio: > 85dB
- Sound Enhancement: Equalizer
- Output Power: 2 x 4mW RMS
- Volume Control: Analogue Volume Control

## Audio Playback

- Playback Media: MP3-CD, CD, CD-R, CD-RW
- Disc Playback Modes: 50-Track Programmable, Hold, Next/Previous Album Search, Next/Previous Track Search, Repeat one/album/all, Shuffle album/all
- Electronic Skip Protection(CD): 40 seconds
- File systems supported: ISO-9660, Joliet
- Magic ESP (MP3-CD): 100 seconds
- MP3 bit rates: 32 - 320 kbps

## Connectivity

- DC in: 4.0 mm, 4.5V, centre +
- Headphone: 3.5 mm
- Line-out: 3,5 mm



## Convenience

- Display Type: LCD
- Indications: album number, battery status, Cd functions, DBB, ESP, time, track

## Accessories

- AC/DC Adaptor: AY3162(400mA)
- Headphones: SBC HE035
- Included accessories: User Manual

## Dimensions

- Housing: Heat Resistant Body
- Master carton dimensions: 154 x 271 x 352 mm
- Master carton weight: 4.5 kg
- Master carton quantity: 6
- Packaging dimensions (W x H x D): 245 x 55 x 141 mm
- Packaging type: D-box
- Product dimensions (WxDxH): 130x138x28mm
- Product weight: 0.25 kg

## Power

- Battery Playing Time MP3-CD: 28
- Battery Playing Time CD: 18
- Battery type: AA, LR6, UM3

# Highlights

## Equalizer

GoGear Players with Equalizer, utilize technology to automatically set the optimum sound frequency balance for a chosen music style. Whether it is Jazz, Rock or Pop that you are listening to, using the Equalizer preset setting allows you to enjoy the optimum sound for that music style.



Issue date 2014-02-05

Version: 5.0.7

12 NC: 9073 101 01625  
EAN: 87 10895 85426 9

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)