

Philips
Home cinema speakers

HDMI 1080p

HTS5110



Obsessed with sound

Great surround sound from super-slim SoundBar

Enjoy clear sound for all the TV dialogues and details of music and movies from super slim speakers, without the clutter! With 300W of sound power, HDMI 1080p upscaling and a wireless subwoofer, make your movie night a special one!

Great listening experience

- Super slim speakers for realistic surround sound
- Dolby Virtual Speaker for realistic surround sound
- 300W RMS power delivers great sound for movies and music

Designed to enhance your living space

- Super slim SoundBar design with flat panel speakers
- Wireless subwoofer for incredible bass without the wires
- SoundBar design best fitting a 81 cm (32") flat TV or larger
- Touch panel for intuitive playback and volume control
- Flexible placement on the wall, tabletop or stand

Connect and enjoy all your entertainment

- MP3 Link plays music from portable media players
- Easily connect your TV via a single HDMI cable
- Sharper high definition pictures with HDMI 1080p
- Hi-Speed USB 2.0 Link plays music from USB flash drives

PHILIPS
sense and simplicity


Highlights

Super slim speakers



Super Slim Speakers deliver an uncompromised surround sound experience in a slim and elegant design. Silk-soft dome tweeters incorporating a powerful Neodymium magnet system perfectly capture the mid and high frequencies without any loss of details from movie or music sources. The result is superbly clear, true-to-life sound, just like the artiste intended.

Dolby Virtual Speaker

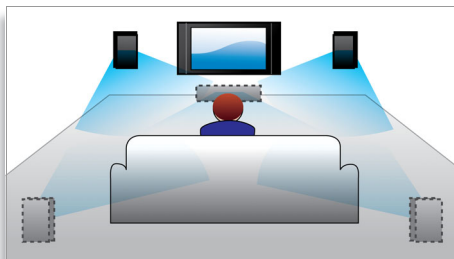

Dolby Virtual Speaker is a sophisticated audio virtualization technology that produces rich and immersive surround sound from a two-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. DVD playback is enhanced by expanding the 2-channel environment. When combined with Dolby Pro Logic II processing, any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

300W RMS power



300W RMS power delivers great sound for movies and music

Super slim SoundBar design




Super slim SoundBar design with flat panel speakers

Wireless subwoofer




Wireless subwoofer for incredible bass without the wires

SoundBar design

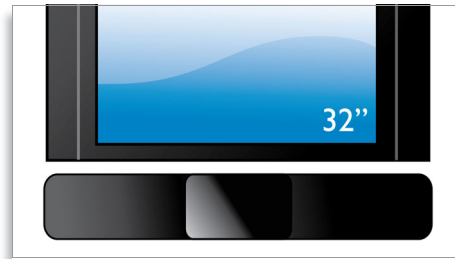


The SoundBar home cinema speaker lends an air of sophistication and grace to any living room. Though it is designed to fit a flat TV with a 81 cm (32") screen or larger, it will also sit under any other flat TV like a companion - matching all your interior and your lifestyle.

Touch panel for playback

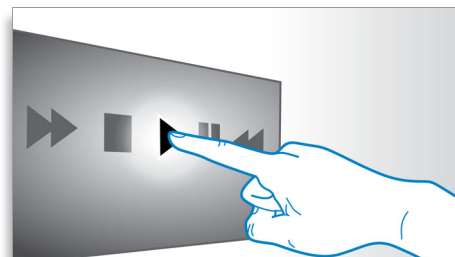

Intuitive touch panel controls allows you to control the volume as well as other playback options by simply pressing the touch sensitive controls on the front panel.

Flexible placement

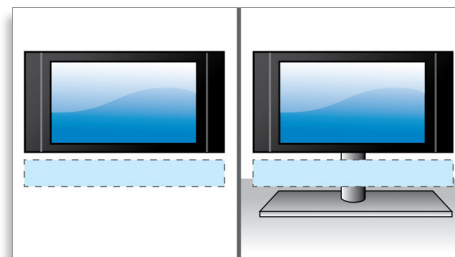

Enjoy the versatility of this home theater system that allows you to place it where you will. Whether on a TV stand, on a table or mounted on a wall, the product looks sensational and functions without compromise. For once, you get to control how your home looks without giving up an incredible home theater experience.

Specifications

Picture/Display

- Picture enhancement: High Def (720p, 1080i, 1080p)

Sound

- Sound System: Dolby Digital, DTS, Dolby Prologic II, Stereo, DTS 96/24
- Sound Enhancement: Treble and Bass Control, Night Mode
- Equalizer settings: Action, Rock, Concert, Classic, Drama, Jazz, Sports
- Output power (RMS): 2 x 70W + 160W

Loudspeakers

- Loudspeaker types: Integrated with main unit
- Speaker impedance: 8 ohm
- Subwoofer type: Active
- Subwoofer driver: 1 x 6.5" Long Throw woofer
- Subwoofer impedance: 8 ohm
- Subwoofer freq range: 35 - 200 Hz

Audio Playback

- Compression format: MP3, WMA
- Playback Media: USB flash drive
- MP3 bit rates: 112 kbps - 320 kbps
- WMA bit rates: 48 kbps - 192 kbps

Still Picture Playback

- Picture Compression Format: JPEG
- Playback Media: USB flash drive
- Picture Enhancement: Slideshow with music

playback, Rotate, Zoom

Tuner/Reception/Transmission

- Tuner Bands: FM

Connectivity

- Front / Side connections: USB, MP3 Line-in
- Rear Connections: AUX in, Composite video (CVBS) output, Digital coaxial in, FM Antenna, HDMI 1.4 output (ARC)

Dimensions

- Set dimensions (W x H x D):
790.6 x 100.3 x 50 mm
- Subwoofer dimensions (W x H x D):
182 x 365 x 306 mm

Accessories

- Included accessories: Quick start guide, User Manual, Remote Control, Batteries for remote control, HDMI cable, FM antenna, Power cord, World Wide Warranty leaflet
- Compatible accessories: STS1000 Wall mount bracket, STS1100 Table top stand, STS1300 Floor stand

Power

- Power supply: 120/230VAC, 50/60Hz
- Standby power consumption: <1 W
- Power consumption: 35 W



Issue date 2013-02-12

Version: 11.3.7

12 NC: 8670 000 60914
EAN: 87 12581 53046 4

© 2013 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

www.philips.com