

Philips
DVD player

DVP3888K



Get sharper, clearer pictures

with HDMI 1080p upscaling

Your dream player with flawless, true-to-life picture quality and the ability to play virtually any disc! The Philips DVD player delivers your movies and music entertainment experience.

Bring audio and video to life

- CinemaPlus for better, sharper and clearer images
- HDMI 1080p upscales to high definition for sharper pictures

Play all your movies and music

- Play CD, (S)VCD, DVD, DVD+- R/RW, DivX, MP3, WMA, JPEG
- ProReader Drive for smooth playback on virtually any disc

Connect and enjoy multiple sources

- USB Media Link for media playback from USB flash drives

Enjoy enhanced karaoke

- Karaoke Record for sharing your singing talent with friends
- Karaoke Idol for interactive excitement and great fun


Easy to use

- EasyLink to control all HDMI CEC devices via a single remote
- One-touch MP3 creation directly from CDs onto USB sticks

PHILIPS

Highlights

CinemaPlus

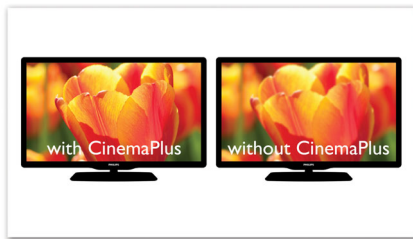

Feast your eyes on images that are razor sharp and a match for reality. An intelligent algorithm, CinemaPlus goes right down to each pixel in each frame, analyzing it before optimizing sharpness and color stability. The results are obvious - you get to see more details, pictures become crystal clear and everything looks superbly natural. Movie nights will never be the same again.

HDMI 1080p




HDMI 1080p upscaling delivers images that are crystal clear. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multichannel audio, without conversions to analog - delivering perfect picture and sound quality, completely free from noise.

ProReader Drive



ProReader Drive lets you enjoy your movies and videos worry-free. Even when old discs get smudgy or scratched, you can rest assured that they will play right through from start to end - without any sign that they have been damaged. Using state-of-the-art technology, ProReader Drive converts weak analog signals into robust digital ones, extracting information that allows less-than-perfect discs to play smoothly through. Together with its ability to read virtually any video format, ProReader Drive gives you the unbeatable assurance that whatever you pop in will most definitely play.

USB Media Link

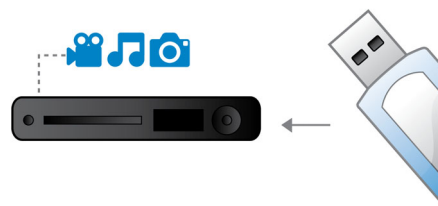

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. With USB Media Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

Multimedia DivX

Play CD, (S)VCD, DVD, DVD+- R/RW, DivX, MP3, WMA, JPEG

EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

Karaoke Record

Karaoke Record is an advanced feature that records your singing performance and converts the file to MP3 format for playback on your portable media player. Simply plug your thumb drive or portable media player connected to a USB cable into the Philips DVD players USB port. Your singing will be encoded in a compressed format, resulting in a space-saving MP3 file. Enjoy your own singing while on-the-go or share with it your friends.

Karaoke Idol

Add more fun and excitement to your karaoke sessions. Karaoke Idol allows two or more singers to compete against each other for the crown. Singers take turns singing and the Philips karaoke scoring system analyzes how well each singer performs. After each performance, the system displays a humorous cartoon showing what it thought of the singer's ability as well as a score. The singer with the highest score at the end of the game wins the title of Karaoke Idol!



Specifications

Product dimensions

- Product dimensions (W x H x D): 31 x 4,05 x 24,4 cm
- Weight: 1,123 kg

Packaging dimensions

- Packaging dimensions (W x H x D): 40 x 32 x 8 cm
- Nett weight: 1,49 kg
- Gross weight: 1,86 kg
- Tare weight: 0,37 kg
- EAN: 87 12581 64490 1
- Number of products included: 1
- Packaging type: Dummy
- Type of shelf placement: Dummy

Outer Carton

- Outer carton (L x W x H): 40 x 32 x 8 cm
- Nett weight: 1,49 kg
- Gross weight: 1,86 kg
- Tare weight: 0,37 kg
- EAN: 87 12581 64490 1
- Number of consumer packagings: 1

Picture/Display

- D/A converter: 12 bit, 108 MHz
- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive scan, Video upscaling

Sound

- D/A converter: 24 bit, 192 kHz
- Frequency response: 30-20000 Hz
- Signal to noise ratio: 90
- Distortion and Noise (1kHz): 80 dB
- Crosstalk (1kHz): 90 dB
- Dynamic Range (1kHz): 80 dB
- Sound Enhancement: Night Mode
- Sound System: Dolby Digital

Video Playback

- Compression formats: DivX Ultra, MPEG1, MPEG2, XviD
- Video disc playback system: PAL

Audio Playback

- MP3 bit rates: 32 - 320 kbps
- Compression format: MP3, WMA

Still Picture Playback

- Picture Enhancement: Flip photos, High Definition

- Resolution, Rotate, Slideshow with MP3 playback, Zoom
- Compression format: JPEG, JPEG HD

Karaoke Playback

- Advance functions: Scoring, Voice Cancellation
- Standard functions: Echo level control, Mic volume control, Pitch control

Optical Playback Media

- Playable Discs: CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, Kodak Picture Disc, SVCD, VCD

File Format

- Audio: mp3, wma
- Picture: JPEG
- Video: asf, avi, divx, mpeg, mpg, wmv

Connectivity

- Rear Connections: Analog audio Left/Right out, ComponentVideo out Progressive, Composite video (CVBS) output, Digital coaxial out, HDMI output
- Front Connections: Microphone In, USB 2.0

Convenience

- Child Protection: Child Lock, Parental Control
- On-Screen Display languages: English, Russian
- EasyLink (HDMI-CEC): One touch play, One touch standby, Remote Control-Passthrough

Power

- Power consumption: < 10 W
- Power supply: 230V, 50Hz
- Standby power consumption: < 0.5 W

Accessories

- Included accessories: AAA Battery (x1), Audio/Video cable, Microphone x 1, Power cord, Quick start guide, Remote Control, User Manual, Warranty Leaflet, World Wide Warranty leaflet

Dimensions

- Product (W x H x D): 360 x 39 x 209 mm
- Packaging (W x H x D): 400 x 80 x 282 mm

Multimedia Applications

- Multimedia connections: USB memory class device



Issue date 2015-09-03

Version: 3.1.6

12 NC: 8670 000 90331
EAN: 87 12581 64490 1

© 2015 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com