

# PHILIPS

## Earbud headphones

14.8-mm drivers/open-back

Ear bud

SHE3010PH



## Extra bass

### Soft body for comfy fit

Philips SHE3010 headphones with soft body earbuds offer a soft, comfortable fit. Available in vibrant, eye-catching colours to match your style.

#### **Design for convenience**

- Flexi-Grip design for durability

#### **Ultimate wearing comfort**

- Soft body ensures a comfortable fit
- Rubberised front caps for wearing comfort

#### **Enjoy quality sound**

- Neodymium magnets enhance bass performance and sensitivity
- 14.8-mm (0.6") speaker drivers for high quality sound

# Highlights

## Flexi-Grip

A soft, flexible part protects the cable connection from damage that otherwise would occur due to repeated bending.


## Neodymium magnets

Neodymium is the best material for producing a strong magnetic field for greater sensitivity in a voice coil, better bass response and higher overall sound quality.

## Soft body

The transparent, rubberised headphone body moulds itself to the shape of the ear for comfortable listening.

## 14.8-mm (0.6") speakers

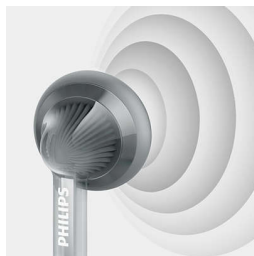

Large 14.8-mm (0.6") speaker drivers squeezed into earbud headphones deliver high quality sound.

## Rubberised front cap



A rubberised front cap provide a totally soft body for wearing comfort.

# Specifications

## Sound

Acoustic system: open  
Frequency response: 9 - 22 000 Hz  
Diaphragm: PET  
Magnet type: Neodymium  
Type: Dynamic  
Voice coil: copper  
Speaker diameter: 14.8 mm  
Sensitivity: 107 dB  
Maximum power input: 25 mW  
Impedance: 16 ohm

## Connectivity

Type of cable: copper  
Cable Connection: two-parallel, symmetric  
Finishing of connector: nickel plated  
Cable length: 1 m  
Connector: 3.5 mm

## Outer Carton

Length: 34.5 cm  
Number of consumer packages: 24  
Width: 19.7 cm  
Gross weight: 1.21708 kg  
Height: 16.3 cm  
GTIN: 1 69 25970 70197 3  
Net weight: 0.28008 kg  
Tare weight: 0.937 kg

## Inner Carton

Length: 17.9 cm  
Number of consumer packages: 3  
Width: 8 cm  
Height: 6 cm  
Net weight: 0.03501 kg  
Gross weight: 0.12351 kg  
Tare weight: 0.0885 kg  
GTIN: 2 69 25970 70197 0

## Packaging dimensions

Height: 17.5 cm  
Packaging type: Blister  
Type of shelf placement: Both  
Width: 5.2 cm  
Depth: 2.8 cm  
Number of products included: 1  
EAN: 69 25970 70197 6  
Gross weight: 0.03217 kg  
Net weight: 0.01167 kg  
Tare weight: 0.0205 kg

## Product dimensions

Height: 2.1 cm  
Width: 1.6 cm  
Depth: 1.25 cm  
Weight: 0.01167 kg

## Design

Colour: Pink

