

Always there to help you

Register your product and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)













Short User Manual

简明用户手册

**PHILIPS**

DS1600

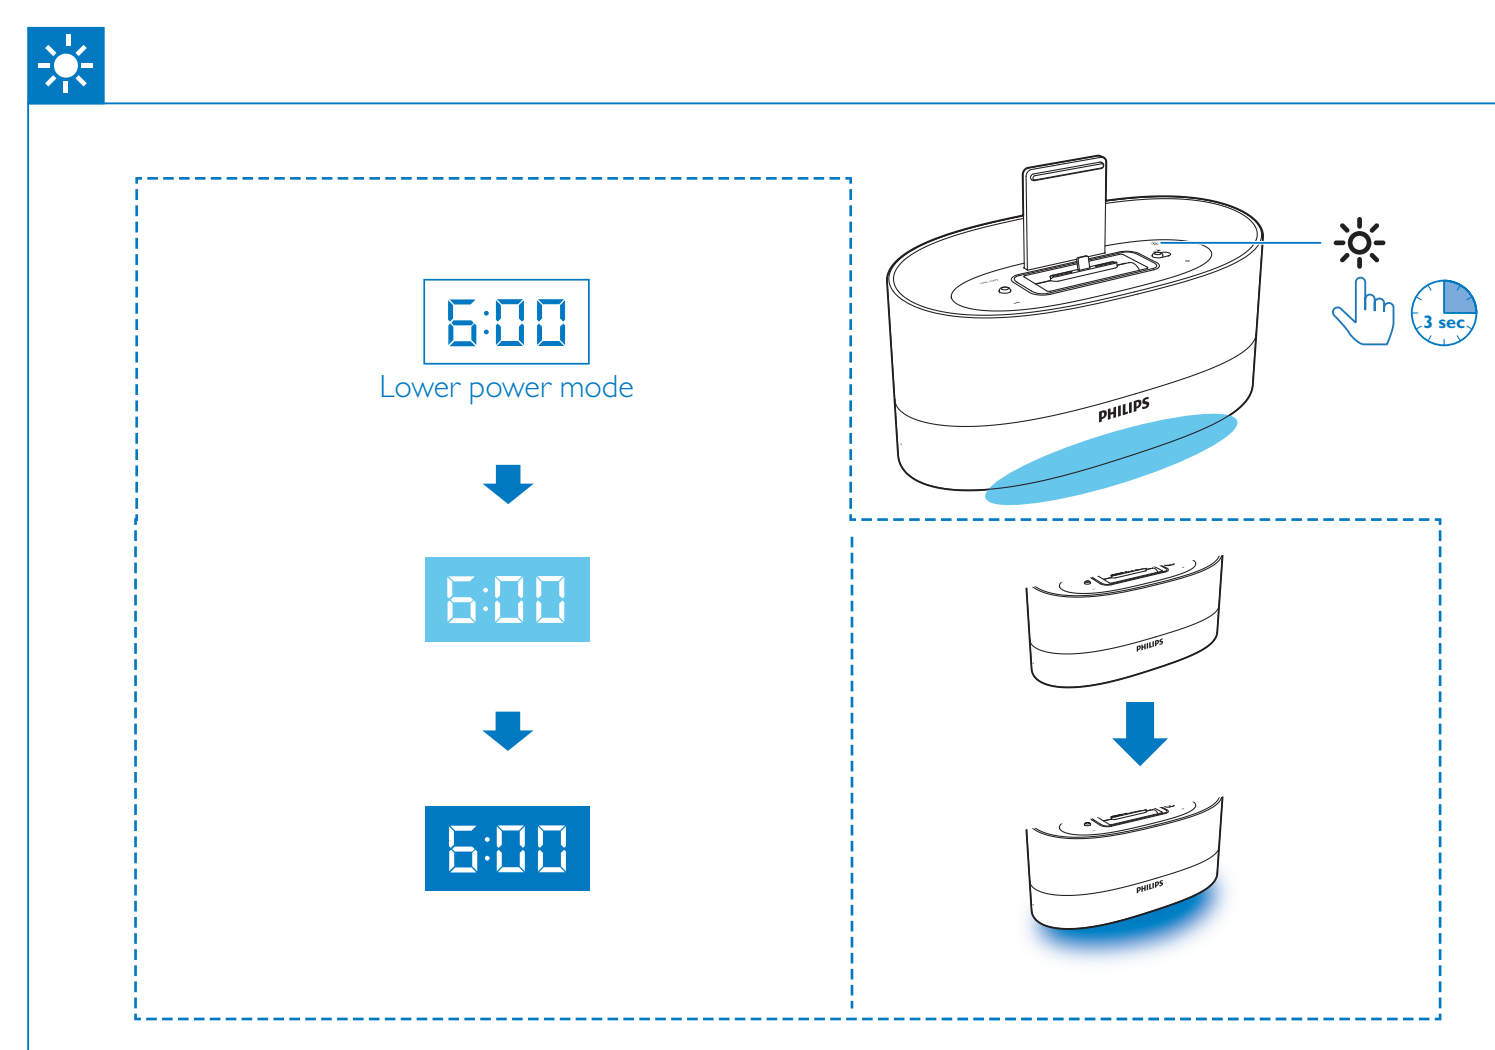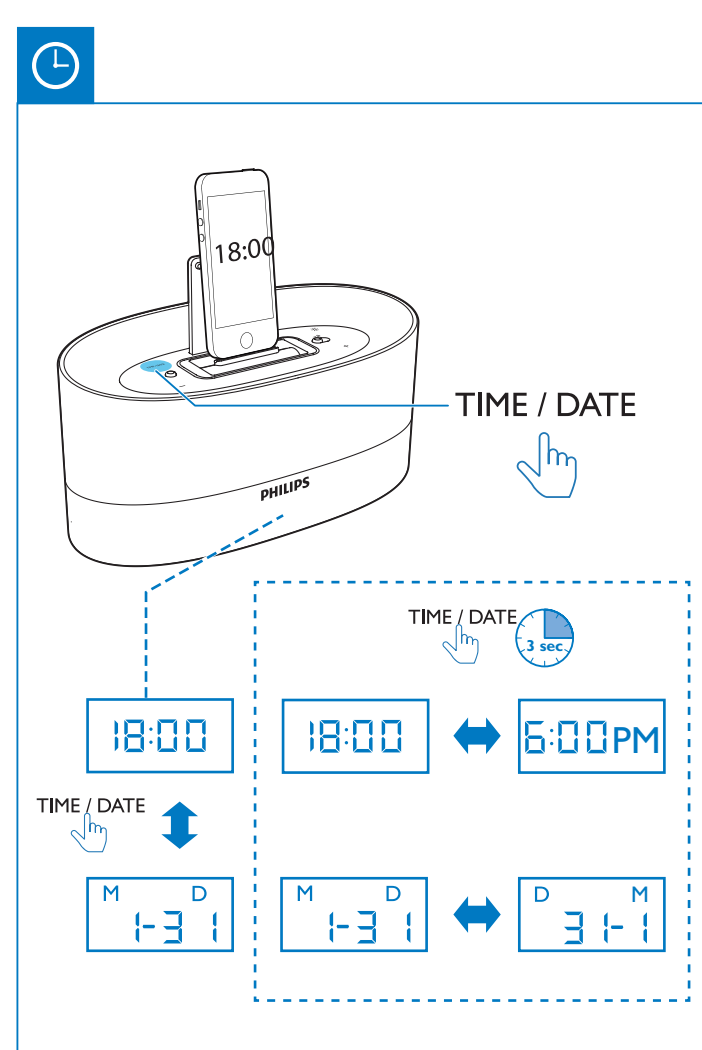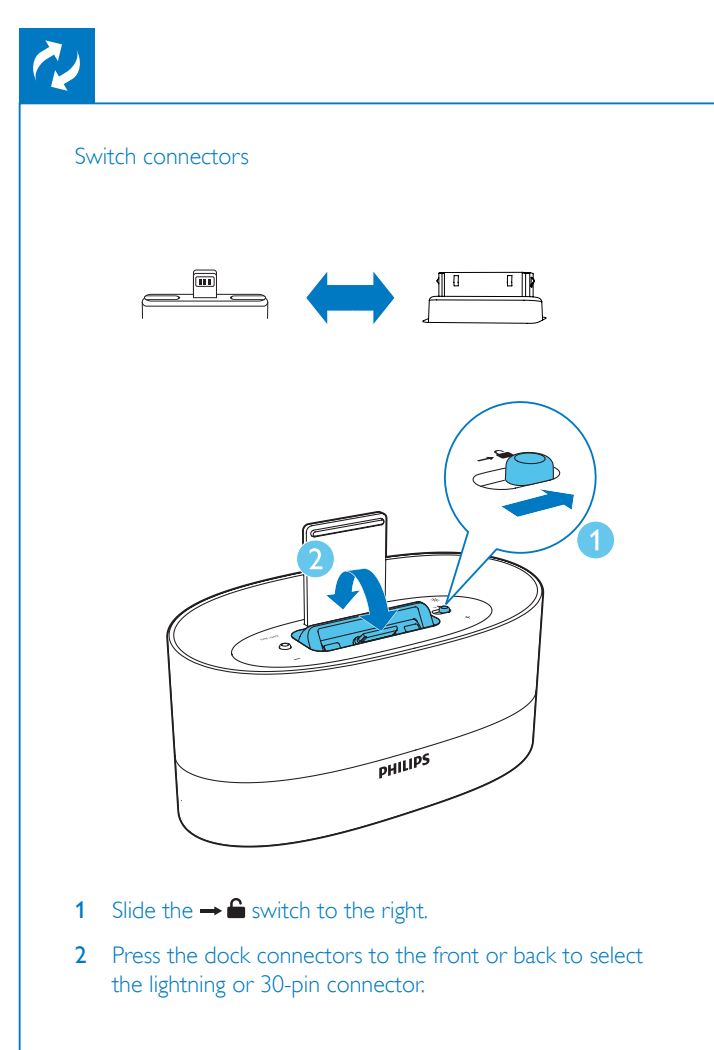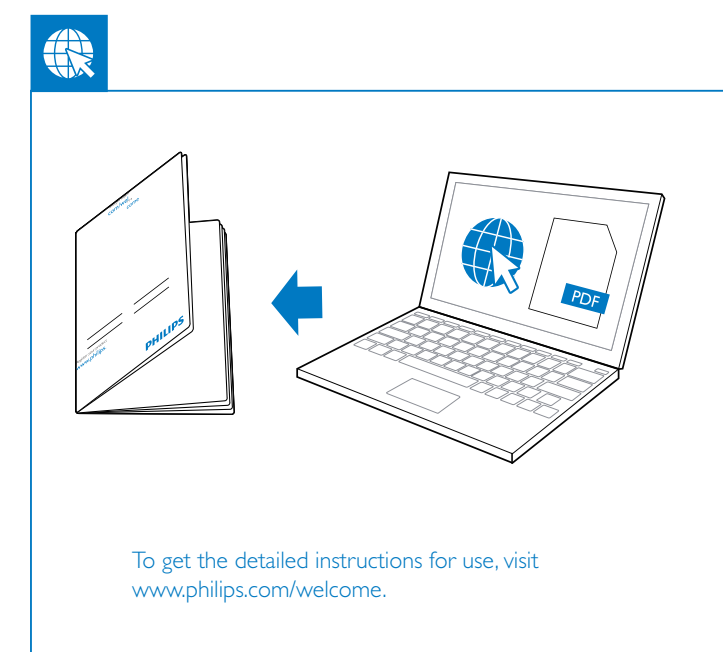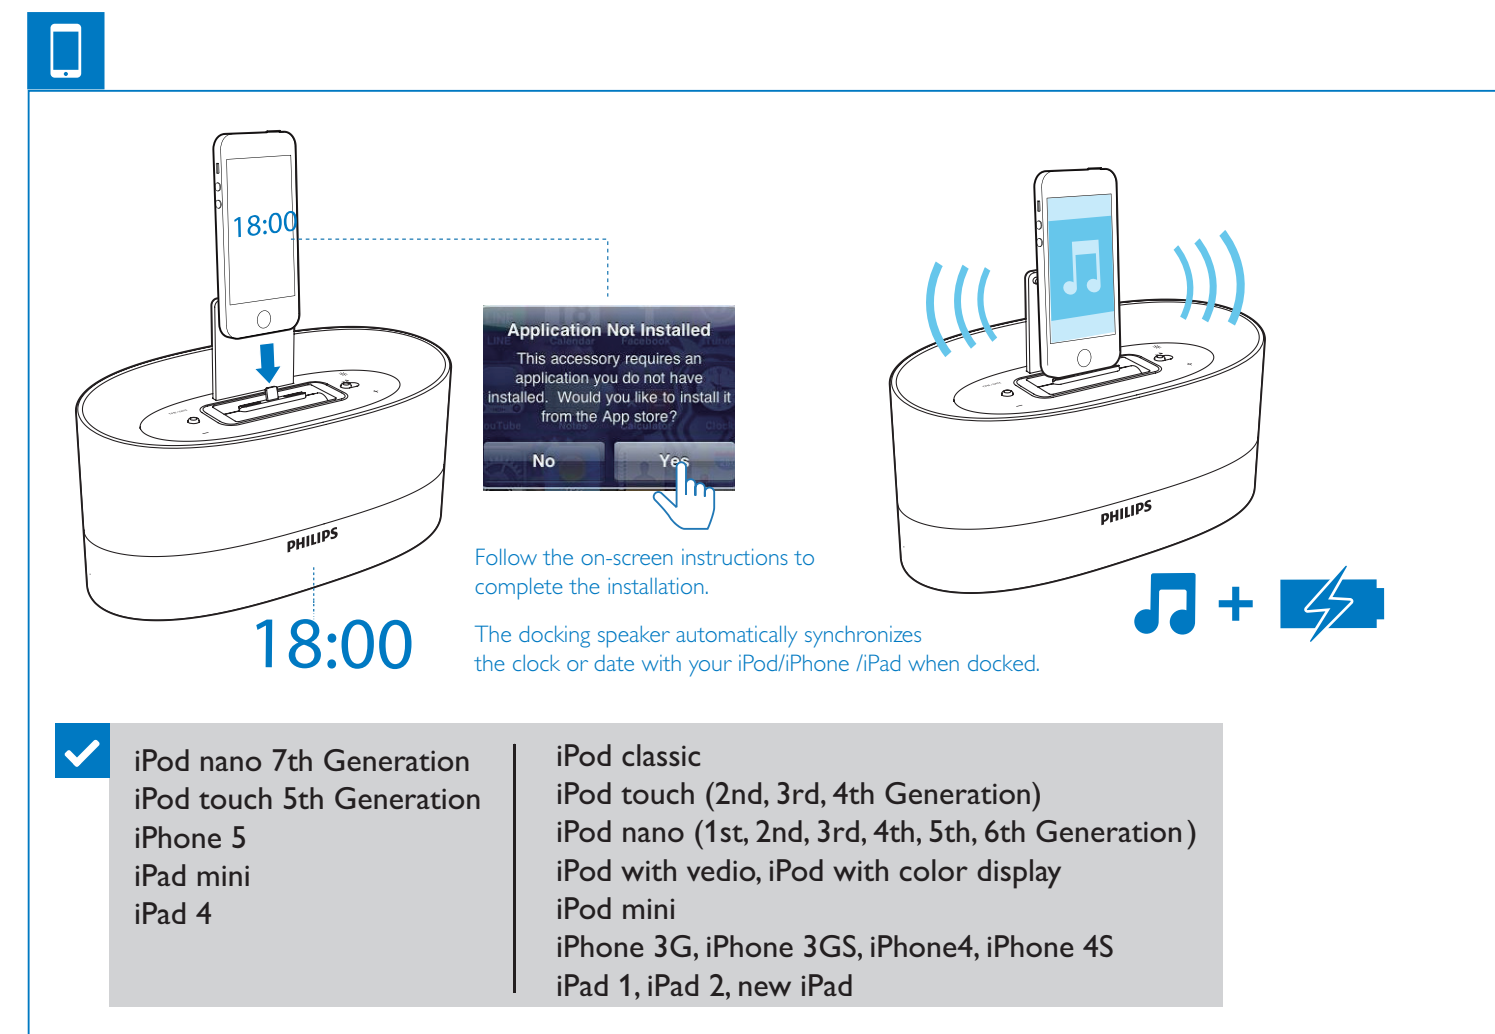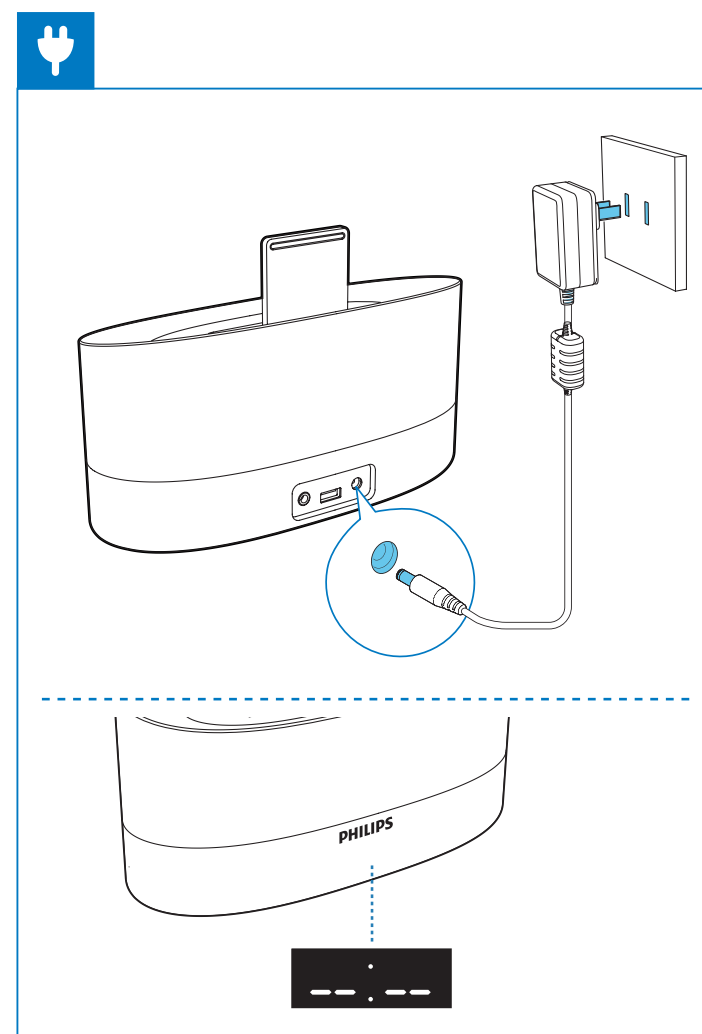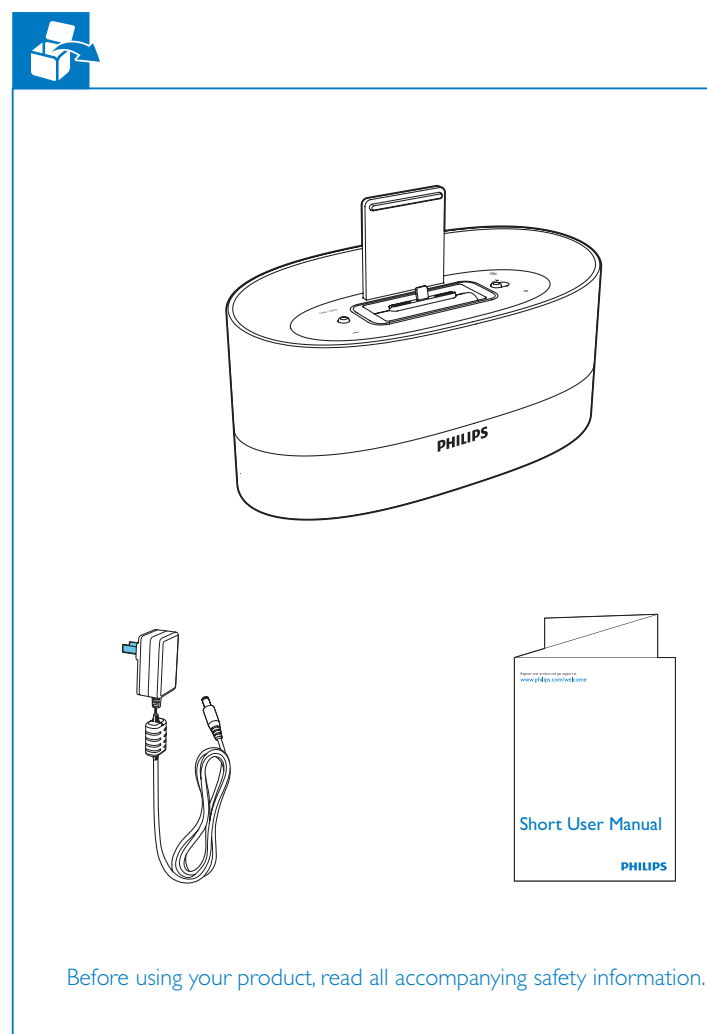

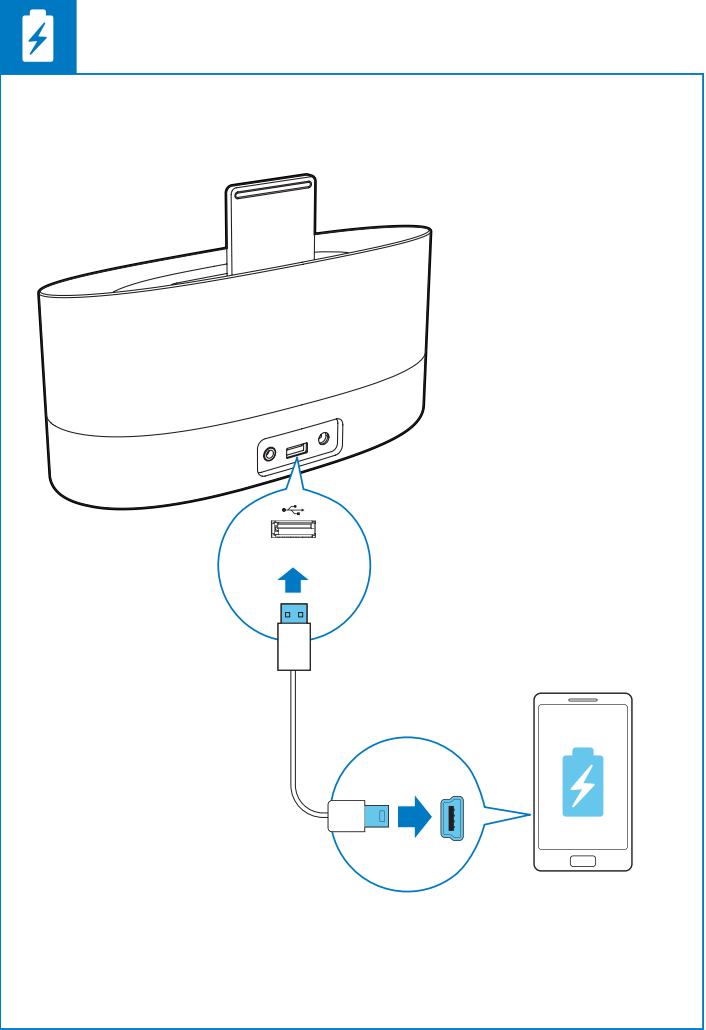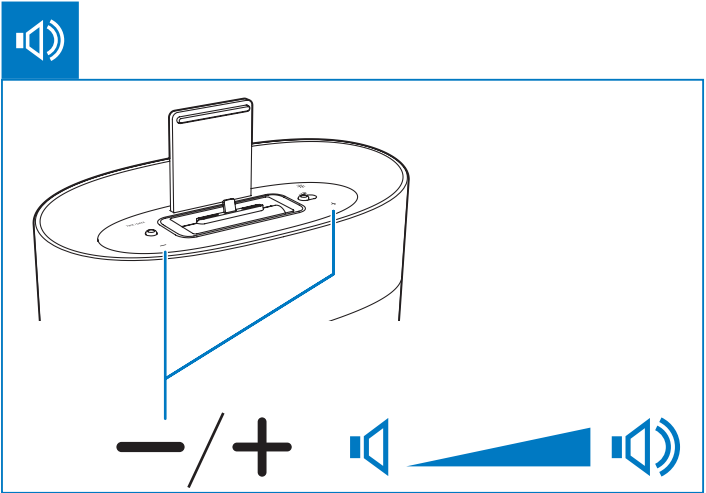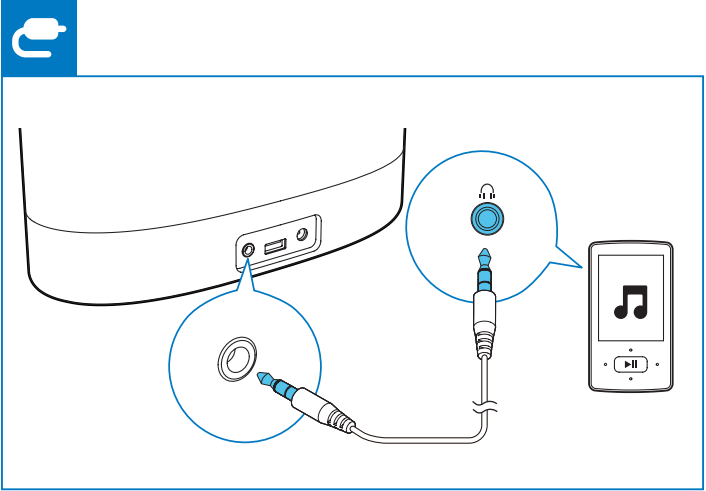

English

- Before using your product, read all accompanying safety information.
- Follow the on-screen instructions to complete the installation. The docking speaker automatically synchronizes the clock or date with your iPod/iPhone/iPad when docked.
- Switch connectors
  - 1 Slide the switch to the right.
  - 2 Press the dock connectors to the front or back to select the lightning or 30-pin connector.
- To get the detailed instructions for use, visit [www.philips.com/welcome](http://www.philips.com/welcome).

|                       |               |
|-----------------------|---------------|
| Amplifier             |               |
| Rated Output Power    | 2 x 2.5 W RMS |
| Signal to Noise Ratio | > 55 dBA      |
| MP3 Link Input        | 650mV RMS     |

#### General information

|                                        |                                                                                                                                                                                      |
|----------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| AC/DC switching adapter                | Model: AS250-050-AQ400<br>Input: 100-240 V~, 50/60 Hz, 1.2 A;<br>Output: 5 V === 4 A;<br>or Model: MSP-C4000IC5.0-24M-CN<br>Input:100-240V~ 50/60Hz 0.6A max.<br>Output: 5.0V === 4A |
| Operation Power Consumption            | < 23 W                                                                                                                                                                               |
| Standby Power Consumption              | < 1 W                                                                                                                                                                                |
| USB Charging                           | DC 5 V === ≤ 1000 mA                                                                                                                                                                 |
| iPod/iPhone Charging                   | DC 5 V === ≤ 2100 mA                                                                                                                                                                 |
| Dimensions:<br>- Main Unit (W x H x D) | 225 x 149 x 96 mm                                                                                                                                                                    |
| Weight:<br>- Main Unit                 | 0.83 kg                                                                                                                                                                              |

## Important

### Safety

- Read these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other devices (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the device.
- Only use attachments/accessories specified by the manufacturer.
- Unplug the device during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the device has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the device, the device has been exposed to rain or moisture, does not operate normally, or has been dropped.
- The device shall not be exposed to dripping or splashing.
- Do not place any sources of danger on the device (e.g. liquid filled objects, lighted candles).
- Where the plug of the Direct Plug-in Adapter is used as the disconnect device, the disconnect device shall remain readily operable.

**Warning**

- Never remove the casing of this apparatus.
- Never lubricate any part of this apparatus.
- Never place this apparatus on other electrical equipment.
- Keep this apparatus away from direct sunlight, naked flames or heat.
- Make sure that you always have easy access to the power cord, plug, or adaptor to disconnect the apparatus from the power.

### Notice

Any changes or modifications made to this device that are not expressly approved by WOOX Innovations may void the user's authority to operate the equipment.

#### Disposal of your old product and batteries

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products and batteries. The correct disposal of these products helps prevent potentially negative consequences on the environment and human health. Please visit [www.recycle.philips.com](http://www.recycle.philips.com) for additional information on a recycling center in your area.

**Environmental information**

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.) Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

**Be responsible**  
Respect copyrights

The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.

Made for

iPod iPhone iPad

"Made for iPod," "Made for iPhone," and "Made for iPad" mean that an electronic accessory has been designed to connect specifically to iPod, iPhone, or iPad, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, iPhone, or iPad may affect wireless performance. iPod and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. iPad is a trademark of Apple Inc.

**Class II equipment symbol:**

CLASS II apparatus with double insulation, and no protective earth provided.

Note

- The type plate is located on the bottom of the apparatus.

简体中文

- 使用产品之前，请先阅读所有随附的安全信息。
- 按照屏幕上的说明完成安装。插接后，音乐基金会与 iPod/iPhone/iPad 自动同步时钟或日期。
- 切换接口
  - 1 将 开关滑至右侧。
  - 2 朝前或朝后按底座接口以选择 Lightning 或 30 针接口。
- 要下载完整用户手册，请访问 [www.philips.com/support](http://www.philips.com/support)。

|             |               |
|-------------|---------------|
| 功放器         |               |
| 额定输出功率      | 2 x 2.5 瓦 RMS |
| 信噪比         | > 55 dBA      |
| MP3 Link 输入 | 650 毫伏 RMS    |

|                          |                                                                                                                                                                          |
|--------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 一般信息                     |                                                                                                                                                                          |
| 交/直流转换适配器                | 型号: AS250-050-AQ400<br>输入: 约 100-240 伏, 50/60 赫兹, 1.2 安<br>输出: 5 伏 === 4 安;<br>或者<br>型号: MSP-C4000IC5.0-24M-CN<br>输入: 约 100-240 伏, 50/60 赫兹, 最大 0.6 安<br>输出: 5 伏 === 4 安 |
| 操作功耗                     | < 23 瓦                                                                                                                                                                   |
| 待机功耗                     | < 1 瓦                                                                                                                                                                    |
| USB 充电                   | 直流 5 伏 === ≤ 1000 毫安                                                                                                                                                     |
| iPod/iPhone 充电           | 直流 5 伏 === ≤ 2100 毫安                                                                                                                                                     |
| 尺寸:<br>- 主装置 (宽 x 高 x 厚) | 225 x 149 x 96 毫米                                                                                                                                                        |
| 重量:<br>- 主装置             | 0.83 千克                                                                                                                                                                  |

## 注意事项

### 安全

- 阅读这些说明。
- 注意所有警告。
- 遵循所有说明。
- 不要在靠近水的地方使用本装置。
- 不要堵塞任何通风口。按照制造商的说明进行安装。
- 不要在任何热源附近安装，如散热器、蓄热器、炉具或其它发热设备（包括功放器）。
- 防止电源线被踩踏或挤夹，特别是在插头、电源插座和设备电源线出口位置。
- 仅使用制造商指定的附件/配件。
- 在雷电天气期间或长期不用的情况下，请拔下设备的电源插头。
- 所有维修均应由合格的维修人员来执行。本设备有任何损坏时，如电源线或插头损坏，液体泼溅到或物体跌落到设备上，设备淋雨或受潮，无法正常运行，或者跌落，均需要进行维修。
- 切勿将设备暴露在漏水或溅水环境下。
- 不要将任何危险源放在本设备上（例如装有液体的物体、点燃的蜡烛）。
- 主插头用作断路装置，在不使用时应将插头拔掉，应保证与电网电源完全切断。

**警告**

- 切勿拆下本产品的外壳。
- 切勿润滑本装置的任何部件。
- 切勿将本装置放在其它电器设备上。
- 应让本装置远离阳光直射、明火或高温。
- 确保始终可轻易地接触到电源线、电源插头或适配器，以便将本装置从电源断开连接。

### 注意

如果用户未经 WOOX Innovations 的明确许可而擅自对此设备进行更改或修改，则可能导致其无权操作此设备。

#### 旧产品和电池的处理

本产品采用可回收利用的高性能材料和组件制造而成。切勿将本产品与其它生活垃圾一起处理。请自行了解当地关于分类收集电子、电气产品及电池的规定。正确弃置这些产品有助于避免对环境 and 人体健康造成潜在的负面影响。关于您所在地区回收中心的更多信息，请访问 [www.recycle.philips.com](http://www.recycle.philips.com)。

**环境信息**

已省去所有不必要的包装。我们努力使包装易于分为三种材料：纸板（盒）、泡沫塑料（缓冲物）和聚乙烯（袋、保护性泡沫片）。您的系统包含可回收利用的材料（如果由专业公司拆卸）。请遵守当地有关包装材料、废电池和旧设备的处理的规定。

**Be responsible**  
Respect copyrights

进行受版权保护材料（包括计算机程序、文件、广播和录音）的未授权复制可能会侵犯版权并构成犯罪。不得将此设备用于这些目的。

Made for

iPod iPhone iPad

"Made for iPod"、"Made for iPhone" 和 "Made for iPad" 表示电子附件专为连接 iPod、iPhone 或 iPad 而设计，并经开发人员认证，符合 Apple 性能标准。Apple 对该设备的操作及其是否符合安全和法规标准不负任何责任。请注意，通过 iPod、iPhone 或 iPad 使用该配件可能影响无线性能。

iPod 和 iPhone 是 Apple Inc. 在美国 和其它国家/地区注册的商标。iPad 是 Apple Inc. 的商标。

**II 类设备符号：**

具有双重绝缘的 II 类设备，不提供保护接地。

注

- 铭牌（铭牌上的信息包括工作电压、消耗功率）位于主机底部，使用前请先了解铭牌上的相关信息。

| 部件名称<br>Name of the Parts                                    | 有毒有害物质或元素<br>Hazardous/toxic Substance |                 |                 |                   |            |              |
|--------------------------------------------------------------|----------------------------------------|-----------------|-----------------|-------------------|------------|--------------|
|                                                              | 铅 (Pb, Lead)                           | 汞 (Hg, Mercury) | 镉 (Cd, cadmium) | 六价铬 (Chromium 6+) | 多溴联苯 (PBB) | 多溴二苯醚 (PBDE) |
| Housing<br>外壳                                                | O                                      | O               | O               | O                 | O          | O            |
| Loudspeakers<br>喇叭单元                                         | O                                      | O               | O               | O                 | O          | O            |
| PWBs<br>电路板组件                                                | X                                      | O               | O               | O                 | O          | O            |
| Accessories<br>(Remote control & cables)<br>附件 (遥控器、电源线、连接线) | X                                      | O               | O               | O                 | O          | O            |

O: 表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T11363 - 2006 标准规定的限量要求以下。  
O: Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in SJ/T11363 - 2006.

X: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11363 - 2006 标准规定的限量要求。  
X: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in SJ/T11363 - 2006.

**环保使用期限 Environmental Protection Use Period**  
*This logo refers to the period ( 10 years )*  
电子信息产品中含有的有毒有害物质或元素在正常使用的条件下不会发生外泄或突变，电子信息产品用户使用该电子信息产品不会对环境造成严重污染或对其人身、财产造成严重 损害的期限。

This logo refers to the period ( 10 years ) during which the toxic or hazardous substances or elements contained in electronic information products will not leak or mutate so that the use of these [substances or elements] will not result in any severe environmental pollution, any bodily injury or damage to any assets.