




Philips Cineos
HiFi Stereo Headphones

CINEOS

SHP9000

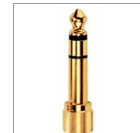

Pure high definition sound

Pure HiFi

The ultimate in high definition headphones delivering highly detailed sound image. Specifically tuned speaker drivers react extremely precise to audio signals. Ultra-wide frequency response.

The perfect listening experience

- 50mm speaker driver for sound without audible distortion
- The whole ear is covered to optimize sound quality
- High quality Linear Crystal Oxygen Free Copper cable

You'll forget you're wearing them!

- Easy adjustable headband ensures optimum fit and comfort

Always ready to go

- 24k gold-plated plug ensures an ultra reliable connection
- Single-sided cable reduces tangling and improves comfort
- A 4m detachable cable for extended life & simplified storage
- Unique detachable cable locking mechanism
- Storage pouch included



PHILIPS

sense and simplicity

Specifications

Sound

- Acoustic system: Open
- Magnet type: Neodymium
- Frequency response: 5 - 40 000 Hz
- Impedance: 32 Ohm
- Maximum power input: 1500 mW
- Sensitivity: 106 dB
- Speaker diameter: 50 mm

Connectivity

- Cable Connection: One-sided
- Cable length: 4 m
- Detachable cable
- Finishing of connector: 24k Gold-plated
- Type of cable: LC-OFC

Accessories

- Adaptor plug: 24k gold-plated 3.5-6.3 mm adaptor plug
- Pouch: Convenient storage pouch included

Packaging dimensions

- Packaging dimensions (W x H x D): 26.1 x 29.2 x 13.9 cm
- Gross weight: 1.137 kg
- Nett weight: 0.28 kg
- Tare weight: 0.857 kg
- EAN: 87 12581 32709 5
- Number of products included: 1
- Packaging type: Carton

Outer Carton

- Gross weight: 2.8 kg
- Outer carton (L x W x H): 29 x 27.5 x 32 cm
- Nett weight: 0.56 kg
- Tare weight: 2.24 kg
- EAN: 87 12581 33545 8
- Number of consumer packagings: 2

Highlights

50 mm speaker driver

The 50 mm speaker driver combines the sensitivity of composite Mylar material with the power of neodymium for the magnetic circuit to deliver powerful, distortion-free sound.

24k Gold-plated plug

Rest assured that the precious metal gold finishing on the plug will give you a more reliable connection for better quality audio.

Full size design

Full-size earshells of these Philips headphones not only cover your whole ear for better sound quality, but also provide space for a larger, higher performance driver.

LC-OFC cable

The extremely pure copper used for this cable minimizes transmission losses and delivers superb signal quality to the headphone, and pure sound to your ears.

Single-sided cable

The cable is conveniently connected to just one side, considerably reducing the risk of tangling and simplifying winding the cable up for storage.

4m cable

A detachable cable is convenient to connect or store away depending on your needs.

Easy adjustable headband

The easily adjustable mechanism provides a comfortable close fitting acoustic seal between the ear cushion and ear, ensuring optimal performance.

Unique cable locking mechanism

Paying attention to even the smallest detail, the acoustic engineers refined the design of the locking mechanism to ensure the detachable cable does not accidentally come loose.

Storage pouch included

Storage pouch included



Issue date 2012-07-31

Version: 4.1.7

12 NC: 8670 000 28703
EAN: 87 12581 32709 5

© 2012 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

www.philips.com