

Philips
Car audio system



CE130

Obsessed with sound

Experience live music in car

Philips CE130 lets you seamlessly enjoy multiple source music from USB, SDHC & portable MP3 players in your car. The system features anti-theft detachable front panel for security and anti-shock protection for smooth grooves on the go.

Enjoy your digital music in car

- Music Zone for adjustable sweet spots
- USB Direct and SD card slots for MP3/WMA playback
- MP3 Link for portable music playback

Superb performance in a compact design

- MAX Sound for instant power boost
- Dynamic Bass Boost electronically enhances the low tones
- Super anti-shock protection for smooth music enjoyment
- 2-band parametric equalizer with 8 presets
- Built-in 45W x 4 amplifier for excellent sound quality
- AM/FM digital tuning with presets

Design that blends into your car

- High contrast LCD for perfect viewing
- Browse by folder or song for instant search or quick access
- Detachable front panel and blackout for anti-theft security

PHILIPS


Highlights

MAX Sound



MAX Sound technology produces an instant boost in bass, maximizing volume performance and instantly creating the most impressive listening experience with just the touch of a button. Its sophisticated electronic circuitry calibrates existing sound and volume settings, instantly boosting bass and volume to maximum levels without distortion. The end result is a noticeable amplifying of both sound spectrum and volume and a potent audio boost that will add mileage to any music.

Music Zone

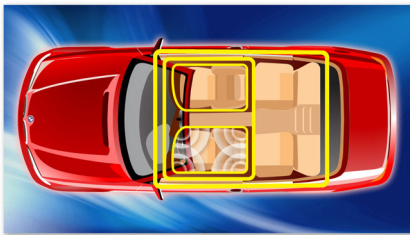


Philips' innovative Music Zone technology lets the driver and the passengers enjoy their music with more vivid spatial effect, just as the artist intended it to be heard. Users can easily switch the music listening zones from the driver to the passengers and back again to get the best sonic focus in the car. A dedicated zone control button provides three pre-defined settings - Left, Right and Front (and All) - so you can best match your listening needs easily and dynamically alone or with your passengers.

DBB Dynamic Bass Boost



Activate the Dynamic Bass Boost (DBB), and the low-end bass frequencies are electronically enhanced to achieve consistent sound reproduction, especially when the speaker volume is set at a low level. You hear impressive bass at all times.

Built-in 45W x 4 amplifier

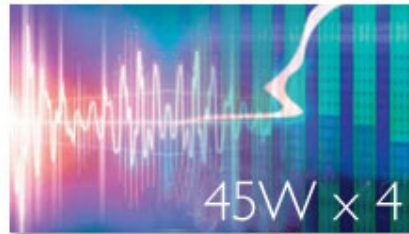

Built-in 45W x 4 amplifier for excellent sound quality


Browse by folder or song



This function allows you to find a track or album much faster by letting you browse through songs and folders, which are the usual contents of USB/SDHC devices. With the dedicated folder/song button, only three simple steps are needed to make a search – press folder/song, rotate the volume knob and push to select. This simple process lets you

search through your music quickly and easily, letting you to focus on your driving.

USB Direct and SD card slots

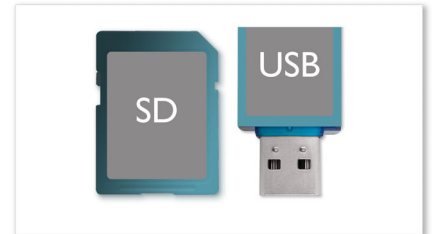

Thanks to the complete file transferability, you can easily enjoy the convenience and fun of accessing more digital music via the built-in USB Direct and SD card slots.

MP3 Link



The MP3 link connectivity allows direct playback of MP3 content from portable media players. Besides the benefit of enjoying your favorite music in the superior sound quality delivered by the audio system, the MP3 link is also extremely convenient as all you have to do is to plug your portable MP3 player to the audio system.

Detachable front panel



Detachable front panel and blackout for anti-theft security



Specifications

Display

- Type: High contrast B/W LCD (8 characters)
- Key illumination: Red

Audio Playback

- Playback Media: USB flash drive, SD Card
- Compression format: MP3, WMA
- ID3 Tag support: Song title, artist, album
- MP3 bit rates: 32-320kbps and variable bit rate
- USB Direct / SD Modes: Play/Pause, Fast Backward/Fast Forward, Previous/Next, Repeat, Shuffle

Tuner/Reception/Transmission

- Tuner Bands: AM, FM Stereo
- Auto digital tuning
- Tuner Enhancements: Auto search and store
- No. of preset stations: 18(FM), 12(AM)

Sound

- Equalizer: 2-bands
- Equalizer settings: Classic, Jazz, Pop, Rock, Flat, Optimal, Techno, User defined
- Sound Enhancement: MAX Sound, Dynamic Bass Boost

- Output power (MAX): 45Wx4 channels
- Output power (RMS): 22Wx4 channels (4 ohms, 10% T.H.D.)

Connectivity

- USB: USB 2.0 Host
- Memory card: SD, SDHC
- MP3-Link: For portable MP3 music playback
- Preamp output: 2 pairs RCA(L/R)

Security/Anti-theft

- Front panel: Detachable
- Display blackout: 10/20 sec selectable

Accessories

- Remote control: Not included
- User Manual: Spanish
- Quick start guide: Latam Spanish

Power

- Power supply: 12V DC

Dimensions

- Product dimensions (W x H x D): 188 x 58 x 140 mm
- Chassis: 1 Din



Issue date 2014-02-13

Version: 2.0.2

12 NC: 8670 000 70382
EAN: 87 12581 57613 4

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com