




Philips  
PC Headset

SHM7110

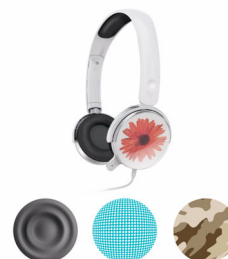

## Customizable PC headset

Your perfect notebook and desktop companion

This sleek PC solution lets you tailor your headset with customizable earshells. With crystal-clear voice transmission and a comfortable headband design, you can chat away the hours in comfort.

### Enrich your PC experience

- Customizable ear shells

### Quality sound performance

- 40mm speaker driver delivers sound without distortion

### Clear voice transmission

- Highly sensitive microphone for clear voices pick up

### Easy and comfortable to wear

- Ear cushions improve wearing comfort and bass response
- Personalize the fit for extra comfort during extended use

### Ultimate Convenience

- In-line mute & volume control

**PHILIPS**  
sense and simplicity

# Specifications

## Design

- Wearing style: Headband

## Sound

- Acoustic system: Semi-open
- Magnet type: Neodymium
- Frequency response: 18 - 22 000 Hz
- Impedance: 32 Ohm
- Maximum power input: 100 mW
- Microphone cartridge: 6 mm
- Sensitivity: 110 dB
- Speaker diameter: 40 mm
- Type: Dynamic
- Sensitivity microphone: 20-10 000 Hz, -40 dB

## Connectivity

- Cable length: 2 m
- Connector: 2 x 3.5 mm
- Type of cable: Copper

## Convenience

- Volume control
- Mute switch

## Product dimensions

- Product dimensions (W x H x D):  
16.5 x 19 x 6.8 cm
- Weight: 0.113 kg

## Packaging dimensions

- Packaging dimensions (W x H x D):  
20.5 x 26.5 x 8.3 cm
- Gross weight: 0.241 kg
- Nett weight: 0.113 kg
- Tare weight: 0.128 kg
- EAN: 87 12581 43966 8
- Number of products included: 1
- Packaging type: Blister

## Inner Carton

- Inner carton (L x W x H): 42 x 26.5 x 28.2 cm
- Gross weight: 1.9 kg
- Nett weight: 0.678 kg
- Tare weight: 1.222 kg
- EAN: 87 12581 43967 5
- Number of consumer packagings: 6

## Outer Carton

- Outer carton (L x W x H): 55 x 44.5 x 61 cm
- Gross weight: 10 kg
- Nett weight: 2.712 kg
- Tare weight: 7.288 kg
- EAN: 87 12581 43968 2
- Number of consumer packagings: 24

# Highlights

## Customizable PC headset

Customizable earshells on this PC headset allows you to differentiate yourself with shells that match your personal style.

## 40 mm speaker driver

The 40 mm speaker driver is made of a composite mylar material for a highly sensitive yet powerful element that delivers sound without audible distortion.

## Highly sensitive microphone

For clear and uninterrupted online conversations, this PC headset is the perfect solution as it comes with a highly sensitive microphone that picks up your voices.

## Comfort ear cushions

The special shape and luxurious materials used for the ear cushions of these Philips headphones ensure a perfect fit for maximum comfort. They prevent audio leakage and enhance bass performance too. The ear cushions are shaped in such a way that they perfectly align with the area around a person's ear.

## Adjustable Comfort level

No matter how you like to 'feel' your headphones, this unique headband construction will always provide you with a personalized, comfortable fit. With height adjustment, you can comfortably wear the headphone for a much longer period.

## In-line mute & volume control

Mute your voice or adjust the volume without having to go to the audio source device.



Issue date 2012-07-31

Version: 5.1.5

12 NC: 8670 000 41847  
EAN: 87 12581 43966 8

© 2012 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips  
Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)