




Philips Philips Fidelio  
Headphones with mic

### High-resolution audio

In-ear  
Ultra-soft silicone caps  
Flat cable

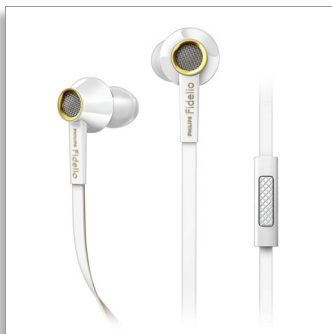

S2WT

## High fidelity, premium quality

Wherever you go

Philips Fidelio S2 headphones are precisely engineered to deliver natural, balanced sound, revealing every detail as the artist intended. Amazing sound presented in a lightweight yet durable design for true comfort and pleasure on the go.

#### Designed for precision

- High-powered 13.5-mm neodymium drivers for exceptional sound
- Layered motion control drivers for refined high frequencies
- Engineered metal housing reduces vibration and resonance
- Semi-closed back design for sound balance and bass extension
- High-resolution audio reproduces music in its purest form

#### Listen in comfort

- Copper alloy outer housing for lightweight durability
- 2 Comply™ Foam Tips for a comfy fit and noise isolation
- Ultra-soft silicone tips in 5 sizes for a custom, snug fit
- Ergonomic earphones fit perfectly while dispersing pressure
- Anti-scratch high gloss coating for added protection

#### Created for convenience

- Switch between music and calls with in-line control and mic
- Protective pouch to store your headphones when not in use

**PHILIPS**  
Fidelio

Headphones with mic  
High-resolution audio In-ear, Ultra-soft silicone caps, Flat cable

S2WT/00

# Highlights

## High-resolution audio



High-resolution audio offers the best in audio performance, reproducing original studio master recordings more faithfully than 16 bit/44.1 kHz CD formats. This uncompromising quality makes high-resolution audio the best sound companion for the music lover. Fidelio headphones meet the stringent standards required for the Hi-Res Audio stamp of quality. Whether you are enjoying your Hi-Res collection or a more traditional music source, the smooth extended high frequencies of the Fidelio headphone range help you get more from your music.

## 13.5-mm neodymium drivers



Each speaker driver is carefully handpicked, tuned and tested before being paired to ensure delivery of the most balanced, natural sound. The 13.5-mm drivers utilise high-power neodymium magnets to deliver deep bass impact, transparent mid-range and refined high frequencies.

## Semi-closed back design

The semi-closed back architecture, combined with large, premium-quality drivers, ensures

greater bass extension, while the design itself is optimised to minimise sound leakage. Front pressure equalisation channels allow for more detailed and balanced sound, which reduces the occlusion effect for a more natural listening experience.

## Layered motion control drivers



Layered Motion Control (LMC) drivers feature a multi-layered polymer diaphragm that encases a layer of damping gel. Unlike traditional single-layer drivers at higher audio frequencies, which are rigid and reproduce uncontrolled and unnatural timbre, our LMC driver's multiple layers form a non-rigid boundary to hold a layer of gel in shape. The gel absorbs and dampens any exaggerated energies, resulting in a smooth and flatter frequency response, and therefore a more balanced, natural and refined high frequency range.

## Copper alloy outer housing



Copper alloy outer housing for lightweight durability

## Engineered metal housing



The metal housing is meticulously engineered to reduce resonance and vibration, delivering authentically precise sound marked by incredible sound detail.

## Ergonomic earphones



The Fidelio S2 earphones are ergonomically shaped to fit your ear's natural curve, all the while dispersing pressure. Its lightweight copper alloy construction and superior materials ensure long-lasting comfort, allowing you to experience true comfort as you enjoy your music to the fullest.



Headphones with mic  
High-resolution audio In-ear, Ultra-soft silicone caps, Flat cable

S2WT/00

# Specifications

## Sound

- Acoustic system: Semi-closed
- Frequency response: 5–40 000 Hz
- Speaker diameter: 13.5 mm
- Sensitivity: 107 dB
- Maximum power input: 40 mW
- Impedance: 22 ohm

## Connectivity

- Cable Connection: 3.5 mm 4 pole (1.2 M)
- Compatible with: iPhone®, BlackBerry®, HTC,

LG, MOTOROLA, Sony, Nokia\*, SAMSUNG\*.

\*Extra connector available through customer support for Sony Ericsson and older models from NOKIA and SAMSUNG

## Accessories

- Storage pouch

## Design

- Colour: White

Issue date 2024-03-12

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Version: 4.2.7

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

EAN: 69 23410 71929 1

[www.philips.com](http://www.philips.com)