

**PHILIPS**

Linea V

Design cordless  
phone (M350)

Design cordless  
phone with  
answering machine  
(M355)

# Short user manual



Register your product and get support at

[www.philips.com/support](http://www.philips.com/support)

# Important safety instructions

## Warning

- The Electrical network is classified as hazardous. The only way to power down the charger is to unplug the power supply from the electrical outlet. Ensure that the electrical outlet is always easily accessible.
- Refer to safety information before using the product.
- Hereby, Gibson Innovations declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.
- Use only the power supply listed in the user instructions.
- Use only the batteries listed in the user instructions.
- Do not allow the product to come into contact with liquids.
- Risk of explosion if battery is replaced by an incorrect type.
- Dispose of used batteries according to the instructions.
- When the handset rings or when the handsfree is activated, keep the handset away from your ear to avoid hearing damage.

# 1 Overview

## In call


- Phonebook
- Access the redial list.
- Adjust the volume.
- Recall (network dependent).
- End calls.
- Enter a pause (press and hold).
- Turn the speaker on/off.
- Mute/unmute the microphone.

## Standby

- Access the main menu.
- Access the redial list.
- Phonebook
- Call log
- Make and receive calls.
- Access the network voice mail (network and country dependent) (press and hold).
- Switch the handset on or off (press and hold).
- Make intercom call (press and hold).
- Lock/unlock the keypad (press and hold).
- Make and receive calls through the speaker.
- M355 only: Press to play new message from the answer machine. / Access to the answer machine menu.

## In menu

- Confirm / Select / Enter the option menu.
  - Cancel / back
  - Up / down
  - Exit menu.
- ## In text input
- Delete text.
  - Enter a space.
  - Switch upper/lower case (press and hold).

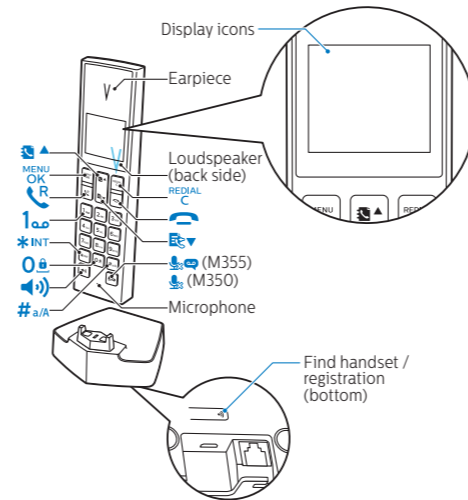


## Display icons

- It shows the connection status between the handset and base station. The more bars are shown, the better the signal strength is.
- It remains steadily on when browsing incoming calls in the call log.
- It indicates an outgoing call in the redial list.
- It flashes when there is a new missed call or when browsing new missed calls. It remains steadily on when browsing the missed calls in call log that are already read.
- It flashes when receiving incoming call. It remains steadily on during a call.
- The speaker is on.
- The ringer is off.

- The alarm is activated.
- M355 only: Answering machine: it flashes when there is a new message or when the memory is full. It is displayed when the telephone answering machine is turned on.
- Voice messages indicator: flashes for new messages, is steady for reviewed messages. \* This is network dependent.
- It is displayed when you scroll up/down a list or increase and decrease the volume.
- There are more digits on the right. Press to read.
- The ECO+ mode is activated.

## 2

## Connect

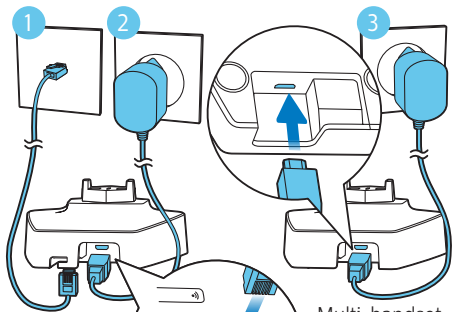


The base station allows connection to a power bank as an alternative source of power during AC power outage.

Multi-handset version only.


# 3 Get started

## Configure your phone

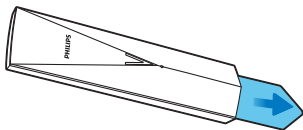

- 1 The batteries are pre-installed in the handset. Pull the battery tape off from the battery door before charging.
- 2 When using your phone for the first time, you see a welcome message (country dependent).
- 3 Set the country and language if prompted.
- 4 Set the date and time.
  - If the time is in 12-hour format, press / to select **[am]** or **[pm]** (country dependent).

## Charge your phone

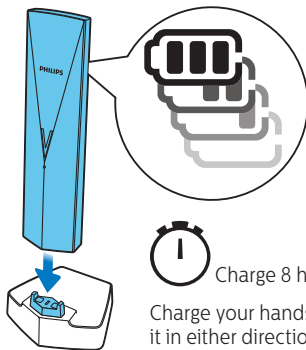

Charge 8 hours  
Charge your handset by docking it in either direction.

> 70%

40% - 70%

10% - 40%

Flashing: low battery

Scrolling: charging in progress

# 4 Enjoy

## Phonebook

### Add record

- 1 Press .
- 2 Select **[Phonebook]** > **[Add new]**.
- 3 Follow on-screen instructions.

### Call from the phonebook

- 1 Press .
- 2 Select a record and press .

### Call from the direct access memory

Press and hold on the keys in standby mode. The availability of direct access memory is country dependent.

## Call log

### Call from the call log

- 1 Press .
- 2 Select a record and press .

### View record

Press > > **[View]**.

### Save record

- 1 Press .
- 2 Select a record and press > **[Save number]**.
- 3 Follow on-screen instructions.

### Delete record

- 1 Press > > **[Delete]**.
- 2 Follow on-screen instructions.

## Redial list

### Call from the redial list

- 1 Press .
- 2 Select a record and press .

### Save record

- 1 Press .
- 2 Select a record and press > **[Save number]**.
- 3 Follow on-screen instructions.

### Delete record

- 1 Press > > **[Delete]**.
- 2 Follow on-screen instructions.

## Telephone answering machine (for M355 only)

### Turn the answering machine on or off

- 1 Press > **[Answ. machine]** > **[On/off]**.
- 2 Follow on-screen instructions.
  - **[On]** > **[Answer only]** means the answering machine is on. Calls are only answered, messages are not recorded.
  - **[On]** > **[Answer & rec.]** means the answering machine is on. Calls are answered and messages are recorded.

### Listen to the incoming messages

Press > **[Answ. machine]** > **[Play]**.

### Delete an incoming message

- 1 When you listen to the message, press to enter the options menu.
- 2 Select **[Delete]**, then press to confirm.

## Register the handset or additional handsets

You can register additional handsets to the base station.

- 1 Press on the handset.
- 2 Select **[Services]** > **[Register]**, then press to confirm.
- 3 Press and hold on the base station for 10 seconds.
- 4 Enter the system PIN/passcode (0000).
- 5 Press to confirm the PIN/passcode.
  - ↳ Registration is complete in less than 2 minutes.



### Note

- The preset PIN is 0000.
- The handset and the base station are GAP compliant, which means they guarantee the minimum functions: register a handset, take the line, make a call and receive a call. The advanced features may not be available if you use them with other makes. To register the handset to another GAP-compliant base station, follow the registration procedure of that base station.

## Restore default settings

You can reset your phone settings to the original factory settings, and recall the original PIN/passcode.

- 1 Press .
- 2 Select **[Services]** > **[Reset]**, then press to confirm.
- 3 Follow on-screen instructions.

# Technical data



## Battery

Philips: 2 x AAA NiMH 1.2 V Rechargeable 300 mAh batteries

Use only the supplied batteries.

## Adapter (base and charger)

	Input:	Output:
SPPS:	100-240 V~	5 Vdc
SSY050050-UK	50/60 Hz 200 mA	500 mA

## Alternative power source

Power bank: output: 5 Vdc 500 mA (minimum)

Phonebook with 50 entries

Call log with 20 entries

Talk time: 10 hours

Standby time: 180 hours

RF output power: < 24 dBm

Frequency band: 1880 MHz ~ 1900 MHz



## Note

You can find the Declaration of Conformity on [www.p4c.philips.com](http://www.p4c.philips.com).

# ? Frequently asked questions

## My handset displays [Searching] or [Unavailable], or [Unregistered], what do I do?

- Make sure that the base station has power supply.
- The handset is out of range. Move it closer to the base station.
- The handset is not paired with the base. Register the handset to the base station.


## If I fail to pair (register) the handset or additional handsets to the base station, what do I do?

- Your base memory is full. Access **MENU** **OK** > **[Services]** > **[Unregister]** to unregister the unused handsets and try again.
- If registration fails, unplug the power adapter from the base station and plug it back. Wait for 15 seconds, and then repeat the registration procedure.

## I have chosen a wrong country in Welcome screen, what do I do?

Reset your phone settings to the original factory settings (see the section on “Restore default settings”).

## I have chosen a wrong language which I cannot read, what do I do?

- 1 Press  to go back to the standby screen.
- 2 Press **MENU** **OK** to access the main menu screen.
- 3 The following options will appear on the screen:

<b>[Phone setup]</b> > <b>[Language]</b>
<b>[Réglages]</b> > <b>[Langue]</b>
<b>[Telefon-Setup]</b> > <b>[Sprache]</b>
<b>[Config. telef.]</b> > <b>[Lingua]</b>

- 4 Select them to access the language options.
- 5 Select your own language.

## The handset loses connection with the base or the sound interrupts during a call.

- The handset is nearly out of range. Move it closer to the base station.
- Re-register the handset to the base station.

## The battery discharges too fast.

- The battery is not fully recharged. Leave the handset on the charging cradle for at least 8 hours or until the battery icon on the handset stops scrolling and indicates full bar.
- The batteries are old or defective. Purchase and replace with new rechargeable batteries with the same specifications.
- Check if the ECO+ mode is activated. Turn it off to increase the standby time.

## Bad audio (crackles, echo, etc.)

- The handset is nearly out of range. Move it closer to the base station.
- The phone receives interference from the nearby electrical appliances. Move the base station away from them.
- The phone is at a location with thick walls. Move the base away from them.
- The phone receives interference from the DSL (digital subscriber line) connection. Install a DSL filter to prevent the noise. Contact your service provider for the DSL filter.

## The handset does not ring.

Make sure the handset ringtone is turned on..

## The caller ID does not display.

- The service is not activated. Check with your service provider.
- The caller's information is withheld or unavailable





[www.philips.com/support](http://www.philips.com/support)

To access the user instructions online, use the reference model number written on the product label at the bottom of the base station.



Copyright © Gibson Innovations Limited  
2017. All rights reserved.

This product has been manufactured by and  
is sold under the responsibility of Gibson  
Innovations Ltd., and Gibson Innovations Ltd. is  
the warrantor in relation to this product.

Philips and the Philips Shield Emblem are  
registered trademarks of Koninklijke Philips N.V.  
and are used under license.

UMS\_M350-355

05\_EN\_V1.0

WK17335



This symbol on a  
product means that  
the product is  
covered by European  
Directive 2012/19/EU.