

Philips
Soundbar speaker

3.1 CH wireless subwoofer

Bluetooth®
HDMI ARC
150W

HTL3150B



Unmatched voice clarity from 3.1 Ch

with wireless subwoofer

Upgrade your TV with enhanced voice clarity and virtual surround sound for a better cinematic experience, plus wireless music streaming over Bluetooth.

Connect and enjoy all your entertainment

- EasyLink to control all HDMI CEC devices via a single remote
- Wireless music streaming via Bluetooth
- Works with TVs, BD/DVD players, gaming consoles, MP3 players
- Audio in to enjoy music from iPod/iPhone/MP3 player
- Enjoy MP3 music directly from your portable USB devices

Designed for simplicity

- Low-rise profile for the perfect fit in front of your TV
- Touch panel for intuitive playback and volume control

Richer sound for watching TV and movies

- Dedicated center-channel speaker for superior voice clarity
- Virtual Surround Sound for a realistic movie experience
- Dolby Digital and Pro Logic II surround sound
- Wireless subwoofer adds thrill to the action

PHILIPS

Soundbar speaker
3.1 CH wireless subwoofer Bluetooth®, HDMI ARC, 150W


Highlights

Center-channel speaker




A centre-channel speaker dedicated especially to voice frequencies anchor speech to the centre of the screen. This offers improved voice positioning and clarity, increasing immersion in movies.

Dolby Digital and Pro Logic II

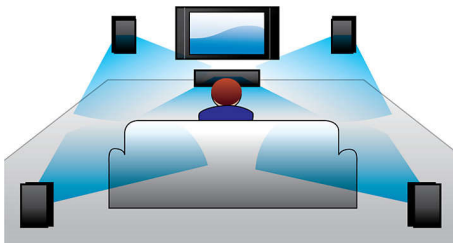

A built-in Dolby Digital decoder eliminates the need for an external decoder by processing all six channels of audio information to provide a surround sound experience and an astoundingly natural sense of ambience and dynamic realism. Dolby Pro Logic II provides five channels of surround processing from any stereo source.

Virtual Surround Sound

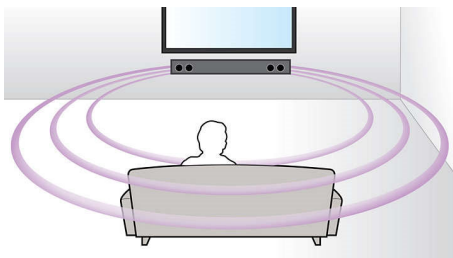

Philips Virtual Surround Sound produces rich and immersive surround sound from less than

five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. Any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

Bluetooth



Bluetooth is a short range wireless communication technology that is both stable and energy efficient. The technology allows for easy wireless connection to other Bluetooth devices, so you can play your favorite music from any smartphone, tablet or laptop, including the iPod or iPhone with a Bluetooth-enabled speaker.

EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment

HTL3150B/37


simultaneously. Functions like standby and play can now be carried out with absolute ease.

Wireless subwoofer



Wireless subwoofer adds thrill to the action

Touch panel for playback

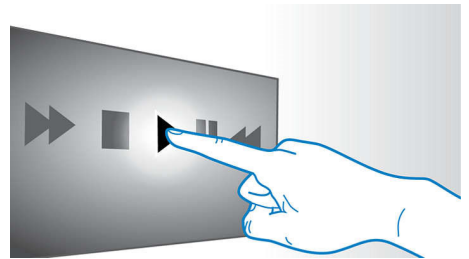

Intuitive touch panel controls allows you to control the volume as well as other playback options by simply pressing the touch sensitive controls on the front panel.

USB playback



Simply plug in your device to the USB port on your Philips Soundbar speaker. Your digital music will be played directly from the device. Now you can share your favorite moments with family and friends.



Specifications

Sound

- Sound Enhancement: Night Mode, Treble and Bass Control, Virtual Surround Sound, Audio sync, Movie, Music, Voice
- Sound System: Dolby Digital, Dolby pro-logic 2
- Total Power RMS @ 10% THD: 150 W

Loudspeakers

- Loudspeaker types: Integrated with main unit
- Subwoofer freq range: 45 - 200 Hz
- Subwoofer driver: 1 x 5.25" woofer
- Subwoofer type: Wireless subwoofer
- Subwoofer impedance: 2 ohm
- Speaker Impedance: 4 ohm
- Drivers per Soundbar: 3 x race track woofers

Connectivity

- Integrated Connections: Bluetooth
- Rear Connections: AUX in, Digital coaxial in, Digital optical in, HDMI 1.4 output (ARC)
- iPod/iPhone: via 3.5mm Audio In, via bluetooth
- Top connections: Audio In (3.5mm), USB 2.0

Convenience

- EasyLink (HDMI-CEC): Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough, System standby, Audio Return Channel

Power

- Subwoofer power consumption: 30 W
- Subwoofer Power supply: 100-240 V~; 50-60 Hz
- Main unit power supply: 100-240V AC, 50/60 Hz 1.5A
- Subwoofer standby power: <0.5 W
- Main unit standby power: <0.5 W

Accessories

- Included accessories: Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, AAA Battery (x1), AC Adapter, 2 x Power cords, Screws (x6), Optical audio cable

Design

- Wall mountable

Dimensions

- Main Unit (W x H x D): 950 x 51 x 69 mm
- Weight incl. Packaging: 6.9 kg
- Main Unit Weight: 1.7 kg
- Packaging (W x H x D): 395 x 418 x 295 mm
- Subwoofer (W x H x D): 165 x 240 x 295 mm
- Subwoofer Weight: 3.1 kg

Audio Playback

- Compression format: MP3



Issue date 2024-04-13

Version: 1.4.9

UPC: 8 89446 00534 9

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com