




Philips
Sports headphones

8.6 mm drivers/closed-back
Neckband

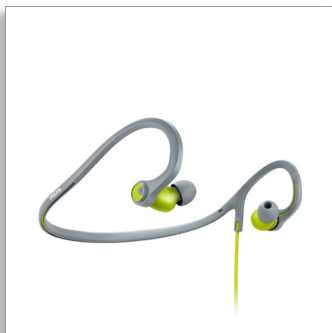

SHQ4300LF

Experience freedom. Stop at nothing

Secure fit and lightweight

The featherweight Actionfit SHQ4300 is engineered from ultra-light, flexible and sweatproof rubber, ensuring a perfect fit that you will want to keep on long after your workout. Rich, deep bass always keeps you motivated.

Protection

- Sporty carrying pouch for easy storage
- Kevlar® Reinforced cable for ultimate durability
- Sweat and moisture proof — ideal for any workout

Push harder

- High-performance sound drives peak performance
- Insert earphones provide sound isolation


Freedom

- 3 ear-tip sizes for the optimum fit
- Cable clip included for tangle-free workout
- 11.4-g ultra lightweight design provides ultimate comfort*
- Flexible neckband auto-adjusts to your head for an ideal fit

PHILIPS


Highlights

11.4-g ultra-lightweight design

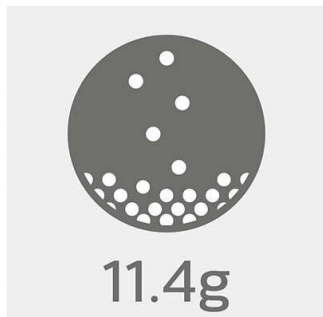


Weighing in at just 11.4 g, these ActionFit sports earphones are so light and comfortable that you will forget you are even wearing them. Perfect for keeping you going right through the hard final miles.

3 choices of ear-tip size

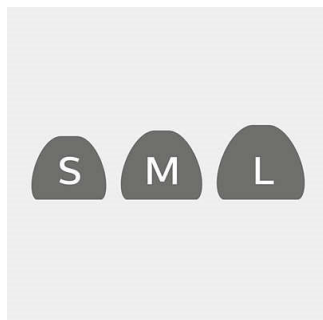

3 ear-tip sizes for the optimum fit

Cable clip

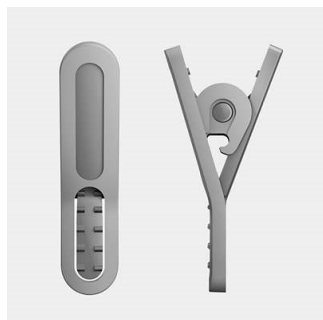

A cable clip comes included with ActionFit earphones, keeping the cable out of your way while you push yourself harder.

Sporty carrying pouch for easy storage

Sporty carrying pouch for easy storage

Flexible neckband




A neckband made with a supple spring-wire that moulds itself to you makes these ActionFit headphones effortlessly comfortable. Lightweight rubberised ear hooks and elastic rubber neckband feel secure yet comfortable throughout any workout.

High-performance sound



8.6 mm neodymium drivers pump out high-performance sound, pushing you to perform at your best.

Kevlar® Reinforced cable

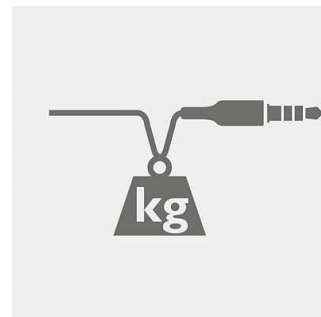

Kevlar® reinforced headphone cables are tough enough to survive even the roughest of workouts.

Sound isolation

Insert earphones create a tight seal in the ear canal, resulting in a strong isolation effect. Our oval acoustic tubes are ergonomically optimised to ensure an exceptional fit.

Sweat and moisture proof



Sweat or rain will no longer stop you from maxing yourself out to your favourite tunes. These Actionfit sports headphones are made of sweat-proof and waterproof materials, making them the perfect workout companion whatever the weather.

Specifications

Sound

- Acoustic system: Closed
- Frequency response: 5 - 24,000 Hz
- Diaphragm: PET
- Magnet type: Neodymium
- Type: Dynamic
- Voice coil: CCAW
- Speaker diameter: 8.6 mm
- Sensitivity: 107 dB
- Maximum power input: 20 mW
- Impedance: 16 ohm

Connectivity

- Cable Connection: single sided
- Finishing of connector: Gold-plated
- Cable length: 1.2 m
- Connector: 3.5 mm

Accessories

- Storage pouch

Design

- Colour: Lime Yellow and White



Issue date 2024-03-12

Version: 5.2.4

EAN: 69 25970 70029 0

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com