

Philips  
Micro music system

Bluetooth  
DVD

BTD2339



# Sound that fits your home

## Obsessed with sound

Listen to all your digital music from your Smartphone via Bluetooth®. The Philips sound system also plays DVDs, DivX titles, CDs and MP3-CDs. Enjoy your favorites in true style.

### Enrich your sound experience

- Bass Reflex Speaker System delivers a powerful, deeper bass
- Digital Sound Control
- 20W RMS maximum output power

### Easy to use

- Motorized CD loader for convenience access
- FM digital tuning to preset up to 20 stations

### Enjoy your favorite movies and music

- Stream music wirelessly via Bluetooth™ from your smartphone
- Play DVD, DivX®, (S)VCD, MP3-CD, CD(RW) and Picture CD
- Dolby Digital for ultimate movie experience
- USB Direct for easy MP3 music playback
- Audio-in for portable music playback
- Karaoke for endless singing entertainment

# PHILIPS

# Highlights

## Bass Reflex Speaker System




Bass Reflex Speaker System delivers a deep bass experience from a compact loudspeaker box system. It differs from a conventional loudspeaker box system in the addition of a bass pipe that is acoustically aligned to the woofer to optimize the low frequency roll-off of the system. The result is deeper controlled bass and lower distortion. The system works by resonating the air mass in the bass pipe to vibrate like a conventional woofer. Combined with the response of the woofer, the system extends the overall low frequency sounds to create a whole new dimension of deep bass.

## Digital Sound Control

Digital Sound Control offers you a choice of pre-set balanced, clear, powerful, warm and bright controls you can use to optimise the frequency ranges for different musical styles. Each mode uses graphic equalizing technology to automatically adjust the sound balance and enhance the most important sound frequencies in your chosen music style. Ultimately, Digital Sound Control makes it easy for you get the most out of your music by

precisely adjusting the sound balance to match the type of music you are playing.

## Dolby Digital

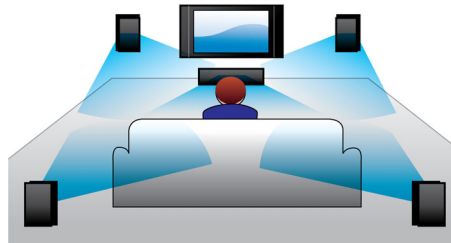

Because Dolby Digital, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb quality surround sound audio with realistic spatial cues.

## USB Direct for easy MP3 music



Thanks to the complete file transferability, you can easily enjoy the convenience and fun of accessing more digital music via the built-in USB Direct.

## Karaoke

The Karaoke feature on your Philips audio system provides endless entertainment and fun opportunities for you to release your musical talent! You can enhance your performance by adding a cool 'echo' effect. Enjoy the fun of Karaoke solo or simply share a good time with friends and family.

## Stream music via Bluetooth™



Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favorite music, sound from video or game wireless on this speaker easily.

# Specifications

## Sound

- Sound Enhancement: Digital Sound Control
- Sound System: Dolby Digital
- Maximum output power (RMS): 20W

## Loudspeakers

- Speaker drivers: 3" woofer

## Video Playback

- Playback Media: DivX, DVD-Video, Picture CD, Video CD/SVCD, DVD+R/+RW, DVD-R/-RW
- Disc Playback Modes: A-B Repeat, Angle, PBC, Slow Motion, Zoom, Parental control, Disc Menu, Fast Backward, Fast Forward, OSD, Resume Playback from Stop
- DVD Region.: 6
- Video Enhancement: Progressive Scan

## Audio Playback

- Playback Media: MP3-CD, CD, CD-R, CD-RW
- Disc Playback Modes: Repeat/one/all/program, Fast Forward/Backward, Next/Previous Track Search
- Loader Type: Tray
- USB Direct Modes: Fast Backward/Fast Forward, Play/Pause, Previous/Next, Program Play, Repeat, Stop

## Still Picture Playback

- Picture Compression Format: JPEG
- Picture Enhancement: Slideshow with MP3 playback
- Playback Media: Picture CD, CD-R/RW, DVD+R/-RW

## Tuner/Reception/Transmission

- Tuner Bands: FM Stereo
- Auto digital tuning

- Tuner Enhancements: Auto Store
- Station presets: 20

## Connectivity

- Video Output - Analog: Composite CVBS (yellow cinch), Component Y Pb Pr (cinch)
- Audio Connections: Analogue Audio In (L/R)
- USB: USB host
- Bluetooth profiles: A2DP
- Microphone: Microphone socket

## Convenience

- Alarms: CD Alarm, Sleep timer, Radio Alarm, USB alarm
- Clock: On main display
- Indications: DIM mode

## Accessories

- Included accessories: Composite video cable (Y), AC Power Cord
- User Manual: Multi-languages
- Remote control

## Dimensions

- Gross weight: 5.4 kg
- Main unit depth: 239 mm
- Main unit height: 121 mm
- Main unit width: 180 mm
- Main speaker dimensions (W x D): 150 x 125 mm
- Main speaker height: 238 mm
- Packaging depth: 198 mm
- Packaging height: 343 mm
- Packaging width: 590 mm

## Power

- Power supply: 100 - 240V AC, 50/60Hz



Issue date 2014-10-16

Version: 1.0.2

12 NC: 8670 001 19901  
EAN: 48 95185 60399 5

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)