



Philips
Blu-ray Soundbar Home
theater

3D Blu-ray
Wireless subwoofer
Built-in WiFi



HTB5150K

Powerful surround sound, no clutter

Obsessed with Sound

Enjoy wide surround sound without the clutter. Philips SoundBar with Virtual Surround Sound incorporates a complete home theater system, including high definition Blu-ray disc Playback in a single unit!

Great listening experience

- 400W RMS power delivers great sound for movies and music
- Virtual Surround Sound for a realistic movie experience

Designed to enhance your cinema at home

- Wireless subwoofer for clutter free placement


Simply enjoy all your entertainment

- Full HD 3D Blu-ray for a truly immersive 3D movie experience
- Instant 2D to 3D conversion for a lifelike movie experience
- CinemaPerfect HD for clearer and sharper video playback
- Built-in WiFi to enjoy your connected media wirelessly
- Karaoke for endless singing entertainment at home
- Connect to HDMI x 2 for great picture and sound quality
- SimplyShare to connect & stream all entertainment wirelessly
- Turn your Smartphone into a remote for Philips AV products

PHILIPS

Highlights

Virtual Surround Sound

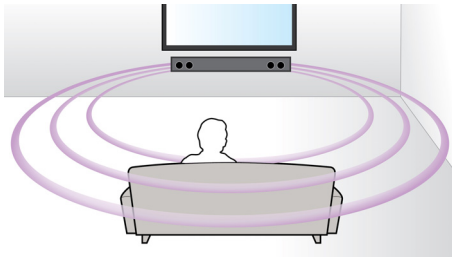

Philips Virtual Surround Sound produces rich and immersive surround sound from less than five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. Any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

Karaoke for endless singing



Karaoke for endless singing entertainment at home


Instant 2D to 3D conversion



Enjoy 3D movie excitement in your home using your existing 2D movie collection.

Instant 3D conversion uses the latest digital technology to analyze 2D video content to distinguish between foreground and background objects. This detail generates a depth map that converts normal 2D video formats, into exciting 3D. Along with your compatible 3D TV, you are now ready to experience full HD 3D.

HDMI x 2

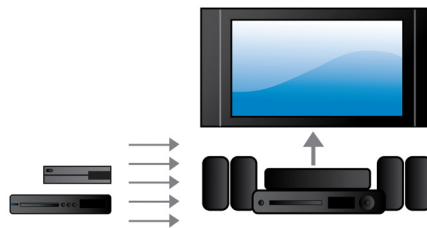

Enjoy larger-than-life 3D playback and crystal-clear 5.1 or 7.1 audio by simply plugging our player's audio HDMI x 2 output to the connection in your non-3D AV receiver.

SimplyShare



Philips SimplyShare lets you share your music, movies & photos from tablet, smartphone & PCs to your home theater & Blu-ray player. You can stream all entertainment directly from your DLNA-enabled devices or use remote control to access & stream media files from your PC. For the best wireless experience, install the SimplyShare app on your tablet/smartphone. You are now ready to enjoy all your entertainment effortlessly.

CinemaPerfect HD



Philips' CinemaPerfect HD engine offers a new standard in clear and sharp video playback. This intelligent engine reduces noise and sharpens images to bring you higher quality video images than previously seen. Video noise reduction and super scaling work to reduce the noise that is produced when video is compressed into MPEG format. With improved color processing, the engine produces sharp, deep images on screen.

Philips MyRemote



The Philips MyRemote app lets you use your smartphone or tablet as a remote to control your Philips AV products that are connected to your home Wi-Fi network, and gives you instant control from anywhere in your home. It also comes with useful functions such as SimplyShare to connect and stream all entertainment wirelessly; and MySound to customize your listening preferences.

Specifications

Sound

- Equalizer settings: Gaming, MySound, Movie, Music, News, Original
- Sound Enhancement: Double Bass Sound, FullSound, Night Mode, Treble and Bass Control
- Sound System: Dolby Digital 5.1, Dolby Digital Plus, Dolby True HD, DTS Digital Surround, DTS-HD High Resolution Audio, DTS-HD Master Audio
- Subwoofer output power: 200 W
- Surround speaker output power: 2 x 100 W
- Total Power RMS @ 30% THD: 400 W

Loudspeakers

- Loudspeaker types: Integrated with main unit, 2 Integrated center speakers, 4 Integrated surround speakers
- Speaker Drivers per side: 2 x 2.5" woofers, 2.5" woox
- Surround speaker freq range: 80 - 18k Hz
- Surround speaker impedance: 8 ohm
- Subwoofer type: Wireless subwoofer
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer freq range: 20 - 150 Hz
- Subwoofer impedance: 3 ohm

Connectivity

- Integrated Connections: Wi-Fi
- Rear Connections: AUX in, Composite video (CVBS) output, Digital coaxial in, Digital optical in, Ethernet, FM Antenna Socket, HDMI 1.4 output (ARC), HDMI IN 1, HDMI IN 2, MIC In/Music iLink, USB, USB (For VOD/BD-LIVE only)
- iPod/iPhone: via 3.5mm Music iLink
- MyRemote App: MySound, SimplyShare, Virtual Remote

Convenience

- EasyLink (HDMI-CEC): 21:9 format subtitle support, Audio Return Channel, Automatic audio input mapping, Dynamic Lipsync, One touch play, One touch standby, Remote Control-Passthrough
- HDMI Features: 3D, Audio Return Channel (ARC), Content Type, Deep color

Tuner/Reception/Transmission

- Internet Radio
- Tuner Bands: FM
- Number of Preset Channels: 40

Optical Playback Media

- Playable Discs: 3D Blu-ray, AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD

+R/+RW, DVD -R/-RW, SVCD, VCD

File Format

- Audio: aac, mka, mp3, wma
- Picture: GIF, JPEG, JPG
- Video: asf, avi, divx, flv, mkv, mp4, mpeg, mpg, wmv

Audio Playback

- Compression format: AAC, MP3, WAV, WMA, FLAC, Ogg Vorbis
- MP3 bit rates: 32 - 320kbps

Video Playback

- Compression formats: DivX Plus HD, MPEG1, MPEG2, MPEG4

Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

Picture/Display

- Philips Branded feature: CinemaPerfect HD
- Picture enhancement: Instant 2D to 3D, HD (720p, 1080i, 1080p/24fps), Progressive scan, Video upscaling

Karaoke Playback

- Standard functions: Echo level control, Mic volume control, Pitch control

Power

- Power consumption: 60 W
- Power supply: 220-240V, 50Hz
- Standby power consumption: 0.5 W

Sustainability

- Packaging: Electronic User Manual

Dimensions

- Main Unit (W x H x D): 1060 x 83.1 x 194.8 mm
- Main Unit Weight: 4.9 kg
- Subwoofer (W x H x D): 195 x 298 x 410 mm
- Packaging (W x H x D): 1140 x 518 x 260 mm
- Weight incl. Packaging: 15 kg

Accessories

- Included accessories: 2 x AAA Batteries, FM antenna, Power cord, Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, World Wide Warranty leaflet, Audio/Video cable



Issue date 2015-08-14

Version: 9.2.4

12 NC: 8670 000 90483
EAN: 69 23410 71555 2

© 2015 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com