

Philips
Wireless home speaker

Wi-Fi. Multi-room audio
DTS Play-Fi compatible
Connects with voice assistants
Built-in LED



TAW6205

All your sounds. Any room.

This wireless speaker is great on its own and even better with others. Match it with your TV or other speakers for great multi-room sound. Pair for stereo. Or deepen the Ambilight of your Philips TV by letting the speaker join in too.

Multi-room audio and Ambilight

- DTS Play-Fi. High-quality multi-room audio
- Rich sound. Pair for stereo in the same room
- Built-in LED light. Works with Philips Ambilight TV
- 3.5" woofer, 1" tweeter, 40 W output power
- Two passive radiators for powerful bass

Unpack. Connect. Enjoy

- Connects to all of your devices
- Wi-Fi. Bluetooth. Apple AirPlay 2. Google Chromecast
- Spotify Connect. Tidal. Deezer. It's all here
- AC-powered. Dimensions: 115 x 212 x 116 mm


At home in your home

- Multi-room setup via Philips Sound or Play-Fi app
- Boost the sound of your smart assistant speakers
- Connects to your favourite voice assistant-enabled devices

PHILIPS

Highlights

Play-Fi. Multi-room and more

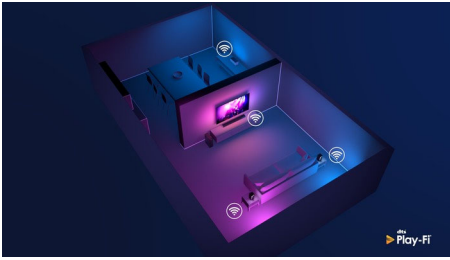

This wireless speaker is DTS Play-Fi compatible, so you can easily sync with other Play-Fi-compatible speakers for multi-room audio. If your soundbar supports Play-Fi Surround, you can even make this speaker part of a true surround-sound setup on movie night.

Rich sound. Pair for stereo

A woofer, two passive radiators and a tweeter combine to give you rich sound with powerful bass and sparkling treble. Wi-Fi streaming gives you the highest-quality signal and ensures that the audio syncs perfectly between speakers or rooms.

Bigger sound for smart speaker

Ask Alexa-enabled devices or any device that has the Google Assistant to play music through the speaker. Turn the volume up for a party. Turn it down late at night. Get the news and more. All completely hands-free.

All your streaming services

Whether you're streaming directly from Spotify or accessing hi-res albums on Tidal via the Play-Fi app, this speaker streams it all.

From party playlists in the lounge to podcasts in the office, everything you love will sound richer, deeper and clearer.

Connects to all of your devices

With Wi-Fi, Bluetooth, Google Chromecast and Apple AirPlay 2 compatibility you can stream your favourite music and podcasts however you want. If you use iOS devices you can use Siri to control the speaker with your voice.

Works with Ambilight

This wireless speaker doesn't just do music, it does Ambilight too. Simply press the Ambilight link button on the speaker to connect to your TV. Enjoy a deeper Ambilight effect while you're watching movies or gaming or while listening to music.

Specifications

Sound

- Output Power: 40 W at 10% THD
- Volume control: up/down
- Loudspeaker Enhancement: Passive radiators x 2

Speaker

- No. of sound channels: 1.0
- Tweeter: 1" x 1
- Woofer: 3.5" x 1

Power

- Power supply: 100 - 240 V AC, 50/60 Hz
- Standby mode

Convenience

- User Interface: Built-in LED: multi-colour

Connectivity

- DTS Play-Fi Multi-room
- Spotify Connect
- Chromecast built in
- Works with Ok Google

- Works with Alexa
- Works with Apple Airplay 2
- Audio in (3.5 mm)
- Bluetooth profiles: SBC 4.0, A2DP, AVRCP
- Bluetooth range: Line of sight, 10 m or 30 ft
- Network connections: Wi-Fi - 802.11 ac, Wi-Fi - 802.11 b/g/n
- Wi-Fi antenna: Built-in
- Network setup: Play-Fi APP

Accessories

- Included accessories: AC Power Cord, Quick start guide, World Wide Warranty leaflet

Dimensions

- Product dimensions (WxDxH):
115 x 212 x 116 mm
- Product weight: 1.8 kg
- Packaging dimensions (WxDxH):
172 x 312 x 168 mm
- Weight incl. Packaging: 2.5 kg



Issue date 2022-02-10

Version: 7.1.2

12 NC: 8670 001 67932
EAN: 48 95229 10985 8

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com