




Philips Micro Hi-Fi System

- MP3/WMA-CD playback
- USB Direct

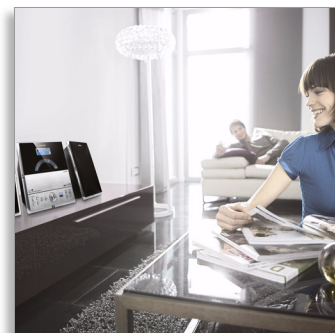

MCM279

Rich sound in compact design

with USB Direct and CD-ripping

Great sound in a compact, elegant design! The classic MCM279 delivers dynamic sound performance and the essential functionalities that will let you enjoy music just the way you like it.

Unlimited listening pleasure

- Rip your favourite CDs to MP3
- Enjoy MP3/WMA music directly from your portable USB devices
- Play MP3/WMA-CD, CD and CD-RW

Enrich your sound experience

- Digital Sound Control for optimised music style settings
- Dynamic Bass Boost for deep and dramatic sound
- Convenient line-in jack for portable music playback
- 2 x 30 W RMS/2 x 60 W Music Power

Start the day your way

- Wake-Up and Sleep Timer
- Digital tuning with 40 pre-set stations for extra convenience

Watch your disc spin

- Front motorised CD door with viewing window
- Compact design that fits anywhere

PHILIPS

Highlights

Rip your favourite CDs to MP3

Simply plug in your USB mass storage device to the USB port on Philips audio system and start recording your favourite music from CDs to your USB device or MP3 player — with one touch and no computer needed you can create your own MP3 files via direct MP3 digital recording.

USB Direct for MP3/WMA music

Simply plug in your device to the USB port on your Philips Hi-Fi system. Your digital music will be played directly from the device. Now

you can share your favourite moments with family and friends.

Digital Sound Control

Digital Sound Control offers you a choice of pre-set Jazz, Rock, Pop and Classical controls you can use to optimise the frequency ranges for different musical styles. Each mode uses graphic equalizing technology to automatically adjust the sound balance and enhance the most important sound frequencies in your chosen music style. Ultimately, Digital Sound Control makes it easy for you get the most out of your

music by precisely adjusting the sound balance to match the type of music you are playing.

Dynamic Bass Boost

Dynamic Bass Boost maximises your music enjoyment by emphasising the bass content of the music throughout the range of volume settings - from low to high – at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.



Specifications

Sound

- Output power (RMS): 2 x 30W
- Output Power: 2 x 60 W music power
- Sound Enhancement: Digital Sound Control 4 modes, Dynamic Bass Boost

Loudspeakers

- Main Speaker: 2-way, Bass Reflex Speaker System, 2" tweeter, 4" woofer

Audio Playback

- Playback Media: CD, CD-R, CD-RW, MP3-CD, WMA-CD
- Disc Playback Modes: Repeat/one/all/programme, Shuffle Play, 20-Track Programmable
- Loader Type: Front, Motorised
- ID3-tag support
- USB Direct Modes: Fast Reverse/Fast Forward, Play/Pause, Previous/Next, Programme Play, Repeat, Shuffle, Stop

Tuner/Reception/Transmission

- Tuner Bands: FM Stereo, MW
- Auto digital tuning
- Station presets: 40
- Tuner Enhancements: Auto Store
- RDS: Programme Type, Station Name, Radio Text, RDS Clock Set, News

Connectivity

- Aux in: Line in
- Headphones: 3.5 mm
- Other connections: FM Antenna, MW Antenna
- USB: USB host

Convenience

- Alarms: CD Alarm, Radio Alarm, Sleep timer, USB alarm
- Clock: On main display
- Display Type: LCD
- Backlight colour: Blue
- Eco Power Standby: 1 watt

Accessories

- Included accessories: AC Power Cord, FM/MW Antenna, Guarantee booklet, Stand
- Remote control: 40-key with Lithium batteries
- AC/DC Adapter: Switching power supply
- Quick start guide: English, German, Dutch, French, Spanish, Italian
- User Manual: 16 languages

Dimensions

- Set dimensions (W x H x D): 211 x 250 x 160 mm
- Main speaker dimensions (W x H x D): 158 x 250 x 185 mm
- Packaging dimensions (W x H x D): 378 x 310 x 330 mm
- Weight incl. Packaging: 6.8 kg

Audio Recording

- Recording Media: USB device
- USB recording modes: Instant record, Programmed tracks, Single disc, Single track
- USB recording sources: CD

Power

- Power supply: 100-240 VAC, 50/60 Hz



Issue date 2013-05-10

Version: 1.0.8

12 NC: 8670 000 32984
EAN: 87 12581 36851 7

© 2013 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

www.philips.com