



Philips
InSightHD wireless home
monitor

For home, pets or business

Noise and motion detection
Unlimited live viewing
Optional cloud recording



M115E

Stay connected to your home, pets or business

With HD

Keep an eye on things when you're not there with the Philips InSightHD monitor. Live HD video, 24 hours a day, to check on the kids when they get home, see what the dog's up to or watch over your home while you're away.

With InSightHD you're never far away

- Wi-Fi-enabled monitor for placement anywhere in your home
- Watch any time, anywhere via Wi-Fi/3G/4G LTE
- HD video for crystal clear viewing
- Unlimited live viewing via app

Peace of mind

- Noise and motion detection with notifications to your phone
- Video encryption for security and privacy protection
- Cloud streaming and video storage, powered by iVideon

Flexibility

- Manage alert notifications and monitoring zones
- Designed with universal tripod mount
- Add as many cameras as you need to your InSightHD account
- Download the app and experience the InSightHD live demo
- Optional recording and storage with paid subscription

PHILIPS


Highlights

Alert notifications



Alerts let you know straight away when a noise or motion event has been detected. The sensitivity can be adjusted and monitor zones can be set up to ensure you get the coverage and monitoring levels to suit your needs.

Experience the live demo

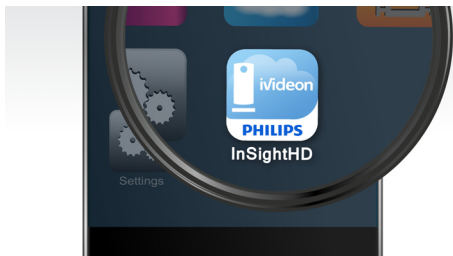

The InSightHD app can be downloaded from the App Store or Google Play and comes with a demo mode to allow you to see InSight in action. Simply type InSightHD in the app search bar.

HD video quality



The InSightHD monitor brings you video in detail. Videos are streamed in high-definition 720p, making them sharp and true-to-life. The "720" refers to the number of horizontal lines of resolution on the screen. The "p" stands for "progressive scan", and is the sequential appearance of the lines in each frame.

Noise/motion notifications



It's impossible to predict when something might happen. InSightHD keeps watching with adjustable motion and sound detection. Notifications will be sent to your phone automatically when noise or motion is detected.

Powered by iVideon



InSightHD works with iVideon to provide secure and reliable video streaming as well as video cloud storage. InSightHD can be used with a subscription to automatically record events when noise or motion is detected. Events are securely stored in the iVideon cloud and can be viewed from your phone.

Silver and Gold Subscriptions



Events can be recorded and stored in the cloud for later viewing via a monthly or annual subscription. There are two plans available; the Silver plan records and stores all videos for the

previous 7 days and the Gold Plan records and stores all videos for the previous 30 days.

Unlimited live viewing via app



The advanced technology used in InSightHD allows non-stop streaming of live video, giving you uninterrupted viewing 24 hours a day. So, day or night, you can see live video for as long as you want. No interruptions.

Video protected by SSL



Security is of paramount importance and all video on the cloud, whether streaming or stored, is protected by an SSL (Secure Sockets Layer) with 256-bit AES encryption. All videos are fully encrypted before transmission and can only be decrypted by your smartphone.

Watch via Wi-Fi/3G/4G LTE



Once InSightHD is set up, you can watch live video from the app anywhere using Wi-Fi, 3G or 4G LTE connection. As long as you are connected, there's no limit to where you can watch from.



Specifications

Lens and Sensor

- Sensor: HD 720p
- Focus mode: Fixed
- View angle: 60 degrees
- Focus range: 0.8 M to infinity

Video Quality

- HD/VGA/QVGA streaming
- Formats: H.264 video compression
- White Balance: Automatic white balance
- Exposure: Automatic exposure control

Features

- Wi-Fi: 802.11 b/ g/ n (2.4 GHz)
- Motion detection
- Noise detection
- LED indicator
- Base: Direction adjustable

Software

- Installation: via App for Android and Apple, InSightHD
- Automatic App update: Yes, for Android and Apple
- System supported: Android 4.1 or above, iOS7 or above

- iPad compatibility: New iPad, iPad Air, iPad 4, iPad 3, iPad 2, iPad mini, iPad with Retina display, iPad Air 2
- iPhone compatibility: iPhone 5, iPhone 5C, iPhone 5S, iPhone 4S, iPhone 6, iPhone 6 Plus
- iPod compatibility: iPod Touch 4th generation and up, iPod Touch 5th generation
- Android phone compatibility: Philips recommends Samsung Galaxy S3 performance phones or better

Input and Output

- Microphone: Highly sensitive, Mono
- USB: Mini-USB port

Accessories included

- USB power adapter: 1
- USB cable: Yes, 3m
- Quick Start Guide

Dimensions

- Packaging dimensions (W x H x D):
158 x 160 x 78 mm
- Product dimensions (W x H x D):
65 x 114 x 65 mm



Issue date 2015-08-04

Version: 1.1.3

12 NC: 8670 001 23815
EAN: 04 89518 56076 27

© 2015 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com