

Philips  
Cordless phone with  
answering machine

25 min answering machine  
1.6" display/amber backlight  
Handset speakerphone  
3 handsets

D2653B



## Talk Hands-free

Great sound reproduction, without having to hold the phone to your ear – so you can talk completely hands-free. A true plug-and-play device with a user-friendly menu and an inbuilt answering machine. A great chat has never been easier.

### Nice and simple

- Freestanding handset with a speaker for easy hands-free calls
- Up to 25 minutes of messages on your answering machine
- Textured back cover for non-slip grip
- Easy to read 1.6" (4.1 cm) graphical display with backlight
- Menu in multiple local languages
- Up to 16 hours of talk time on a single charge
- Programmable hot keys for quick dial
- Caller ID – so you always know who is calling\*

### Crystal clear sound

- The Parametric Equaliser delivers pure and clear sound
- Optimised antenna layout for great reception in any room
- Advanced sound testing and tuning for superb voice quality

### Eco-conscious product

- Low radiation and power consumption

**PHILIPS**

Cordless phone with answering machine  
25 min answering machine 1.6" display/amber backlight, Handset speakerphone, 3 handsets

D2653B/01

## Highlights

### 4.1-cm (1.6") graphical display

Easy to read 1.6" (4.1 cm) graphical display with backlight

### Advanced sound testing



We test the sound quality of our DECT phones the same way as high-end headphone manufacturers do. Using an advanced ear simulator, we can accurately re-create the way people actually hear. This helps our acoustic engineers to measure and fine-tune things like frequency response, distortion and overall hearing perception, to create perfect voice reproduction for both handset and hands-free modes.

### Caller ID\*



Sometimes it's good to know who's calling before you answer. And our Caller ID lets you keep track of who's on the other end of the line.

### Eco-conscious product



Philips phones are energy efficient and designed to be respectful to the environment.

### Handset speakerphone



Hands-free mode uses a built-in loudspeaker to amplify the voice of the caller, allowing you to speak and listen during a call without holding the phone to your ear. This is especially useful if you want to share the call with others or simply multitask.

### Menu in local languages



Enjoy easy setup, navigation and control with intuitive menu available in local languages.

### Non-slip grip



The rear of the handset is treated with a special texture for added comfort and better grip.

### Optimised antenna layout




Our optimised antenna layout ensures strong and stable reception, even in areas of the house where cordless transmission is difficult. Now you can take a call wherever you are in the house, and enjoy a long, uninterrupted conversation even as you walk around.

### Parametric Equaliser



Our telephones use parametric equalisation in the digital sound processing to fine tune the sound response back to the intended linear frequency response curve, delivering sound that is pure and clear, for each conversation.

### Programmable hot keys

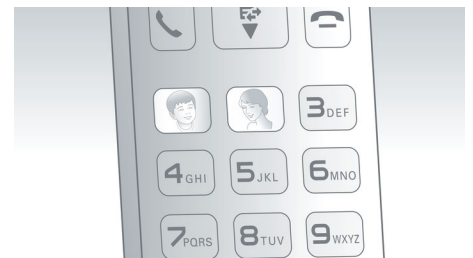

Now calling the people you care about most is easier than ever. With simple one-touch dialling, you will never have to search for their number again. You can programme up to 2 keys for instant calling.

# Specifications

## Convenience

- Menu structure in the handset: List Menu
- Speakerphone — talk hands-free
- Signal strength indicator: 3 bar indicator
- Battery level indicator: 3 bar battery icon
- Intercom — multiple handsets
- Date/Time display
- Battery charge indication
- Signal strength indication
- Programmable hot keys: Key 1 and 2
- Call Management: Call Waiting\*, Caller ID\*, Microphone mute, Missed Calls, Received Calls
- Keypad lock
- Key tone on/off
- Auto hang up
- Multi-base capability: 1
- Base Station keys: Paging key, Volume control, Answering machine keys
- Up to 16 hrs talk time
- Up to 180 hrs standby time
- Charge time: 8 hours
- Line cord length: 1.8 m
- Power cord length: 1.8 m
- Range: Open field <300 m; indoor <50 m
- Non-slip grip: Circular texture

## Sound

- Volume control on handset
- Ringtones on handset: 10 polyphonic

## Picture/Display

- Display size: 4.1 cm/1.6"
- Display type: 1-line dot matrix + 1-line numeric + icons
- Backlight: Yes
- Backlight colour: Amber

## Answering Machine

- Recording time capacity: up to 25 minutes

- Pre-recorded OGM
- Message counter on base: LED (Soft Amber)
- Loud speaker on base
- Answering Machine control: from base and handset

## Memory Capacity

- Phonebook: 50 names and numbers
- Redial List Capacity: Last 10 numbers
- Call log entries: 20 entries
- Phonebook store in the base

## Power

- Battery Capacity: 550 mAh
- Battery type: AAA NiMH Rechargeable
- Mains power: AC 100-240 V ~50/60 Hz

## Security

- Transmission encryption: Yes

## Network Features

- Compatible: GAP

## SAR Value

- Philips handsets: <0.1 W/kg

## Eco Design

- Eco+

## Packaging dimensions

- Packaging type: Box
- Number of products included: 1
- Type of shelf placement: Laying
- Packaging dimensions (W x H x D): 25 x 13.6 x 8.5 cm
- Gross weight: 0.898 kg
- Net weight: 0.752 kg
- Tare weight: 0.146 kg
- EAN: 48 95229 12769 2



Issue date 2022-08-03

Version: 1.0.1

12 NC: 8670 001 84215  
EAN: 48 95229 12769 2

© 2022 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* \*\*This feature requires additional subscription to Caller ID service.  
Please check with your local network operator for details.