

# PHILIPS

## Luceo design cordless phone

30 min answering machine  
1.8" display/white backlight  
Handset speakerphone  
2 handsets  
M6652WB



## A new beginning

Iconic in every way, the Philips Luceo cordless phone conveys sensual lines in a modern design that seamlessly melds with its integrated secondary base display. Precision styling and functions make Luceo a welcome masterpiece in any home.

### **Eco-conscious product**

- Zero power emission when ECO+ mode is activated

### **Ultimate calling experience**

- Handset speakerphone allows you to talk hands-free
- HQ-Sound: high quality acoustic engineering for superb sound
- Privacy settings: call block, silence mode, call barring
- Three-field entries for assigning 3 numbers to one contact
- Up to 30 minutes of messages on your answering machine
- High-contrast 4.6 cm (1.8") white-on-black graphical display

### **Exquisite design with high quality execution**

- Calibrated keys for precise dialling
- Charge handset either way around
- Secondary display on the base shows caller ID and clock
- Guiding side walls on the base ensure secure docking
- Smart cable management maintains visual appeal from all angles

# Highlights

## 4.6 cm (1.8") graphical display



A high-contrast white-on-black reverse LCD display ensures easy reading and also melds perfectly with the Philips Luceo's overall sleek design language.

## Calibrated keypad



The calibrated and carefully designed keypad ensures precise dialling where you clearly feel every keystroke, whether you are dialling a number or entering a phonebook contact. Materials and key structures have undergone extensive user tests to find a perfect balance between pressing force and key response.

## ECO+ mode



Philips phones are energy efficient and designed to be respectful to the environment. When ECO mode is activated the emitted radiation is reduced by up to 60%, and up to 95% when the phone is charging. With ECO+ mode activation the radiation drops to zero.

## Handset speakerphone




Hands-free mode uses a built-in loudspeaker to amplify the voice of the caller, allowing you to speak and listen during a call without holding the phone to your ear. This is especially useful if you want to share the call with others or simply multitask.

## Hassle-free charging



For reliability and convenience the handset can be charged in both directions of the docking station.


## HQ-Sound

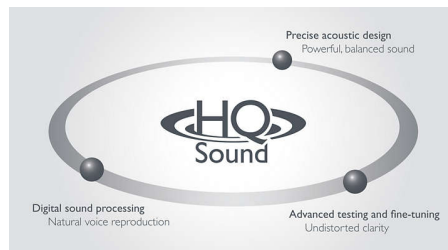

HQ-Sound: high quality acoustic engineering for superb sound reproduction. We build upon decades of experience and breakthrough innovations in developing Hi-Fi audio products and high-end headphones to deliver excellent voice clarity on our DECT phones. When it comes to improving sound quality, our acoustics engineers and architects have thought of everything — high quality components, digital

signal processing, precise acoustic design, advanced testing and fine-tuning. The result is sound that is crisp, clear and authentic. Sound so good and natural, it is almost like being there in person.

## Multiple privacy settings

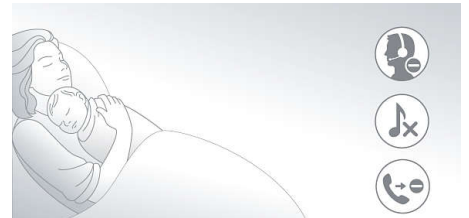

Blacklist restricts calls from specific numbers or numbers starting with certain digits, keeping unwanted calls away. You can block 4 sets of numbers. Each set of numbers can consist of 1 to 24 digits. When there is an incoming call from a number starting with one of these numbers or from one of 4 exact Caller numbers, the phone will not ring. With silence mode you can disable the ringtones at specific times to enjoy peace and silence. Thanks to Call barring, you can avoid expensive phone bill surprises by blocking calls to specific numbers starting with certain digits.

## Secondary display on the base



The Philips Luceo's high-contrast white-on-black display seamlessly and stylishly integrates with its base. The display shows the caller ID when there is an incoming call and the time when in idle mode. You can choose to turn off the base display – so as not to be disturbed by any light – at any time.

# Highlights

## Side walls for secure docking



The base of the Philips Luceo boasts cleverly designed side walls, which not only serve as an attractive design highlight but also helpfully guide the handset securely into place for docking and charging.

## Smart cable management

Smart cable management maintains visual appeal from all angles

## Up to 30 min. recording

With up to 30 minutes' recording time on your answering machine, you'll never miss an important message.

## Three-field phonebook entries



These days most people have multiple contact numbers. Our contact list makes it easier for you to manage your phone contacts. Simply save three phone numbers for up to 100 contacts with a choice of three different field names for home, work and mobile.

# Specifications

## Sound

Sound Profile: MySound  
Volume control on handset  
Ringtones on handset: 10 polyphonic  
HQ-Sound

## Convenience

Menu structure in the handset: List Menu  
Base Station keys: Paging key  
Number of keys: 20  
Speakerphone — talk hands-free  
Personalisation: Silent mode  
Call Management: Call Waiting\*, Caller ID\*,  
Microphone mute, Missed Calls, Received Calls,  
Dialled calls  
Call barring: Restrict the phone from making  
specific outgoing calls  
Backlit keypad: White  
Signal strength indicator: 3 bar indicator  
Battery level indicator: 3 bar battery icon  
Intercom — multiple handsets  
Date/Time display  
Alarm Clock  
Multi-handset capability: Up to 3  
Programmable hot keys: Key 1 and 2  
Keypad lock  
Key tone on/off  
Auto hang up  
Illuminated keypad  
Enlarge dialling digit  
Up to 16 hrs talk time  
Up to 250 hrs standby time

Charge time: 8 hours  
Line cord length: 1.8 m  
Power cord length: 1.8 m  
Range: Open field <300 m; indoor <50 m  
Family Notes  
Block callers/Blacklist\*: Restrict the phone from  
ringing on specific incoming numbers  
Event notifications: For missed calls and  
answering machine messages

## Power

Battery Capacity: 550 mAh  
Mains power: AC 100-240 V ~50/60 Hz  
Battery type: AAA NiMH Rechargeable

## Packaging dimensions

Height: 9.5 cm  
Packaging type: Carton  
Type of shelf placement: Laying  
Width: 31.8 cm  
Depth: 12.5 cm  
Number of products included: 1  
EAN: 48 95229 10334 4  
Gross weight: 0.984 kg  
Nett weight: 0.88 kg  
Tare weight: 0.104 kg

## Picture/Display

Backlight colour: White  
Backlight: Yes  
Base display size: 7.0 cm/2.77"

Base display type: Reversed dot matrix  
Handset display size: 4.6 cm/1.8"  
Handset display type: Reversed dot matrix

## Answering Machine

Recording time capacity: Up to 30 minutes  
Pre-recorded OGM  
Answering machine control: from handset only

## Memory Capacity

Call log entries: 50 entries  
Phonebook: 100 names and numbers  
Redial List Capacity: Last 20 numbers  
Phonebook store in the base  
Multiple phonebook entries: Up to 3 numbers

## Security

Transmission encryption: Yes

## SAR Value

Philips handsets: <0.1 W/kg

## Eco Design

EcoMode: Automatic and manual  
Eco+

## Network Features

Compatible: GAP

