



Philips  
Soundbar speaker

2.1 CH wireless subwoofer

Bluetooth® and NFC  
HDMI ARC  
120W

HTL3110B



## Powerful sound for any TV

with wireless subwoofer

Unleash the full sound potential of all your media devices and enjoy the freedom of placement provided by the wireless subwoofer. This soundbar works with your TV, discs players, gaming console, USB and Bluetooth devices.

### Connect and enjoy all your entertainment

- EasyLink to control all HDMI CEC devices via a single remote
- Enjoy MP3/WMA music directly from your portable USB devices
- Works with TVs, BD/DVD players, gaming consoles, MP3 players
- One-touch with NFC-enabled smartphones for Bluetooth pairing
- Stream music wirelessly via Bluetooth™ from your smartphone

### Designed for simplicity

- Low-rise profile for the perfect fit in front of your TV
- Flexible placement on the wall, tabletop or stand

### Richer sound for watching TV and movies

- Virtual Surround Sound for a realistic movie experience
- Dolby Digital for ultimate movie experience
- Twin tweeters for optimum clarity performance
- External subwoofer adds thrill to the action
- Wireless subwoofer adds thrill to the action


# PHILIPS

Soundbar speaker  
2.1 CH wireless subwoofer Bluetooth® and NFC, HDMI ARC, 120W

HTL3110B/F7


# Highlights

## Virtual Surround Sound

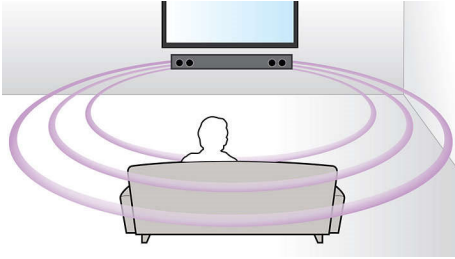

Philips Virtual Surround Sound produces rich and immersive surround sound from less than five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. Any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

## Dolby Digital

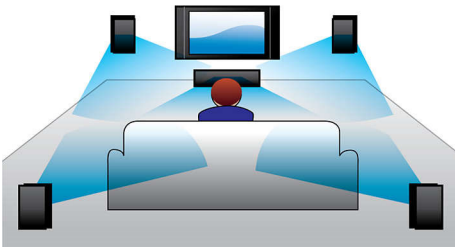

Because Dolby Digital, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb quality surround sound audio with realistic spatial cues.

## Twin tweeters (HC 1012)

Twin tweeters for optimum clarity performance

## One-touch with NFC



Pair Bluetooth® devices easily with one-touch NFC (Near Field Communications) technology. Just tap the NFC enabled smartphone or tablet on the NFC area of a soundstage to turn the soundstage on, start Bluetooth® pairing, and begin streaming music.

## Stream music via Bluetooth™



Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favorite music, sound from video or game wireless on this speaker easily.

## EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker,

Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

## USB



Enjoy MP3/WMA music directly from your portable USB devices

## Wireless subwoofer



Wireless subwoofer adds thrill to the action

## Low-rise profile



Low-rise profile for the perfect fit in front of your TV



# Specifications

## Sound

- Sound Enhancement: Treble and Bass Control, Virtual Surround Sound, Night Mode
- Sound System: Dolby Digital
- Subwoofer output power: 60W
- Speaker output power: 2 x 30 W
- Total Power RMS @ 10% THD: 120 W

## Loudspeakers

- Loudspeaker types: Integrated with main unit
- Subwoofer freq range: 45-200 Hz
- Subwoofer driver: 1 x 5.25" woofer
- Subwoofer type: Wireless subwoofer
- Subwoofer impedance: 3 ohm
- Speaker Drivers per side: 1 Mylar tweeter, 1 woofer
- Speaker Impedance: 8 ohm
- Tweeter Impedance: 16 ohm

## Connectivity

- Integrated Connections: Bluetooth, NFC
- Rear Connections: AUX in, Digital coaxial in, Digital optical in, HDMI 1.4 output (ARC)
- iPod/iPhone: via bluetooth
- Top connections: USB 2.0

## Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough,

System standby

- HDMI Features: Audio Return Channel (ARC), Content Type

## Power

- Power consumption: 35 W
- Standby power consumption: < 0.5 W
- Subwoofer power consumption: 20 W
- Subwoofer Power supply: 110-240 V~; 50-60 Hz
- Main unit power supply: 100-240V AC, 50/60 Hz

## Accessories

- Included accessories: AAA Battery (x1), Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, 2 x Power cords, AC Adapter

## Design

- Wall mountable

## Dimensions

- Main Unit (W x H x D): 843 x 52 x 60 mm
- Weight incl. Packaging: 8.2 kg
- Main Unit Weight: 1.4 kg
- Packaging (W x H x D): 790 x 285 x 300 mm
- Subwoofer (W x H x D): 190 x 250 x 315 mm
- Subwoofer Weight: 3.9 kg

## Sustainability

- Packaging: 80% recycled corrugated board



Issue date 2024-04-13

Version: 5.1.6

UPC: 6 09585 24190 9

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)