


FWM70



PHILIPS

Use this simple and quick guide to get started listening to your favorite music.

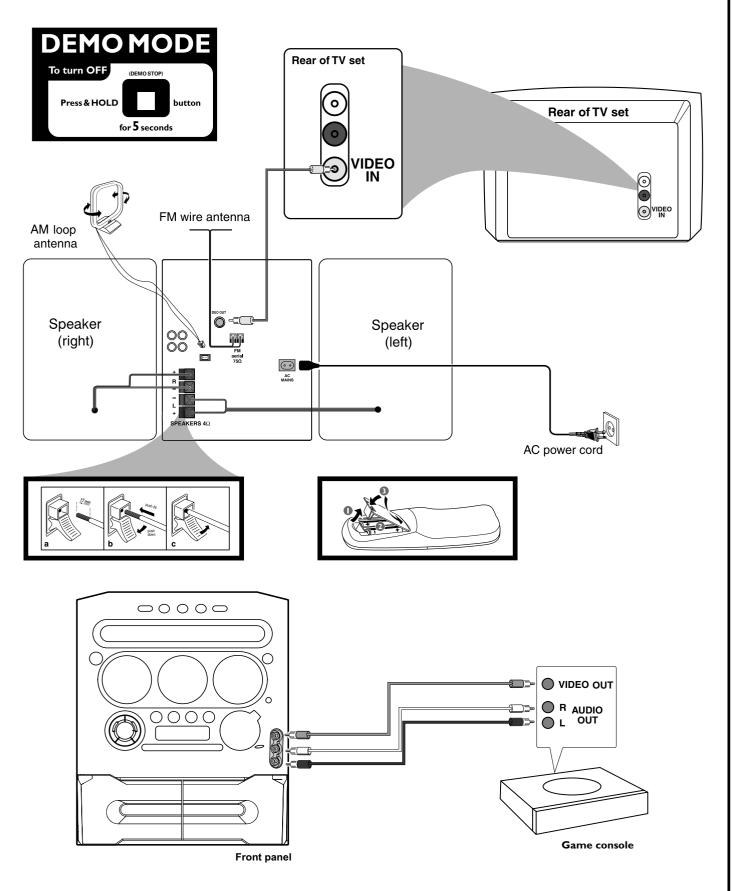

For more detailed instrustions, see the following pages in the User Guide.

Gameport Operations	15
Basic Operations	16~17
Disc Operations	18~20
Tuner Operations	21
Tape Operations/Recording	22~23
Timer Operations	24~25
Troubleshooting	27

A Plug and Play




When you turn on the mains supply, "AUTO INSTALL - PRESS PLAY" is displayed.



Press ▶ ■ on the system to start installation.

- → "INSTALL" is displayed, followed by "TUNER" and "AUTO".
- → **PROG** starts flashing.
- → When all the available radio stations are stored or the memory for 40 presets are used, the last preset radio station (or the first available RDS station) will be played.

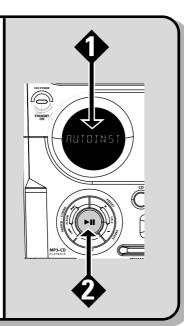

B Timer Operations



Press and hold **CLK/TIMER** (or **CLOCK-TIMER** on main unit) until "SELECT CLOCK OR TIMER" is displayed.



Press **-/+** to change the display to "TIMER" and press **CLOCK•TIMER** again to confirm.



Press **CD** or **TUNER** or **TAPE** to select the wake-up source.




Press I◀◀ or ▶►I (for hours) and ¬ or + (for minutes) repeatedly to set the wake-up time.



Press **CLOCK•TIMER** to store the setting.

To exit without storing the setting

Press ■ on the system.

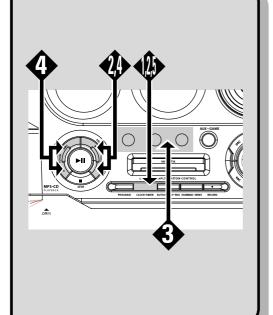

C Loading discs



Press **OPEN•CLOSE** \triangle on the main unit to open the disc trays.



Load a disc with the label side facing up.



Press **OPEN•CLOSE ≜** again to close the disc tray.



Press ▶ **II** to play the CD.

