# Always there to help you

Register your product and get support at www.philips.com/support

NTRX500





# User manual



# **Contents**


1	Important	2
	Safety	2
2	Notice	4
3	Your Mini Hi-Fi System Introduction What's in the box Overview of the main unit Overview of the remote control	6 6 6 7 8
4	Connect FM antenna Connect AM antenna Connect power	10 10 10 10
5	Get started Prepare the remote control Turn on	12 12 12
6	Play Play from a disc or USB device Play audio through Bluetooth Play from external audio devices	13 13 15 15
7	Listen to radio Tune to a radio station Program radio stations automatically Program radio stations manually Select a preset radio station Change AM tuning grid	17 17 17 17 17 17

8	Adjust volume level and sound effect	18
	Adjust volume level	18
	Mute sound	18
	Apply AUTO DJ effect	18
	Apply DJ effects manually	18
	Select a preset sound effect	18
	Enhance bass	19
	Apply NX Bass	19
	Adjust equalizer settings	19
9	Other features	20
	Mix sound	20
	Speak or sing with a microphone	20
	Turn the decorative light on or off	20
10	Product information	21
	Specifications	21
	USB playability information	21
	Supported MP3 disc formats	22
	Maintenance	22
11	Troubleshooting	23
	About Bluetooth device	23

# 1 Important

# Safety

# Know these safety symbols



This 'bolt of lightning' indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

The 'exclamation point' calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

WARNING:To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot, fully insert.




#### Warning

- · Never remove the casing of this device.
- · Never lubricate any part of this device.
- Never place this device on other electrical equipment.
- Keep this device away from direct sunlight, naked flames or heat.
- · Never look into the laser beam inside this device.
- Ensure that you always have easy access to the power cord, plug, or adaptor to disconnect this device from the power.

# Important Safety Instructions

- (1) Read these instructions.
- Keep these instructions.
- (3) Heed all warnings.
- (4) Follow all instructions.
- (5) Do not use this apparatus near water.
- (6) Clean only with dry cloth.
- O not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- (8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.



- 10 Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- (1) Only use attachments/accessories specified by the manufacturer.

12 Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- ① Unplug this apparatus during lightning storms or when unused for long periods of time.
- (14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- (15) Battery usage CAUTION To prevent battery leakage which may result in bodily injury, property damage, or damage to the remote control:
  - Install all batteries correctly, + and as marked on the remote control.
  - Do not mix old and new batteries.
  - Remove batteries when the remote control is not used for a long time.
  - The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- (6) Apparatus shall not be exposed to dripping or splashing.
- ① Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).

- (8) This product may contain lead and mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance; www.eiae.org.
- (9) Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.



#### Caution

 Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

# 2 Notice

Any changes or modifications made to this device that are not expressly approved by WOOX Innovations may void the user's authority to operate the equipment.

#### Notice for the USA and Canada

This device complies with Part 15 of the FCC Rules and RSS standard of Industry Canada. Operation is subject to the following two conditions:

- 1 this device may not cause harmful interference, and
- 2 this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Relocate the receiving antenna.
- Increase the separation between equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF Radiation Exposure Statement: This equipment complies with FCC's and IC's RF radiation exposure limits set forth for an uncontrolled environment. The antenna(s) used for this transmitter must be installed and operated to provide a separation distance of at least 20 cm from all persons and must not be collocated or operating in conjunction with any other antenna or transmitter. Installers must ensure that 20cm separation distance will be maintained between the device (excluding its handset) and users.

CAN ICES-3(B)/NMB-3(B).

#### Disposal of your old product and battery



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

This product may contain lead and mercury.

Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities.

This product contains batteries:

- Dispose of batteries properly. Do not incinerate. Batteries may explode if overheated.
- Do not wrap in metal or aluminum foil. Wrap in newspaper before discarding.
- It is suggested that you contact your local town or city to determine proper battery redemption site(s) in your area.
- Please visit www.call2recycle.org for additional information on a recycling center in your area for rechargeable batteries.

#### Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

This apparatus includes this label:





This is CLASS II apparatus with double insulation, and no protective earth provided.

# Bluetooth

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by WOOX Innovations is under license.



Note

· The type plate is located on the back of the unit.



The making of unauthorized copies of copyprotected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.

# Your Mini Hi-Fi System

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.Philips.com/welcome.

# Introduction

#### With this unit, you can

- enjoy audio from discs, USB storage devices, Bluetooth enabled devices, or other external devices:
- swap play between the dual audio sources with the cross fader:
- listen to FM or AM radio stations:
- speak or sing with microphones through the loudspeakers of the unit; and
- record to a USB storage device.

#### To enrich sound, this unit offers you these sound effects:


- Digital Sound Control (DSC)
- Dynamic Bass Boost (DBB)
- DI effects
- NX Bass Enhancement

# What's in the box

Check and identify the contents of your package:

- Main unit x 1
- Remote control with 2 AAA batteries
- FM wire antenna x 1
- AM loop antenna x 1
- Short user manual

# Overview of the main unit

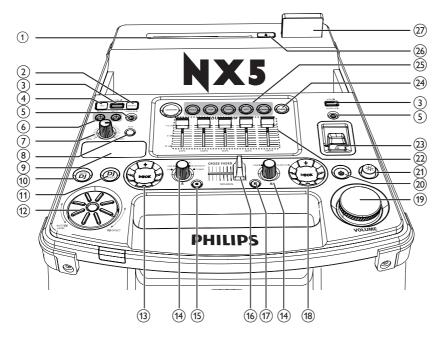

- 1 Disc slot
- 2 DELETE
  - In USB A mode, delete audio files stored on a USB device.
- (3) ← A/B
  - Connect USB mass storage devices.
- 4 REC
  - In USB A mode, record to a USB device.
- 5 AUDIO IN A/B
  - · Connect an external audio device.
- 6 MIC 1/2 (Microphone ports)
  - Connect a microphone.
- (7) MIC volume knob
  - Adjust microphone volume.
- (8) AUX
  - Select an audio source from an external device: DVD, PC, TV or GAME player.

- 9 Display panel
  - Show status.
- (10) AUTO DI
  - In USB A mode, apply AUTO DJ effect automatically.
- ① DJ EFFECT
  - In CD, USB A, Bluetooth, Tuner, or Audio in A mode, apply DJ effects manually.
- (12) DI EFFECT dial
  - Adjust DJ effect level and AUTO DJ effect level.
- (13) Control play panel (left)
  - Control play for Source A modes (including Disc, USB A, Bluetooth, and Tuner modes).
- (14) Source selector
  - · Select an audio source.

## (15) **■** (Left)

- In Disc or USB A mode, stop playing.
- Exit the recording process.
- In Tuner mode, switch between FM and AM bands.

#### (16) CROSS FADER

 Adjust the left/right channel balance during playback.

# 17 **■** (Right)

In USB B mode, stop playing.

## (18) Control play panel (right)

Control play for USB B mode.

#### (19) Volume knob

Adjust volume.

## (20) <sub>(j)</sub>

 Turn on the unit or switch to standby mode.

#### (21) 🌣

Enable or diable the speaker lighting effect.

## 22) Custom Equalizer

 In CUSTOM mode, adjust the equalizer settings for each of the 5 frequency ranges by moving the slider bars.

## 23) NX Bass button

• Turn NX Bass effect on or off.

## 24) DBB

 Turn dynamic bass enhancement on or off

## 25 Sound effect keys


Select a preset sound equalizer setting.

# 26 🛓

• Eject the disc.

# (27) Bluetooth indicator

# Overview of the remote control

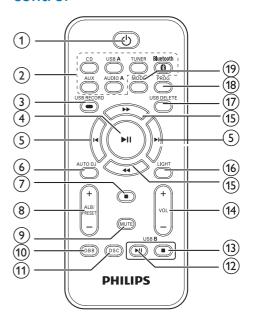

- (1) <sub>(j)</sub>
  - Turn on the unit or switch to standby mode.

# 2 Source selection keys

Select a source.

## (3) USB RECORD

Record to a USB device.

#### **4**) ▶Ⅱ

• In Disc, USB A, or Bluetooth mode, start or pause play.

# ⑤ | ◀ / ▶ |

• In Disc, USB A, or Bluetooth mode, skip to the previous or next track.

# 6 AUTO DJ

 In USB A mode, apply AUTO DJ effect automatically.

# 7

- In Disc or USB A mode, stop playing.
- Exit the recording process.

#### (8) ALB/PRESET+/-

- Skip to the previous or next album.
- Select a preset radio station.

#### 9 MUTE

• Mute or unmute volume.

#### (10) DBB

• Turn dynamic bass enhancement on or off.

#### (11) DSC

· Select a preset sound equalizer setting.

#### (12) USB B ▶ II

• In USB B mode, start or pause play.

#### (13) USB B ■

• In USB B mode, stop play.

#### (14) VOL +/-

· Adjust volume.

#### (15) ◀◀ / ▶▶

- · Adjust radio frequency.
- In Disc or USB A mode, search within a track.

#### (16) LIGHT

• Enable or diable the speaker lighting effect.

#### (17) USB DELETE

• In USB A mode, delete audio files stored on a USB storage device.

#### (18) PROG

- · Program tracks.
- · Program radio stations.

#### (19) MODE

• In Disc or USB A mode, select a play mode.

#### 2 Connect the AM loop antenna to the AM Connect jack on the back of the main unit.

# Connect FM antenna

Connect the supplied FM antenna to the FM jack on the back of the main unit.





# Connect AM antenna



Note

- · For better reception, adjust the position of the AM antenna.
- Assemble the AM loop antenna.

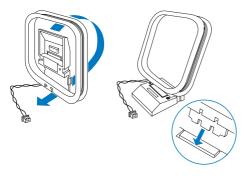



# Connect power




#### Caution

- Risk of product damage! Make sure that the power supply voltage corresponds to the voltage printed on the back or the underside of the product.
- Risk of electric shock! When you unplug the power cord, always pull the plug from the socket. Never pull the cord.




• Before connecting to AC power, make sure that you have completed all other connections.

Connect the AC power plug to the power outlet.

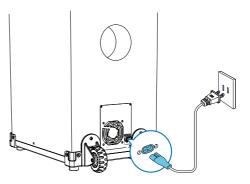



 When you are not using or are transporting the unit, to keep the power cord organized and above the ground, fix the power cable with the cable tie on the back panel of the main unit.

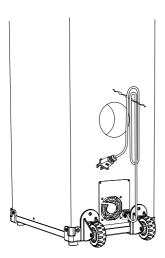

# 5 Get started



#### Caution

 Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

Always follow the instructions in this chapter in sequence.

If you contact Philips, you will be asked for the model and serial number of this apparatus. The model number and serial number are on the back of the apparatus. Write the numbers here: Model No.

		_	_		-	 	 	 		_	_	 _	_
C	Δr	٠.	1	N	۱.								
`	⊖r	12	ш	I١	( )								

# Prepare the remote control




#### Note

- Danger of explosion if battery is incorrectly replaced.
   Replace only with the same or equivalent type.
- Batteries contain chemical substances, so they should be disposed of properly.

#### To replace the remote control battery:

- 1 Open the battery compartment.
- 2 Insert two AAA batteries with correct polarity (+/-) as indicated.
- 3 Close the battery compartment.



## Turn on

#### Press O.

→ The unit switches to the last selected source.

## Switch to standby mode

Press  $\circ$  to switch the unit to standby mode.

→ The backlight on the display panel becomes dim.

# To switch the unit to Eco Power standby mode:

In standby mode, press and hold  $\ensuremath{\mathfrak{O}}$  for 2 seconds.

→ The backlight on the display panel turns off

# 6 Play

# Play from a disc or USB device


# Play disc



Note

- Make sure that the disc contains playable audio contents.
- 1 Press CD to select the disc source.
- 2 Slide CROSS FADER to the far left.
- 4 Insert a disc into the disc slot, with the printed side facing up.
- 5 Press ►II to start play.
  - To pause or resume play, press ►II.
  - To stop play, press (left).
  - To select another track, press I or ►I.
  - To select an album, press ALB/ PRESET+/-.
  - To search within a track, press and hold ◀◀ / ▶▶, then release to resume normal play.

# Play from a USB A device

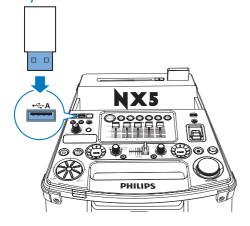



#### Vote

- Make sure that the USB device contains playable audio contents in supported formats.
- 1 Insert the USB plug of the device into the ← A socket.
- 2 Press **USB** A to select the USB A source.
- 3 Slide CROSS FADER to its far left.
- 4 Press ALB/PRESET+/- to select an album.
- Press I or I to select an audio file.
- 6 Press ►II to start play.
  - To pause or resume play, press ►II.
  - To stop play, press (left).
  - To search within an audio file, press and hold ◀◀ or ▶▶, then release to resume normal play.

#### Delete from a USB device

- 1 In USB A mode, press to stop music playback.
- 2 Press ALB/PRESET+/- to select an audio folder
- 3 Press I or I to select an audio file.
- 4 Press **USB DELETE** repeatedly to select:
  - **[DEL FILE]** (Delete file): Delete current audio file.
  - [DEL DIR] (Delete directory): Delete current audio folder.
  - **[FORMAT]** (Format): Delete all files in the USB device..
- 5 Press ►II to confirm the selection.
  - → A confirmation message is displayed.
  - To cancel, press



Note

The function is not available in USB B mode



#### Caution

 If [FORMAT] is selected, all files (including non-audio files) stored in the USB device will be erased.

#### Record to a USB device

MP3 files, radio, and audio from external devices are recorded in .mp3 format. The first time you record to a USB device, a folder is automatically created on the USB device. Each time you record to a USB device, the recorded files are stored in a subfolder of this folder. Files and subfolders are named numerically in the order in which they are created.

- 1 Connect a USB device to ← A socket.
- 2 Prepare the source to record from.
  - Disc: Select the CD source and load a disc, then select a track to start recording.
  - Radio:Tune to a radio station.
  - AUDIO IN/AUX: Select the Audio-in or AUX source, then connect and play from an external device.
  - USB B: Select USB B source, then connect and select an audio file to play.
- 3 Press USB RECORD to start recording.
  - For Disc mode, press USB RECORD repeatedly to select:
  - (A) [REC ONE] (record one): the first or current track is recorded.
  - (B) [REC ALL] (record all): all tracks or the remaining tracks are recorded.
  - → Play starts automatically from the beginning of the disc or the selected track, and the recording starts.
  - To stop recording, press ■.



- If the USB device does not have enough memory to store the audio files, a "Full memory" message is displayed.
- This function is not available in USB B and Mix sound mode.
- This function is not available when AUTO DJ or DJ EFFECT effects are applied.

# Play from a USB B device

1 Insert the USB plug of the device into the 
♣ B socket.

PHILIPS

- 2 Rotate the source selector to select the USB B source.
- 3 Slide CROSS FADER to its far right.
  - 4 Use the control play panel (right) on the top of the main unit to control play.
    - To start, pause, or resume play, press ▶■■.
    - To select an album, press +/-.
    - To select an audio file, press ◀◀ or ▶▶ .
    - To stop play, press (right).
    - To search within an audio file, press and hold ◀◀ or ▶▶, then release to resume normal play.

# Play options

# Repeat and random play

- 1 In Disc or USB A mode, press MODE repeatedly to select:
  - [REP ONE] (Repeat one): Play the current track repeatedly.
  - **[REP ALL]** (Repeat all): Play all tracks repeatedly.
  - [RANDOM] (Random): Play all tracks randomly.
- To return to normal play, press MODE repeatedly to select [OFF] (off).



 Random play cannot be selected when you play the programmed tracks.

## **Program tracks**

You can program a maximum of 40 tracks.

- 1 In Disc or USB A mode, press to stop playing.
- Press PROG to activate the program mode.

  → A number flashes on the screen.
- 3 For MP3 tracks, press ALB/PRESET+/- to select an album.
- 4 Press I or I to select a track number, then press PROG to confirm selection.
- 5 Repeat steps 3 to 4 to program other tracks.
- 6 Press ►II to play the programmed track.
  - To erase the program, press twice.



Note

• The function is not available in USB B mode.

# Play audio through Bluetooth

The unit uses Bluetooth wireless technology to stream music from your Bluetooth device to the system.



Note

- Make sure that your Bluetooth device is compatible with this product.
- Before pairing a device with this unit, read its user manual for Bluetooth compatibility.
- The effective operation range between the unit and a Bluetooth device is approximately 10 meters (30 feet).
- The unit can memorize a maximum of 8 paired devices.
- Any obstacle between the unit and a Bluetooth device can reduce the operational range.
- Keep away from any other electronic device that may cause interference.

- 1 Slide CROSS FADER to the far left.
- 2 Press Bluetooth to turn on the Bluetooth function of the unit.
  - → The Bluetooth indicator blinks.
- 3 On your Bluetooth device, enable Bluetooth and search for Bluetooth devices (refer to the user manual of the device).
- 4 When [PHILIPS NTRX500] (Philips NTRX500) is displayed on your device, select it to start pairing and connection. If necessary, enter default password "0000".
  - → After successful pairing and connection, the LED indicator turns solid blue.
- 5 Play audio on your device.
  - → Audio streams from your device to the unit.
  - To start, pause, or resume play, press
     II.
  - To select another track, press I or ►I.

#### To disconnect the Bluetooth-enabled device:

- Disable Bluetooth on your device; or
- Move the device beyond the communication range.

#### To connect another Bluetooth-enabled device:

 Disable Bluetooth on the current device, and then connect another device.

# Play from external audio devices

You can listen to an external audio device through the speakers of this unit.

# Play from an MP3 player

- 1 Press AUDIO A to select the MP3 link source.
- 2 Slide CROSS FADER to the far left.
- 3 Connect an audio input cable (not supplied) with a 3.5 mm connector on both ends to:

- the AUDIO IN A socket on the unit, and
- the headphone socket on the MP3 player:
- 4 Play audio on the MP3 player (refer to its user manual).



 If the MP3 player is connected to the AUDIO IN B socket, rotate the source selector on the main unit to select the Audio In B source.

## Play from other audio device

You can connect a PC or other audio devices to this unit.

- 1 Press AUX repeatedly to cycle through GAME, PC-IN, TV and DVD sources.
- 2 Connect the white and red audio cables (not supplied) to:
  - the AUX sockets on the back of the main unit.
  - the headphone socket on a PC, or the AUDIO OUT socket on an external device.
- 3 Play audio on the device (refer to the user manual of the device).

# 7 Listen to radio

# Tune to a radio station



Tip

- Keep the unit away from other electronic devices to avoid radio interference.
- For better reception, fully extend and adjust the position of the antenna.
- 1 Slide CROSS FADER to the far left.
- 2 Press TUNER on the remote control, or (Left) on the main unit repeatedly to select FM or AM tuner.
- 3 Press and hold ◀◀ or ▶▶ for 2 seconds.
  - → [SEARCH] (search) is displayed.
  - → The radio tunes to a station with strong signal automatically .
- 4 Repeat step 3 to tune to more stations.
  - To tune to a station manually, press ◀
     or ▶▶ repeatedly until you find optimal reception.

# Program radio stations automatically



Note

 You can program a maximum of 30 FM and 10 AM radio stations.

In tuner mode, press and hold **PROG** for 2 seconds to activate automatic program mode.

- → [AUTO] (auto) is displayed.
- → The unit stores radio stations with sufficient signal strength automatically.
- → After all available radio stations are stored, the first stored radio station is broadcast automatically.

# Program radio stations manually

- 1 Tune to a radio station.
- Press PROG to activate the program mode.
  - → A position number is displayed.
- 3 Press ALB/PRESET+/- to allocate a number to this radio station, then press PROG to confirm.
- 4 Repeat steps 1-3 to program other stations.



Tip

 To overwrite a programmed station, store another station in its place.

# Select a preset radio station

In tuner mode, press **ALB/PRESET+/-** to select a preset number.

# Change AM tuning grid

In some countries, the AM radio frequency step between adjacent channels is 10 kHz or 9 kHz.

- In AM tuner mode, press and hold for 5 seconds.
  - → The frequency step is changed to 9 kHz or 10 kHz.
  - → All preset stations are erased and reprogrammed in AM mode.

# 8 Adjust volume level and sound effect

# Adjust volume level

During play, press VOL +/- to increase or decrease volume.

# Mute sound

During play, press MUTE to mute or unmute sound.

# Apply AUTO DI effect

The AUTO DJ function adds various sound and playback effects to your music automatically:

Effects	Description
Auto effect	Add different sound effects to
	the music automatically.
Cross fade	Fade one piece of music out
	while fading another piece of
	music in at the same time.
Back spin	Rewind the music to a previous
	point.
Loop	Repeat playing a section of the
	music.
Beat box	Add beat box effects to the
	music.
Voice	Add a sound during playback.
sampling	

- To apply AUTO DI effects, press AUTO DI repeatedly to select from:
  - [METAL] (Metal), and
  - [PARTY] (party)
- To turn off the AUTO DI effects, press **AUTO DJ** repeatedly to select **[OFF]** (Off).

To adjust the occurrence frequency and sound level of the added effects, rotate the DI EFFECT dial.



#### Note

- These effects are added by the application automatically and randomly.
- The function is only available in USB A mode.

# Apply DI effects manually

You can also add the preset DI effects by yourself.

- Press DI EFFECT repeatedly to select an effect:
  - [SCRATCH] (scratch)
  - [REVERB] (reverb)
  - [BEAT BOX] (beat box)
  - [YEAH] (yeah)
- To turn off the DI effects, press DI EFFECT repeatedly to select [OFF] (off).
- To apply the sound level of the added effects, rotate the DJ EFFECT dial.



The function is not available in USB B mode and Audio in B mode.

# Select a preset sound effect

The DSC (Digital Sound Control) enables you to enjoy special sound effects.

- During play, press DSC repeatedly to select:
  - [ROCK] (rock)
  - [POP] (pop)
  - [TECHNO] (techno)
  - [|AZZ] (jazz)
  - [SAMBA] (samba)

# **Enhance bass**

The best Dynamic Bass Enhancement (DBB) setting is generated automatically for each DSC selection. You can manually select the DBB setting that best suits your listening environment.

- During play, press DBB repeatedly to select:
  - DBB 1
  - DBB 2
  - DBB 3
  - DBB OFF

# Apply NX Bass

NX Bass effect adds clean and lively characteristics to your music with rather low background noise.

- 1 Open the cover on the NX Bass button.
- Press the NX Bass button. The sound will change in 3 stages:
  - Stage 1:The sound volume increases to a higher level and stays at this level for 5 seconds.
  - → [FIRING] (firing) is displayed.
  - Stage 2:The sound volume gradually decreases to its original level in 10 seconds.
  - → [DISCHARGE] (discharge) is displayed.
  - Stage 3:The sound volume keeps at normal level for 40 seconds.
  - → [RECHARGE] (recharge) is displayed.



Note

 To reactivate the NX bass effect, press the button again after the 3 stages are completed.

# Adjust equalizer settings

Custom Equalizer lets you increase or decrease the gain for specific frequency ranges, and adjust audio output to your own preferences.

- 1 Press CUSTOM on the main unit.
- 2 Move the slider bars to adjust the equalizer settings for each of the 5 frequency ranges.

# 9 Other features

## Mix sound

You can play from **Source A** (Disc/USB A/ Bluetooth/Tuner/Audio in A mode) and from **Source B** (USB B/Audio in B mode) at the same time

- 1 Play from Source A.
  - Disc: Select the CD source, and play a track in the loaded disc.
  - Tuner:Tune to a radio station.
  - Audio in A: Select the Audio in A source, and play audio on the connected external device.
  - USB A: Select the USB A source, and play audio on the connected USB A device.
  - Bluetooth: Connect a Bluetooth device, and then play audio on the device.
- Play from Source B.
  - Audio in B: Select the Audio in B source, and then play audio on the connected external device.
  - USB B: Select the USB B source, and then play audio on the connected USB B device.
- 3 Use the CROSS FADER control to adjust the balance between Source A and Source B channels during playback.

# Speak or sing with a microphone

With this unit, you can speak or sing to a music source with a microphone.

- 1 Turn the MIC volume knob to the minimum level.
- 2 Connect a microphone (not supplied) to the MIC 1 or MIC 2 socket on the top panel.
- 3 Press CD, TUNER, USB A, AUDIO A, or AUX to select a source, and start play.
- 4 Sing or speak through the microphone.
  - To adjust the volume of the source, press VOL +/-.
  - To adjust the volume of the microphone, turn the MIC volume knob.

# Turn the decorative light on or off

In power-on mode, press **LIGHT** repeatedly to turn the decoration light on or off.

# 10 Product information



#### Note

 Product information is subject to change without prior notice.

# **Specifications**

## **Amplifier**

Total Output Power	650 W (THD 30%)
Frequency Response	60 Hz - 16 kHz
Audio In/Mp3 Link	500mV/2000mV

#### Disc

LaserType	Semiconductor
Disc Diameter	12cm/8cm
Support Disc	CD, CD-R, CD-RW,
	MP3-CD
Audio DAC	24Bits / 44.1kHz
Frequency Response	60Hz -16kHz

# **Speakers**

Speaker Impedance	2 × 3 ohm
Output Power	4 x 163 W

#### Tuner

Tuning Range	FM: 87.5 - 108MHz;
	AM: 531 - 1602kHz (9KHz);
	530 - 1700KHz (10KHz)
Tuning Grid	100KHz (FM); 9KHz/10KHz
	(AM)
Number of	30 FM, 10 AM
Presets	

#### Bluetooth

Bluetooth Version	V2.1+EDR
Supported Profiles	A2DP, AVRCP
Range	10 m (Free space)

## General information

AC Power	120V ~, 60 Hz
Operation Power	90 W
Consumption	
Eco Standby Power	0.5 W
Consumption	
USB Direct	Version 2.0/1.1
USB Port	DC 5V, 500mA
Dimensions - Main	
Unit $(W \times H \times D)$	390 × 1137 × 477 mm
Weight - Main Unit	26 kg

# USB playability information

#### Compatible USB devices:

- USB flash memory (USB 2.0)
- USB flash players (USB 2.0)
- memory cards (requires an additional card reader to work with this unit)

#### Supported formats:

- USB or memory file format FAT12, FAT16, FAT32 (sector size: 512 bytes)
- MP3 bit rate (data rate): 32-320 Kbps and variable bit rate
- Directory nesting up to a maximum of 8 levels
- Number of albums/ folders: maximum 99
- Number of tracks/titles: maximum 999
- ID3 tag v1.2 or later
- File name in Unicode UTF8 (maximum length: 128 bytes)

#### Unsupported formats:

 Empty albums: an empty album is an album that does not contain MP3 files, and is not be shown in the display.

- Unsupported file formats are skipped.
   For example, Word documents (.doc) or MP3 files with extension .dlf are ignored and not played.
- · AAC, WAV, PCM audio files
- WMA files

# Supported MP3 disc formats

- ISO9660, Joliet
- Maximum title number: 999 (depending on file name length)
- Maximum album number: 99
- Supported sampling frequencies: 32 kHz, 44.1kHz, 48 kHz
- Supported Bit-rates: 32-320 (kbps), variable bit rates
- ID3 tag v1.2 or later
- Directory nesting up to a maximum of 8 levels

# **Maintenance**

#### Clean the cabinet

 Use a soft cloth slightly moistened with a mild detergent solution. Do not use a solution containing alcohol, spirits, ammonia or abrasives.

#### Clean discs

 When a disc becomes dirty, clean it with a cleaning cloth. Wipe the disc from the centre out.



 Do not use solvents such as benzene, thinner, commercially available cleaners, or antistatic spray intended for analogue records.

#### Clean the disc lens

 After prolonged use, dirt or dust may accumulate at the disc lens. To ensure good play quality, clean the disc lens with Philips CD lens cleaner or any commercially available cleaner. Follow the instructions supplied with cleaner.

# 11 Troubleshooting



#### Caution

· Never remove the casing of this unit.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this unit, check the following points before requesting service. If the problem remains unsolved, go to the Philips web site (www.philips.com/support). When you contact Philips, ensure that your unit is nearby and the model number and serial number are available.

#### No power

- Make sure that the AC power plug of the unit is connected properly.
- Make sure that there is power at the AC outlet

#### No sound or poor sound

Adjust the volume.

#### No response from the unit

 Disconnect and reconnect the AC power plug, then turn on the unit again.

#### Remote control does not work

- Before you press any function button, first select the correct source with the remote control instead of the main unit.
- Reduce the distance between the remote control and the unit.
- Insert the batteries with their polarities (+/– signs) aligned as indicated.
- Replace the batteries.
- Aim the remote control directly at the sensor on the front of the main unit.

#### No disc detected

- Insert a disc.
- Check if the disc is inserted upside down.
- Wait until the moisture condensation at the lens has cleared.
- Replace or clean the disc.
- Use a finalized CD or correct format disc.

#### Cannot display some files in USB device

- The number of folders or files in the USB device has exceeded a certain limit. This phenomenon is not a malfunction.
- The formats of these files are not supported.

## USB device not supported

• The USB device is incompatible with the unit. Try another one.

# Cannot apply sound effects when playing from a USB B device.

USB B mode does not support DBB, DSC,
 DJ EFFECT or AUTO DJ effects.

#### Cannot delete files from a USB B device.

 USB B mode does not support USB Delete function.

#### Poor radio reception

- Increase the distance between the unit and other electrical appliances.
- Adjust the position of the antenna for better reception.

## About Bluetooth device

# The audio quality is poor after connection with a Bluetooth-enabled device.

 The Bluetooth reception is poor. Move the device closer to this product or remove any obstacle between them.

#### Cannot connect with the device.

- The Bluetooth function of the device is not enabled. Refer to the user manual of the device for how to enable the function.
- This product is already connected with another Bluetooth-enabled device.
   Disconnect that device and then try again.

# The paired device connects and disconnects constantly.

- The Bluetooth reception is poor. Move the device closer to this product or remove any obstacle between them.
- For some devices, Bluetooth connection may be deactivated automatically as a power-saving feature. This does not indicate any malfunction of this product.



Specifications are subject to change without notice. 2014 © WOOX Innovations Limited. All rights reserved. Philips and the Philips' Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used by WOOX Innovations Limited under license from Koninklijke Philips N.V.

