



Philips  
5.1 3D Blu-ray Home  
theater

3D Blu-ray  
1000W

HTB3510

## Powerful cinematic surround sound with deep bass

Pump up your home entertainment experience with the Philips home theater system HTB3510. Exposed speakers drivers offering powerful 1000W with double basepipes and immersive 3D Blu-ray Disc playback.

### Great listening experience

- 1000W RMS power delivers great sound for movies and music
- Dolby TrueHD and DTS-HD for high fidelity surround sound
- Powerful speakers with double basspipes for great sound

### Designed to enhance your cinema at home

- Modern design to complement your home environment

### Simply enjoy all your entertainment

- Audio in to enjoy music from iPod/iPhone/MP3 player
- Full HD 3D Blu-ray for a truly immersive 3D movie experience
- DivX Plus HD Certified for high definition DivX playback
- EasyLink to control all HDMI CEC devices via a single remote
- Turn your Smartphone into a remote for Philips AV products
- HDMI for high definition movies and picture quality
- SimplyShare to connect & stream all entertainment wirelessly
- Karaoke for endless singing entertainment at home

# PHILIPS

# Highlights

## 1000W RMS power




1000W RMS power delivers great sound for movies and music

## DivX Plus HD Certified



DivX Plus HD on your Blu-ray player and/or DVD player offers the latest in DivX technology to let you enjoy HD videos and movies from the Internet direct to your Philips HDTV or PC. DivX Plus HD supports the playback of DivX Plus content (H.264 HD video with high-quality AAC audio in an MKV file container) while also supporting previous versions of DivX video up to 1080p. DivX Plus HD for true HD digital video.

## Dolby TrueHD and DTS-HD

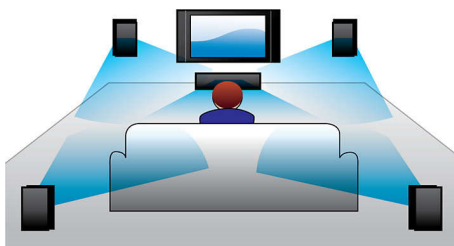

Dolby TrueHD and DTS-HD Master Audio Essential deliver the finest sound from your

Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD and DTS-HD Master Audio Essential complete your high definition entertainment experience.

## Double Bass Sound



Powerful speakers with a bass-reflex system and double basspipes enhance the lower frequencies and deliver rock-solid, deep bass sounds. You'll be able to hear the lowest murmur or the deepest roar.

## Full HD 3D Blu-ray



Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the latest generation of fast switching displays for real life depth and realism in full 1080x1920 HD resolution. By watching these images through special glasses with right and left lenses that are timed to open and close in synchrony with alternating images, the full HD 3D viewing experience is created in your home cinema. Premium 3D movie releases on Blu-ray offer a wide, high quality selection of content. Blu-ray also delivers uncompressed

surround sound for an unbelievably real audio experience.

## Modern design

Modern design to complement your home environment

## Philips MyRemote



The Philips MyRemote app lets you use your smartphone or tablet as a remote to control your Philips AV products that are connected to your home Wi-Fi network, and gives you instant control from anywhere in your home. It also comes with useful functions such as SimplyShare to connect and stream all entertainment wirelessly; and MySound to customize your listening preferences.

## SimplyShare



Philips SimplyShare lets you share your music, movies & photos from tablet, smartphone & PCs to your home theater & Blu-ray player. You can stream all entertainment directly from your DLNA-enabled devices or use remote control to access & stream media files from your PC. For the best wireless experience, install the SimplyShare app on your tablet/smartphone. You are now ready to enjoy all your entertainment effortlessly.



# Specifications

## Sound

- Sound Enhancement: Night Mode, Auto Volume Leveler, Double Bass Sound, Treble and Bass Control
- Sound System: Dolby Digital Plus, Dolby True HD, DTS-HD Master Audio Essential
- Subwoofer output power: 166W
- Equalizer settings: Gaming, Movie, Music, News, Original
- Center speaker output power: 166W
- Satellite speaker output power: 4X166W
- Total Power RMS @ 30% THD: 1000 W

## Loudspeakers

- Loudspeaker types: 1 x Centre speaker, 4 x Satellite speakers
- Center speaker drivers: 1 x 3" Full range woofer
- Satellite speaker freq range: 150 - 20k Hz
- Satellite speaker impedance: 4 ohm
- Subwoofer freq range: 20 - 150 Hz
- Center speaker impedance: 4 ohm
- Subwoofer driver: 1 x 8" woofer
- Subwoofer type: Passive
- Center speaker freq range: 150 - 20k Hz
- Drivers per Satellite speaker: 1 x 3" Full range woofer
- Subwoofer impedance: 4 ohm

## Connectivity

- Front Connections: Audio in, Hi-Speed USB, Microphone In
- Rear Connections: Composite video (CVBS) output, Digital coaxial in, Digital optical in, Easy-Fit Speaker Jacks, Ethernet, HDMI 1.4 output (ARC), Fixed FM Antenna, USB (For VOD/BD-LIVE only), AUX in

## Tuner/Reception/Transmission

- Tuner Bands: FM
- Number of Preset Channels: 40
- RDS: Station Name

## Outer Carton

- EAN: 87 12581 67989 7
- Length: 60.8 cm
- Number of consumer packagings: 1
- Width: 37.4 cm
- Gross weight: 11.22 kg
- Height: 37.8 cm
- Nett weight: 9.9 kg
- Tare weight: 1.32 kg

## Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough, 21:9 format subtitle support, Dynamic Lipsync, System standby
- HDMI Features: 3D, Audio Return Channel (ARC), Content Type, Deep color

## Power

- Power consumption: 160 W
- Power supply: 110 - 127 V / 220 - 240 V
- Standby power consumption: < 0.5 W

## Packaging dimensions

- Height: 60.8 cm
- Packaging type: Carton
- Type of shelf placement: Laying
- Width: 37.4 cm
- Depth: 37.8 cm
- Number of products included: 1
- EAN: 87 12581 67989 7
- Gross weight: 11.22 kg
- Nett weight: 9.9 kg
- Tare weight: 1.32 kg

## Product dimensions

- Height: 5.8 cm
- Width: 43.5 cm
- Depth: 28 cm
- Weight: 2.64 kg

## Accessories

- Included accessories: 2 x AAA Batteries, Power cord, Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, World Wide Warranty leaflet, HDMI cable, User Manual, FM antenna

## Dimensions

- Main Unit (W x H x D): 435X56.3X286.5 mm
- Main Unit Weight: 2.66 kg
- Center Speaker (W x H x D): 223 x 100 x 80 mm
- Center Speaker Weight: 0.65 kg
- Centre Speaker cable length: 2 m
- Front Speaker (W x H x D): 90 x 185 x 82 mm
- Subwoofer (W x H x D): 233X365X310 mm
- Front Speaker Weight: 0.53 kg
- Subwoofer Weight: 3.66 kg
- Front Speaker cable length: 3 m
- Rear Speaker (W x H x D): 90 x 185 x 82 mm
- Rear Speaker Weight: 0.53 kg
- Rear Speaker cable length: 10 m
- Subwoofer cable length: 3 m

## Audio Playback

- Compression format: AAC, FLAC, MP3, Ogg Vorbis, WAV, WMA, Dolby Digital, DTS
- MP3 bit rates: 32 - 320kbps

## File Format

- Audio: aac, mka, mp3, wma
- Video: avi, divx, mkv, mp4, mpeg, mpg, wmv
- Picture: GIF, JPEG, JPG

## Picture/Display

- Picture enhancement: HD (720p, 1080i, 1080p/24fps), Progressive scan, Video upscaling

## Optical Playback Media

- Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

# Specifications

## Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Zoom

## Video Playback

- Compression formats: AVCHD, DivX Plus HD, MPEG1, MPEG2, MPEG4, H.264, ISO, WMV 9



Issue date 2024-05-02

Version: 9.0.5

EAN: 87 12581 67989 7

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* To check whether Video on Demand is available in your country,  
please visit [www.philips.com/blu-ray](http://www.philips.com/blu-ray).

\* DivX, DivX Certified, and associated logos are trademarks of  
DivXNetworks, Inc. and are used under license.

\* Dolby and the double-D symbol are registered trademarks of Dolby  
Laboratories Inc.