



Philips  
CD Soundmachine

Dock for iPod/iPhone

AZD102



## Enjoy your iPod/iPhone music wherever you go

Share your favourite iPod/iPhone tunes out loud wherever you go. Not only will you enjoy great portability and ease of use, you can charge your iPod/iPhone while it's playing. You can also play CDs, CD-Rs and CD-RWs. Free your music now.

### Enjoy your music from different sources

- Play and charge your iPod/iPhone simultaneously
- Play CD, CD-R and CD-RW
- FM tuner for radio enjoyment
- MP3 Link for portable music playback

### Easy to use

- CD Shuffle/Repeat for personalised music enjoyment

### Rich and clear sound

- Dynamic Bass Boost for deep and dramatic sound

# PHILIPS


# Highlights

## Dynamic Bass Boost



Dynamic Bass Boost maximises your music enjoyment by emphasising the bass content of the music throughout the range of volume settings - from low to high - at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

## Play and charge your iPod/iPhone

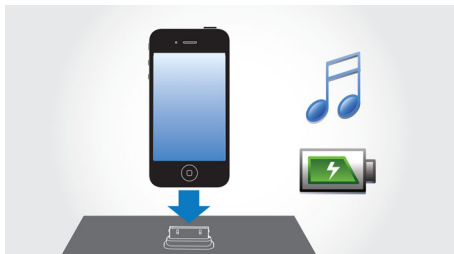

Enjoy your favourite MP3 music while charging your iPod/iPhone! The dock lets you connect your portable device directly to the Docking entertainment system so you can listen to your favourite music in superb sound. It also charges your iPod/iPhone while it plays so you can enjoy your music and not have to worry about your portable player battery running out. The Docking entertainment system automatically charges your portable device while it is docked.



## Play CD, CD-R and CD-RW



Philips is known for making products that are compatible with many discs available on the market. This audio system lets you enjoy music from CD, CD-R and CD-RW. CD-RW (CD-Rewritable Compatible) means that your audio system can play both CD-Recordable (CD-R) and CD-Rewritable (CD-RW) discs. CD-R discs are recordable once and can be played on any audio CD player while CD-RW discs can be recorded and rewritten multiple times and can only be played back on compatible audio CD players.

## MP3 Link



The MP3 link connectivity allows direct playback of MP3 content from portable media players. Besides the benefit of enjoying your favourite music in the superior sound quality delivered by the audio system, the MP3 link is also extremely convenient as all you have to do is to plug your portable MP3 player into the audio system.

# Specifications

## iPod compatibility

- Compatible with: iPod classic, iPod mini, iPod nano 1st generation, iPod nano 2nd generation, iPod nano 3rd generation, iPod nano 4th generation, iPod nano 5th generation, iPod nano 6th generation, iPod touch, iPod touch 2nd generation, iPod touch 3rd generation, iPod touch 4th generation, iPod with colour display

## iPhone compatibility

- Compatible with: iPhone, iPhone 3G, iPhone 3GS, iPhone 4, iPhone 4S

## Audio Playback

- Loader Type: Top
- Cradle playback mode: Charging iPod, Charging iPhone, Play and Pause, Next and Previous track, Fast forward and reverse, Repeat, Shuffle play
- Playback Media: CD, CD-R, CD-RW
- Disc Playback Modes: Fast Forward/Reverse, Next/Previous Track Search, Repeat Play, Shuffle Play

## Sound

- Output power (RMS): 2 x 1 W
- Sound System: Stereo
- Sound Enhancement: Dynamic Bass Boost
- Speaker diameter: 3"
- Volume Control: rotary

## Tuner/Reception/Transmission

- Tuner Bands: FM Stereo
- Antenna: FM Antenna

## Loudspeakers

- Built-in speakers: 2

## Connectivity

- Aux in: (MP3 Link)

## Power

- Mains power: AC 220–240 V
- Battery type: LR14
- Battery voltage: 1.5 V
- Number of batteries: 6

## Accessories

- Included accessories: AC Power Cord, User Manual, Warranty Leaflet

## Dimensions

- Product dimensions (WxDxH): 262 x 266 x 123 mm
- Packaging dimensions (WxDxH): 296 x 156 x 300 mm
- Product weight: 1.1 kg
- Weight incl. Packaging: 1.8 kg



Issue date 2014-03-05

Version: 3.0.7

12 NC: 8670 000 86819  
EAN: 87 12581 63349 3

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)