




Philips ActionFit  
Sports ear hook  
headphones

ActionFit  
Orange and Grey

SHQ3000

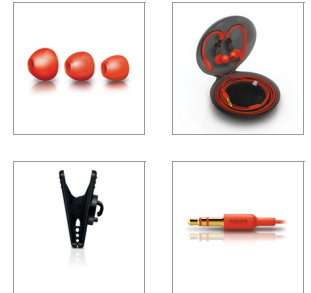

## Tuned for sports

### Adjustable fit

Constructed with waterproof materials coupled with an anti bacterial agent that helps kill germs, these headphones have been designed for the fitness enthusiast

#### Innovation for Athletes

- Customisable ear hooks
- Ultra-soft silicone caps sit comfortably in your ears
- A 1.2 m long cable that is ideal for outdoor use

#### Designed for active use

- Washable
- Sweat proof
- Cable clip

#### Energise you

- Bass thumping stereo sound - fuel for your workout
- Sound Isolation headphones to minimise environmental noise
- Keep on track with your fitness regimen via free ActionFit app

# PHILIPS

# Highlights

## Washable



Constructed with waterproof materials allowing you to wash your headphones under running tap water

## Sweat proof



Designed with a water resistant seal to protect your headphones from sweat-related damage

## Customisable ear hooks



Customisable ear hooks for enhanced fit - designed for sports

## Bass thumping stereo sound

Acoustics finely tuned to enhance the sporting experience - fuel for your workout

## 3-size ultra-soft silicone caps




The 3 sizes of ultra-soft silicone caps of these Philips earphones sit comfortably in your ears without adding pressure to them whilst blocking out unwanted noise.

## Cable clip



Clip helps fix cable securely

## Sound Isolation

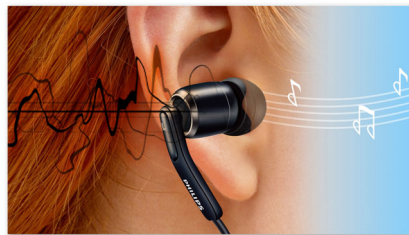


With sound isolation, you will hear and enjoy greater music details at a lower volume than is

possible with normal headphones. Based on a thorough understanding of the human ear canal anatomy, the sound isolation earphone's angled acoustic design creates a perfect seal between the ambient sound source and the ear canal, thus eliminating unwanted background noise while delivering sound directly to your ears. Even at a moderate volume setting, you can still discern music details without noise distractions from the environment. Earphone sleeves are available in three sizes to provide the best fit.

## 1.2 m cable

The ideal cable length to give you the freedom to put your audio device where you want.

## Free ActionFit application

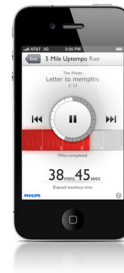

Keep track of your fitness regimen with this smart, simple and free app - created by Philips just for you. The ActionFit app lets you create customised workouts that include time, distance and calorie goals - and you can even assign your favourite music to each target. Once you've completed your workout, use the app to share your results with friends on Twitter and Facebook. You'll need GPS for your distance and calorie goals, so download it for free from the App Store - and you're ready to go!

# Specifications

## Sound

- Diaphragm: Mylar dome
- Frequency response: 15–22,000 Hz
- Impedance: 16 ohm
- Magnet type: Neodymium
- Maximum power input: 20 mW
- Sensitivity: 102 dB
- Speaker diameter: 9 mm
- Type: Dynamic
- Voice coil: CCAW

## Connectivity

- Cable Connection: two-parallel, symmetric
- Cable length: 1.2 m
- Connector: 3.5 mm
- Finishing of connector: Gold-plated
- Type of cable: OFC

## Accessories

- Included: transport case

## Packaging dimensions

- Packaging dimensions (W x H x D):  
9.5 x 17.5 x 3.5 cm
- Net weight: 0.023 kg
- Gross weight: 0.07 kg

- Tare weight: 0.047 kg
- EAN: 87 12581 53142 3
- Number of products included: 1
- Packaging type: Blister
- Type of shelf placement: Both

## Outer Carton

- Outer carton (L x W x H): 38.8 x 25.6 x 24.8 cm
- Net weight: 0.552 kg
- Gross weight: 2.464 kg
- Tare weight: 1.912 kg
- EAN: 87 12581 53239 0
- Number of consumer packages: 24

## Inner Carton

- Inner carton (L x W x H): 18.3 x 11.7 x 10.4 cm
- Net weight: 0.069 kg
- Gross weight: 0.258 kg
- Tare weight: 0.189 kg
- EAN: 87 12581 53238 3
- Number of consumer packages: 3

## Product dimensions

- Product dimensions (W x H x D):  
3.95 x 6.35 x 2.4 cm
- Weight: 0.023 kg



Issue date 2013-12-16

Version: 4.0.13

12 NC: 8670 000 61045  
EAN: 87 12581 53142 3

© 2013 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)