


Philips
In-ear wireless sports
headphones

Flexible two-way design

20 hours play time
Clear calls. Mono mode
IPX7 waterproof and sweatproof

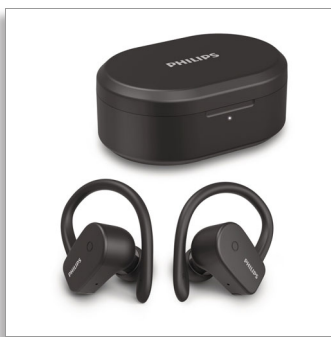

TAA5205BK

Always the fit you want

From your morning runs to afternoons in the office. These true wireless earbuds boast a detachable ear-hook design so you can go with the fit you want. You get up to 20 hours play time with the charging case, and they're IPX7 waterproof.

Ready for you

- Built for your workouts. Ready for your day
- IPX7 waterproof and sweat-proof
- Detachable ear-hook design. For the style you want
- Choice of 3 colorways

Sounds good. Feels good.

- 6 mm neodymium drivers. Clear sound with powerful bass
- 3 sizes of interchangeable silicone ear-tip cover
- Clear calls. Mono mode

Easy to use

- Rock-solid connectivity. Integrated earbud controls
- Charging case. Get up to 20 hours of play time
- 5 hours play time from one charge
- Charge for 15 minutes to get 1 extra hour

PHILIPS


In-ear wireless sports headphones

Flexible two-way design 20 hours play time, Clear calls. Mono mode, IPX7 waterproof and sweatproof

TAA5205BK/00

Highlights

Built for your workouts

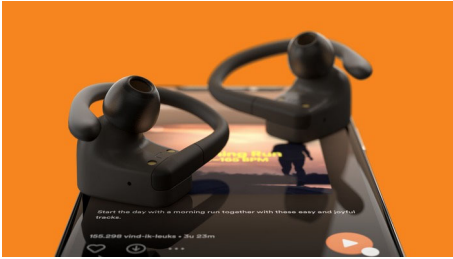

6 mm drivers deliver crisp, clear sound with powerful bass. From your favorite playlists to podcasts and more-move through your day with the sounds that keep you going.


IPX7 waterproof



These true wireless sports headphones are IPX7-rated-which means they can withstand

total immersion in water up to 1 m deep for up to 30 minutes. They'll stay in place-no matter how hard you sweat or what shape your ears are.

Detachable ear-hook design

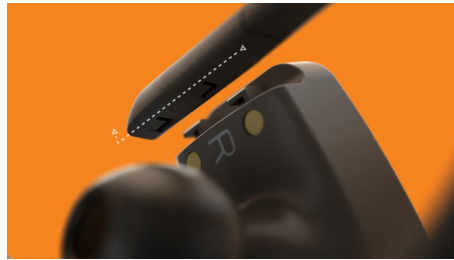

Whether it's a run in the park or an epic HIIT session, the ear-hook design keeps these headphones snug and secure. You get a choice of three different size silicone ear-tip covers, and the ear hooks can be removed when you're not working out.

Clear calls. Mono mode

Wear them both, or wear just one. Mono mode lets you use a single earbud to talk, and you can

swap between earbuds without missing a word. Ideal if you're on a long call.

Rock-solid connectivity

The Bluetooth connection is stable, and your headphones are ready to pair the instant you take them out of the charging case. Controls on each earbud make it easy to control music and calls.

Charging case.

A fully charged case gives you an extra 15 hours play time. You get 5 hours play time from a single charge, and a speedy 15-minute charge gives you an extra hour. The case takes 2 hours to charge fully via the included USB-C cable.

Specifications

Sound

- Impedance: 16 Ohm
- Speaker diameter: 6 mm
- Sensitivity: 111 dB (1K Hz)
- Frequency range: 20 - 20 000 Hz
- Maximum power input: 5 mW
- Driver type: Dynamic

Connectivity

- Bluetooth version: 5.0
- Supported codec: AAC, SBC
- Maximum range: Up to 10 m
- Bluetooth profiles: A2DP, AVRCP, HFP
- Type of wireless transmission: Bluetooth
- Wireless
- Microphone: Built-in microphone

Convenience

- Mono mode for TWS
- Water resistance: IPX7
- Type of controls: Touch

Design

- Color: Black
- Wearing style: Ear-hook
- Ear coupling material: Silicone
- Ear fitting: In-ear
- In-ear fitting type: Earhook, Silicone ear tip

Power

- Music play time: 5 +15 hr
- Talk time: 5 hr
- Battery type(Earbud): Lithium-ion (built-in)
- Battery capacity(Earbud): 50 mAh
- Battery type(Charging case): Lithium-ion (built-in)
- Battery capacity(Case): 450 mAh
- Battery life standby time: 200 hr
- Charging time: 2 hr
- Fast charging time: 15 mins for 1 hr
- Number of batteries: 3 pcs
- Battery weight (Total): 13 g
- Rechargeable

Voice assistant

- Voice assistant support

- Voice assistant activation: Voice controlled
- Voice assistant compatible: Apple Siri, Google Assistant

Accessories

- Charging cable: USB-C cable, 500 mm
- Charging case
- Detachable earhook: 3 pairs
- Eartips: 3 pairs (S/M/L)
- Quick Start Guide
- Others: A pair of lock cover

Inner Carton

- Number of consumer packagings: 3
- Inner carton (L x W x H): 14.4 x 10 x 16 cm
- Gross weight: 0.654 kg
- Nett weight: 0.3666 kg
- Tare weight: 0.2874 kg
- GTIN: 2 48 95229 11188 6

Outer Carton

- Number of consumer packagings: 24
- Outer carton (L x W x H): 31 x 22 x 36 cm
- Gross weight: 5.6 kg
- Nett weight: 2.9328 kg
- Tare weight: 2.6672 kg
- GTIN: 1 48 95229 11188 9

Product dimensions

- Product dimensions (W x H x D): 8.7 x 3.5 x 6 cm
- Cable length: 0 cm
- Weight: 0.087 kg

Packaging dimensions

- Number of products included: 1
- Packaging dimensions (W x H x D): 9.5 x 17.5 x 4.5 cm
- Gross weight: 0.195 kg
- Nett weight: 0.1222 kg
- Tare weight: 0.0728 kg
- EAN: 48 95229 11188 2
- Packaging type: Box
- Type of shelf placement: Hanging

UPC

- UPC: 8 40063 20162 0



Issue date 2023-02-01

Version: 8.0.2

12 NC: 8670 001 69488
EAN: 48 95229 11188 2

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com