


Philips  
Portable DVD Player with  
Zero Bright Dot™ screen

21.6cm (8.5") widescreen LCD



PET830

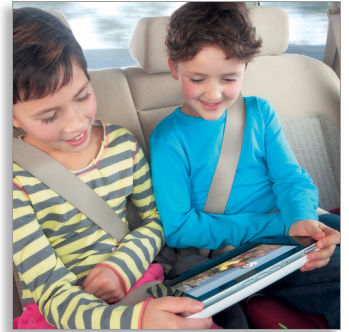

## Slim set with DVD slot

with Smart Car Mount and USB port

The magic of movies and music comes to life on the tablet-style Philips PET830 Portable DVD Player with 8.5" LCD display. Plus Zero Bright Dot™ ensures optimal screen quality. Comes with Smart Car Mount and USB connector.

### Immerse in AV entertainment on the go

- Play DVD, DVD+/-R and DVD+/-RW, (S)VCD, DivX® & MPEG4 movies
- Play MP3/WMA-CD, CD and CD-RW
- Share JPEG image files with Picture CD

### Optimized viewing anywhere

- Zero Bright Dot™ screen for optimal screen quality
- 21.6 cm/8.5" TFT color LCD display for high quality viewing
- Watch movies in 16:9 widescreen format
- Built-in quality stereo speakers

### For ultimate convenience

- Enjoy up to 3 hours playback with a built-in battery\*
- Smart Car Mount for ease-of-use
- USB connection for video, photo and music playback
- Protective pouch included

**PHILIPS**  
sense and simplicity

# Highlights

## Play DVD, DivX and MPEG4

With DivX® support, you are able to enjoy DivX® encoded videos in the comfort of your living room. The DivX® media format is an MPEG4-based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW, memory cards and DVD-video. DivX® CDs can be played back on selected DVD players, DVD Recorders and Home Theater Systems.

## Zero Bright Dot™ screen

Enjoy highest-quality images that are free from annoying blank spots on the LCD screen. LCD

displays commonly have imperfections, termed as 'bright dots' by the LCD industry. A limited number of bright dots were once considered an inevitable side effect of LCD mass production. With Philips' strict quality control procedures used in our Portable DVD Players, our LCD displays are produced with zero tolerance for bright dots. Select Portable DVD Players come with Philips Zero Bright Dot™ Policy to guarantee optimal screen quality.

## Smart Car Mount

To enjoy entertainment on the go, why not bring your portable DVD player from home on

the road with you? A unique Car Mount system ensures ease-of-use, with a quick-release arm that facilitates easy removal of the player when not in use. You can bring the portable DVD player with you, leaving just the Mount behind in the car.

## USB connection

Simply plug in your portable USB device to the USB connector on your Philips portable DVD player and playback your digital videos, music or photos directly. Now you can share your favorite moments with family and friends.



# Specifications

## Picture/Display

- Display screen type: LCD TFT
- LCD panel type: Anti-glare polarizer
- Diagonal screen size (inch): 8.5 inch
- Resolution: 480(w)x234(H)x3(RGB)
- Brightness: 200 cd/m<sup>2</sup>
- Contrast ratio (typical): 250:1
- Effective viewing area: 187.2x105.3
- Pixel pitch: 0.13(W) x 0.45(H)
- Response time (typical): 30 ms

## Sound

- Output Power: 250mW RMS(built-in speakers)
- Output power (RMS): 10mW RMS(earphone)
- Signal to noise ratio: >80dB(Line out), >76dB(earphone), >70dB(speaker)

## Video Playback

- Playback Media: DVD, Picture CD, SVCD, Video CD, DVD-R/-RW, MP3-CD, CD-R/CD-RW, WMA, DVD+R/+RW, CD
- Disc Playback Modes: A-B Repeat, Angle, Disc Menu, Fast Backward, Fast Forward, OSD, Repeat, Shuffle Play, Slow Backward, Slow Forward, Zoom
- Video disc playback system: NTSC, PAL
- Compression formats: MPEG4, Divx

## Audio Playback

- Compression format: Dolby Digital, MP3, WMA
- Playback Media: CD, CD-R, CD-RW, MP3-CD, WMA-CD
- File systems supported: ISO-9660, Joliet
- MP3 bit rates: 32 - 320 kbps
- WMA bit rates: 32 - 192 kbps

## Connectivity

- Audio Output - Digital: Coaxial (cinch)
- AV input: Composite (CVBS) x1
- AV output: Composite (CVBS) x1
- DC in: 9V
- Headphone jack: 3.5mm Stereo Headphone x 2
- USB

## Convenience

- Battery charging indication
- Shock proof

## Accessories

- AC/DC Adaptor: AY4129/00 (110-240v, 50/60Hz)
- Cables: 1 x AV Cables
- Car kit: cigarette outlet adaptor, 12vDC
- Remote control: AY5507 slim remote
- User Manual: Multi languages
- Smart car mount: 1 pcs
- Pouch: Protective pouch

## Dimensions

- Master carton dimensions: 458 x 236 x 333 mm
- Master carton quantity: 3
- Master carton weight: 7.28 kg
- Packaging type: D-box
- Packaging dimensions (W x H x D): 316 x 205 x 145 mm
- Product dimensions (W x H x D): 255 x 170 x 31 mm
- Product weight: 0.97 kg



Issue date 2012-06-27

Version: 2.0.3

12 NC: 8670 000 33383  
EAN: 87 12581 36003 0

© 2012 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips  
Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)