

Philips
Portable DVD Player

- 18cm/ 7" digital LCD
- 3hr playtime
- DTV



PET749



Enjoy portable DVD and digital TV

with built-in HDTV tuner

The Philips Portable DVD player PET749 has a built-in digital TV receiver so you can enjoy free-to-air digital TV programs. The 18 cm/7" , crystal-clear, TFT LCD delivers DTV picture quality and the rechargeable battery lasts up to 3 hours.

Play your movies, music and photos on the go

- DVD, DVD+/-R, DVD+/-RW, (S)VCD, CD compatible
- MP3-CD, CD and CD-RW playback
- View JPEG images from picture disc

Enjoy portable TV entertainment in real-time

- 17.8 cm (7") high density (800x480 pixels) LCD display
- 180-degree swivel screen for improved viewing flexibility
- Free-to-air digital TV channel reception
- Easy installation and automatic channel search

For ultimate convenience

- Enjoy up to 3 hours playback with a built-in battery*
- Car adaptor and slim remote control
- Stereo headphone jack for better personal music enjoyment
- Detachable antenna design lets you connect to other antennas



PHILIPS


Highlights

3 hours built-in battery*



This Philips player comes with a compact built-in rechargeable battery for long-lasting power. Up to 3 hours of continuous movie, photo and music playback enjoyment can be achieved on a single charge. Just plug in the power cable to recharge the player - it's that simple.

DVD, DVD+/-RW, (S)VCD, CD

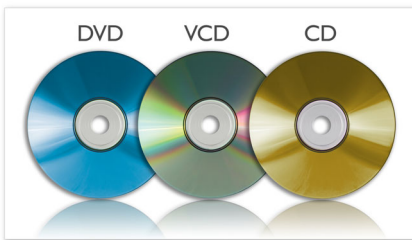

The Philips Portable DVD player is compatible with most DVD and CD discs available in the market. DVD, DVD+/-R, DVD+/-RW, (S)VCD, and CD – all of them can play on the DVD player. DVD+/-R is a shorthand term for a DVD drive that can accept both of the common

recordable DVD formats. Likewise, DVD+/-RW handles both common rewritable disc types.

180-degree swivel screen



The screen swivels 180° to give you the optimum viewing angle for watching movies and photos. Rotate the screen or adjust it up and down to cut down on glare and get the best viewing angle possible.

17.8 cm (7") HD LCD display



The high resolution (800 x 480 pixel) color LCD display brings images to life, showing off your treasured photos, favorite movies and music

with the same 'real life' rich detail and vibrant colors as high quality prints.


Detachable antenna design

The antenna on the Philips portable TV is completely detachable, allowing you to easily connect the TV up to an alternate (e.g., indoor or rooftop) antenna as needed. By doing so, you can be sure of reaching the best TV signal available wherever you are.

Free-to-air digital TV



Expand your entertainment experience and enjoy digital channel programs - for free. With digital TV broadcasting, you can receive free digital TV programs in your country. The signal is kept digital without any analog steps in between, to preserve the highest quality.



Specifications

Picture/Display

- Display screen type: LCD TFT
- Diagonal screen size (inch): 7 inch
- Resolution: 800(w)x480(H)x3(RGB)

Sound

- Output Power: 250mW RMS(built-in speakers)
- Output power (RMS): 10mW RMS(earphone)
- Signal to noise ratio: >80dB(earphone), >62dB(built-in speakers)

Video Playback

- Playback Media: DVD, Picture CD, SVCD, Video CD, DVD-R/-RW, MP3-CD, CD-R/CD-RW, DVD+R/+RW, CD
- Disc Playback Modes: Disc Menu, Fast Backward, Fast Forward, OSD, Repeat, Shuffle Play, Slow Backward, Slow Forward, Zoom
- Video disc playback system: NTSC, PAL

Audio Playback

- Compression format: Dolby Digital, MP3
- MP3 bit rates: 32 - 320 kbps
- Playback Media: CD, CD-R, CD-RW, MP3-CD
- File systems supported: ISO-9660, Joliet

Connectivity

- DC in: 9V ~ 12V
- AV output: Composite (CVBS) x1
- Headphone jack: 3.5mm Stereo Headphone x 1
- TV connection: F-type connector

Convenience

- Battery charging indication

- Favorite list TV programs
- User Interface: Multiple subtitles supported, On Screen Display on TV

Tuner/Reception/Transmission

- Cable: Unscrambled Digital Cable QAM
- Terrestrial: ATSC (8VSB)
- TV system: ATSC

Video Decoding

- Aspect Ratio: 16:9, 4:3

Accessories

- AC/DC Adaptor: DC 9V, 1A, 110-240v, 50/60Hz
- Cables: 1 x AV Cables
- Car kit: cigarette outlet adaptor, 12vDC
- Remote control: AY5523 slim remote
- User Manual: Multi lanaguage
- Included accessories: Aerial antenna

Power

- Battery Type: Built-in battery
- Battery lifetime: Up to 3 hrs*
- Rechargeable

Dimensions

- Packaging dimensions (W x H x D): 235 x 255 x 70 mm
- Master carton dimensions: 225 x 270 x 245 mm
- Master carton quantity: 3
- Master carton weight: 4.35 kg
- Packaging type: D-box
- Product dimensions (W x H x D): 199 x 41 x 159 mm
- Product weight: 0.6 kg



Issue date 2013-06-23

Version: 1.1.3

12 NC: 8670 000 58384
UPC: 6 09585 18057 4

© 2013 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Rechargeable batteries have a limited number of charge cycles and may eventually need to be replaced. Battery life and number of charge cycles vary by use and settings.

* Battery life varies by use and settings.

* Battery life of playtime is approximate and may vary depending on application condition. To optimize battery life, user should turn LCD backlight to minimum, connect to headphones (not built-in speakers) and listen at medium volume level, and use the product at room temperature.