



Philips  
Soundbar speaker

2.0 CH bass reflex system  
Bluetooth®  
40W

HTL1170B

## Great Sound for any TV

Get amazing virtual surround sound from your TV via just one cable! In addition to movies, you can also enjoy music wirelessly via Bluetooth and get access to your music library via USB.

### Connect and enjoy all your entertainment

- Wireless music streaming via Bluetooth
- Works with TVs, BD/DVD players, gaming consoles, MP3 players
- Audio in to enjoy music from iPod/iPhone/MP3 player
- Enjoy MP3 music directly from your portable USB devices

### Designed for simplicity

- Low-rise profile for the perfect fit in front of your TV

### Richer sound for watching TV and movies

- Virtual Surround Sound for a realistic movie experience
- Dolby Digital for ultimate movie experience


# PHILIPS

Soundbar speaker  
2.0 CH bass reflex system Bluetooth®, 40W

HTL1170B/F7


# Highlights

## Virtual Surround Sound

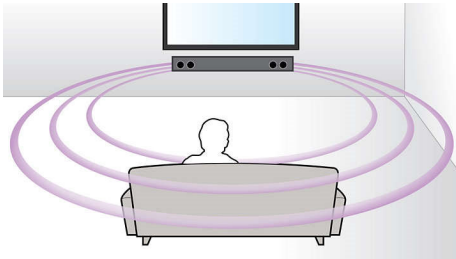

Philips Virtual Surround Sound produces rich and immersive surround sound from less than five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. Any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

## Dolby Digital

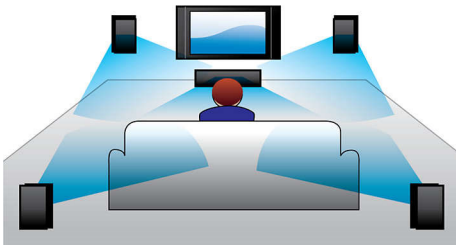

Because Dolby Digital, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound,

you experience superb quality surround sound audio with realistic spatial cues.

## Bluetooth



Bluetooth is a short range wireless communication technology that is both stable and energy efficient. The technology allows for easy wireless connection to other Bluetooth devices, so you can play your favorite music from any smartphone, tablet or laptop, including the iPod or iPhone with a Bluetooth-enabled speaker.

## Enjoy MP3 music directly

Enjoy MP3 music directly from your portable USB devices

## Audio in



Audio in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player, or laptop via a simple connection to your Philips home cinema system. Simply connect your audio device to the Audio in jack to enjoy your music with the superior sound quality of the Philips home cinema system.

## Low-rise profile



Low-rise profile for the perfect fit in front of your TV

## Works with multiple devices

Works with TVs, BD/DVD players, gaming consoles, MP3 players



# Specifications

## Sound

- Sound Enhancement: Treble and Bass Control, Virtual Surround Sound, Night Mode
- Sound System: Dolby Digital
- Speaker output power: 2 x 20 W
- Total Power RMS @ 10% THD: 40 W

## Loudspeakers

- Loudspeaker types: Integrated with main unit
- Speaker Drivers per side: 2 x 2" Fullrange woofers
- Speaker Frequency Range: 20-20K Hz
- Speaker Impedance: 4 ohm

## Connectivity

- Integrated Connections: Bluetooth
- Rear Connections: AUX in, Digital coaxial in, Digital optical in
- iPod/iPhone: via 3.5mm Audio In, via bluetooth
- Side Connections: Audio In (3.5mm), USB

## Power

- Power consumption: 25 W

- Power supply: 110V, 50/60 Hz
- Standby power consumption: < 0.5 W

## Accessories

- Included accessories: AAA Battery (x1), Power cord, Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet

## Design

- Wall mountable

## Dimensions

- Main Unit (W x H x D): 865 x 68x 86 mm
- Weight incl. Packaging: 3 kg
- Main Unit Weight: 1.8 kg
- Packaging (W x H x D): 917 x 137 x 148 mm

## File Format

- Audio: mp3

## Sustainability

- Packaging: 80% recycled corrugated board, Soya based ink



Issue date 2024-04-13

Version: 3.0.7

UPC: 6 09585 24463 4

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)