

Philips
DVD home theater player



HTP3360K

Get sharper, clearer pictures

with HDMI 1080p upscaling

Be impressed with this Philips DVD player with HDMI digital video and audio connection. Step into another home entertainment arena as you immerse yourself with High Definition video (720p / 1080i/1080p).

Play all your movies and music

- DivX Ultra Certified for enhanced playback of DivX videos
- Plays CD, (S)VCD, DVD, DVD+R/RW, DVD-R/RW

Bring audio and video to life

- HDMI 1080p upscales to high definition for sharper pictures
- Screen Fit for optimal viewing every time

Easy to set up and use

- One-touch MP3 creation directly from CDs onto USB sticks
- EasyLink to control all HDMI CEC devices via a single remote

Connect and enjoy multiple sources

- Hi-Speed USB 2.0 Link plays video/music from USB flash drive

Enjoy enhanced karaoke

- Karaoke Scoring for fun and exciting song contests at home

PHILIPS
sense and simplicity

Highlights

DivX Ultra Certified

With DivX support, you are able to enjoy DivX encoded videos in the comfort of your living room. The DivX media format is an MPEG4-based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW, and DVD recordable discs. DivX Ultra combines DivX playback with great features like integrated subtitles, multiple audio languages, multiple tracks and menus into one convenient file format.

HDMI 1080p

HDMI 1080p upscaling delivers images that are crystal clear. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multichannel audio, without conversions to analog - delivering perfect picture and sound quality, completely free from noise.

Karaoke Scoring

Add a dash of fun to your Karaoke sessions with Karaoke Scoring. Allow your performance to be judged for further improvement, or for friendly competitions. Karaoke Scoring automatically rates your singing and gives you a humorous picture that is tied to how well you did. The fun never ends.

One-touch MP3 creation

Convert the contents of your favorite CDs to MP3 files on your Philips product, and store it directly on a thumbdrive or on your portable media player through a USB cable. Enjoy the convenience of creating MP3 files right in your living room, without a PC, and even while the CD is playing.


EasyLink

EasyLink lets you control multiple devices like DVD players, Blu-ray players, TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

Hi-Speed USB 2.0 Link

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. Hi-Speed USB devices have a data transfer rate of up to 480 Mbps - up from the 12 Mbps in original USB ones. With Hi-Speed USB 2.0 Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

Screen Fit

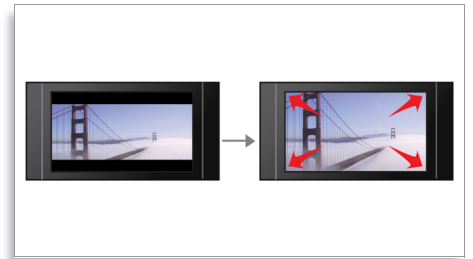

Whatever you're watching, and on any TV, Screen Fit ensures that the picture fills the whole screen. Annoying black bars on the top and bottom are eliminated, without any tedious manual adjustments to make. Simply press the Screen Fit button, choose the format and enjoy your movie in full-screen



Specifications

Picture/Display

- D/A converter: 12 bit, 108 MHz
- Picture enhancement: Progressive scan, High Def (720p, 1080i, 1080p), Smart Picture, Video upscaling, Video Upscaling(720p, 1080i/p), Video upsampling

Sound

- D/A converter: 24 bit, 192 kHz
- Frequency response: 30-20000 Hz
- Signal to noise ratio: 90
- Crosstalk (1kHz): 70 dB
- Dynamic Range (1kHz): 80 dB
- Distortion and Noise (1kHz): 65 dB
- Sound System: Dolby Digital

Video Playback

- Playback Media: CD-R/CD-RW, DVD-R/-RW, DVD+R/+RW, DVD-Video, Video CD/SVCD, CD, DVD, DivX
- Compression formats: MPEG1, MPEG2, DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0, DivX Ultra
- Video disc playback system: NTSC, PAL

Audio Playback

- Playback Media: Audio CD, CD-R/RW, CD, MP3-CD, MP3-DVD, WMA-CD
- Compression format: MP3, WMA, Dolby Digital, PCM
- MP3 bit rates: 32 - 320 kbps

Still Picture Playback

- Playback Media: CD-R/RW, DVD+R/+RW, DVD-R/-RW, Kodak Picture CD, Picture CD
- Picture Compression Format: JPEG
- Picture Enhancement: Flip photos, High Definition Resolution, Rotate, Slideshow with MP3 playback, Zoom

Multimedia Applications

- Playback Formats: JPEG Still pictures, MP3, DivX
- Multimedia connections: USB memory class device

Connectivity

- Front / Side connections: USB, Microphone
- Rear Connections: Analog audio Left/Right out, Composite video (CVBS) output, Digital coaxial out, HDMI output, ComponentVideo out
- Progressive

Convenience

- Child Protection: Child Lock, Parental Control
- On-Screen Display languages: English, Malay, Thai, Traditional Chinese
- Karaoke: MIC volume

Power

- Power supply: 110-240V, 50/60 Hz
- Power consumption: < 12 W
- Standby power consumption: < 0.8 W

Accessories

- Included accessories: 2 x AAA Batteries, Audio/Video cable, Quick start guide, Remote Control, Power cord, User Manual, Warranty Leaflet, World Wide Warranty leaflet

Dimensions

- Set dimensions (W x H x D): 435 x 38 x 210 mm
- Packaging dimensions (W x H x D): 502 x 456 x 308 mm
- Speaker Depth: 89 mm
- Speaker Height: 276 mm
- Subwoofer dimensions (W x H x D): 102 x 303 x 305 mm
- Speaker Width: 89 mm



Issue date 2012-09-18

Version: 2.1.7

12 NC: 8670 000 50922
EAN: 87 12581 47377 8

© 2012 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com