

Philips  
Soundbar speaker

3.1 CH wireless subwoofer

Google Cast and Spotify Connect  
Bluetooth and NFC  
1 HDMI in and HDMI out ARC

HTL5160B



## Unmatched voice clarity from 3.1 Ch

with Google Cast and Spotify Connect

Upgrade your TV with enhanced voice clarity and virtual surround sound for a better cinematic experience. Start enjoying high-quality sound and a seamless playback experience with your favourite music apps with this Google Cast enabled soundbar.

### Connect and enjoy all your entertainment

- EasyLink to control all HDMI CEC devices via a single remote
- One-touch with NFC-enabled smartphones for Bluetooth pairing
- Connect to one HDMI in for great picture and sound quality
- Spotify Connect for an effortless native app experience
- Easily send music from phone to speaker with Google Cast

### Designed for simplicity

- Low-rise profile for the perfect fit in front of your TV
- Touch panel for intuitive playback and volume control
- Philips companion app for easy network setup

### Richer sound for watching TV and movies

- Dedicated centre-channel speaker for superior voice clarity
- Virtual Surround Sound for a realistic movie experience
- 2-way loudspeaker for the best clarity and dynamic range
- Dolby Digital and Pro Logic II surround sound

# PHILIPS

## Soundbar speaker

3.1 CH wireless subwoofer Google Cast and Spotify Connect, Bluetooth and NFC, 1 HDMI in and HDMI out ARC


# Highlights

### Centre-channel speaker




A centre-channel speaker dedicated especially to voice frequencies anchor speech to the centre of the screen. This offers improved voice positioning and clarity, increasing immersion in movies.

### Dolby Digital and Pro Logic II

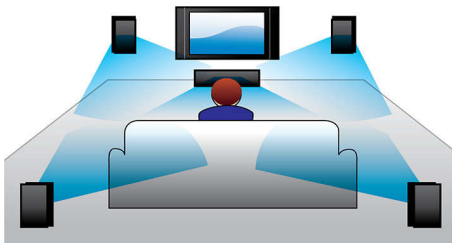

A built-in Dolby Digital decoder eliminates the need for an external decoder by processing all six channels of audio information to provide a surround sound experience and an astoundingly natural sense of ambience and dynamic realism. Dolby Pro Logic II provides five channels of surround processing from any stereo source.

### Virtual Surround Sound

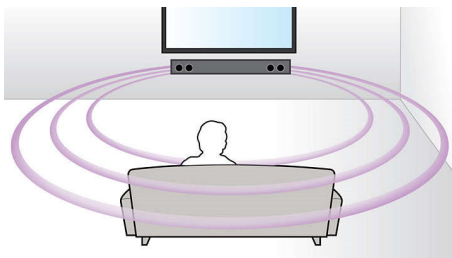

Philips Virtual Surround Sound produces rich and immersive surround sound from a less than five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. Any high quality stereo

source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

### One-touch with NFC



Pair Bluetooth® devices easily with one-touch NFC (Near Field Communications) technology. Just tap the NFC-enabled smartphone or tablet on the NFC area of a soundstage to turn the soundstage on, start Bluetooth® pairing, and begin streaming music.

### One HDMI in available

Enjoy larger-than-life 3D playback and crystal-clear 5.1 or 7.1 audio by simply plugging our player's audio one HDMI in output into the connection on your non-3D AV receiver.

### EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speakers, Home theatre systems and TVs etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC-enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

## HTL5160B/12

### Low-rise profile




Low-rise profile for the perfect fit in front of your TV

### Wireless subwoofer



Wireless subwoofer adds thrill to the action

### Touch panel for playback

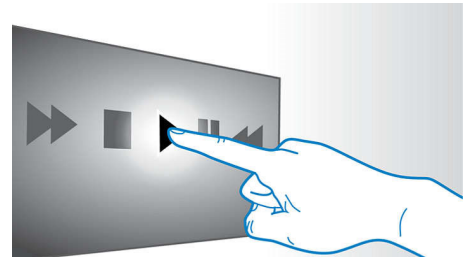

Intuitive touch panel control allows you to control the volume as well as other playback options by simply pressing the touch sensitive controls on the front panel.

### 2-way loudspeaker



2-way loudspeaker for the best clarity and explosive dynamic range



## Soundbar speaker

3.1 CH wireless subwoofer Google Cast and Spotify Connect, Bluetooth and NFC, 1 HDMI in and HDMI out ARC

HTL5160B/12

# Specifications

### Sound

- Sound Enhancement: Night Mode, Treble and Bass Control, Virtual Surround Sound, Audio sync, Movie, Music, Voice, Auto Volume Leveller
- Sound System: Dolby Digital, Dolby pro-logic 2
- Subwoofer output power: 200 W
- Speaker output power: 40W x 3
- Total Power RMS @ 10% THD: 320 W

### Loudspeakers

- Loudspeaker types: Integrated with main unit
- Subwoofer freq range: 45 - 200 Hz
- Subwoofer driver: 1 x 8" woofer
- Subwoofer type: Wireless subwoofer
- Subwoofer impedance: 2 ohm
- Drivers per Soundbar: 5 x race track woofers, 3 x tweeters

### Connectivity

- Integrated Connections: Bluetooth, NFC
- Rear Connections: Digital optical in, HDMI 1.4 output (ARC), HDMI IN 1, Ethernet
- iPod/iPhone: via 3.5 mm Audio In, via Bluetooth
- Online services: Google Cast™, Spotify Connect
- Top connections: Audio In (3.5 mm), USB 2.0

### Convenience

- EasyLink (HDMI-CEC): Automatic audio input mapping, One touch standby, Remote Control-Passthrough, System standby, Audio Return Channel

### Power

- Subwoofer power consumption: 30 W

- Subwoofer Power supply: 100-240 V~; 50-60 Hz
- Main unit power supply: 100-240 V AC, 50/60 Hz
- Main unit: Networked Standby power consumption: <6 W, ECO Standby power consumption: <0.5 W
- Subwoofer: Networked Standby power consumption: <6 W, ECO Standby power consumption: <0.5 W

### Accessories

- Included accessories: Quick start guide, Remote Control, Safety and Legal Leaflet, Trademarks Sheet, AC Adapter, 2 x Power cords, 2 x AAA Batteries, Screws (x6), Optical audio cable, User manual on CD-ROM

### Design

- Wall mountable

### Dimensions

- Main Unit (W x H x D): 1100 x 51 x 69 mm
- Weight incl. Packaging: 12.2 kg
- Main Unit Weight: 2.2 kg
- Packaging (W x H x D): 475 x 355 x 373 mm
- Subwoofer (W x H x D): 205 x 316 x 401 mm
- Subwoofer Weight: 7 kg

### Audio Playback

- Compression format: MP3

### Smartphone/Tablet App

- App name: Philips HCWeSet, Free download from Apple App store and Google Play



Issue date 2024-04-13

Version: 9.6.4

EAN: 48 95185 61034 4

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Availability of music service depends on country. Please visit the relevant music service website for details.

\* Spotify premium account is required for this speaker.