


Philips
Portable DVD Player



PET1046

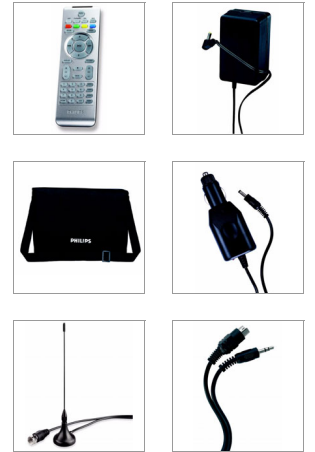

Swivel Screen, flexible view

with built-in digital TV receiver

Enjoy movies on the Philips PET1046 Portable DVD Player with 10.2" LCD display and a 180-degree swivel screen. Plus, share your favourite video experiences with pals thanks to SDHC card slot and USB2.0 connector. Comes with Travel bag.

Immerse yourself in AV entertainment on the go

- Play DVD, DVD+/-R and DVD+/-RW, (S)VCD, DivX® & MPEG4 movies
- Play MP3/WMA-CD, CD and CD-RW
- Share JPEG image files with Picture CD

Experience the digital interactive TV phenomenon

- Support DVB-T for free-to-air digital TV and radio channels
- 7-day Electronic Programme Guide (EPG)
- Direct Teletext and subtitle function support

For ultimate convenience

- Enjoy up to 6 hours' continuous playback*
- USB and SD card slots for photos and music playback
- Travel bag included

Perfect viewing anywhere

- High-resolution 10.2" TFT LCD display for great viewing
- Zero Bright Dot™ screen for optimal screen quality

PHILIPS
sense and simplicity

Highlights

Play DVD, DivX and MPEG4



With DivX® support, you are able to enjoy DivX® encoded videos in the comfort of your living room. The DivX® media format is an MPEG4-based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW, memory cards and DVD-video. DivX®

CDs can be played back on selected DVD players, DVD Recorders and Home Theatre Systems.

Support DVB-T



Expand your entertainment experience and enjoy digital channel programmes - for free. With DVB-T (Digital Video Broadcasting -

Terrestrial), you can receive free digital TV and radio programmes in Europe. The signal remains digital with no analogue steps in between, to preserve the highest quality.



Specifications

Picture/Display

- Display screen type: LCD TFT
- LCD panel type: Anti-glare polariser
- Diagonal screen size (inch): 10.2 inch
- Resolution: 800(w) x 480 (H) x 3 (RGB)
- Contrast ratio (typical): 250:1

Sound

- Output Power: 250 mW RMS (built-in speakers)
- Output power (RMS): 10 mW RMS (earphone)
- Signal to noise ratio: >80 dB (earphone), >62 dB (built-in speakers)

Video Playback

- Playback Media: DVD, Picture CD, SVCD, Video CD, DVD-R/-RW, MP3-CD, CD-R/CD-RW, WMA, DVD+R/+RW, CD
- Disc Playback Modes: A-B Repeat, Angle, Disc Menu, Fast Reverse, Fast Forward, OSD, Repeat, Shuffle Play, Slow Reverse, Slow Forward, Zoom
- Video disc playback system: NTSC, PAL
- Compression formats: MPEG4, Divx

Audio Playback

- Compression format: Dolby Digital, MP3, WMA
- Playback Media: CD, CD-R, CD-RW, MP3-CD, WMA-CD
- MP3 bit rates: 32 - 320 kbps
- File systems supported: ISO-9660, Joliet
- WMA bit rates: 32 - 192 kbps

Connectivity

- AV output: Composite (CVBS) x 1
- AV input: Composite (CVBS) x 1
- Audio Output - Digital: Coaxial (cinch)
- DC in: 9 V
- Other connections: S-Video out, Component

- Video out Interlaced
- Headphone jack: 3.5 mm Stereo Headphone

Convenience

- Battery charging indication
- Shock proof

Tuner/Reception/Transmission

- DVB: DVB Terrestrial*

Video Decoding

- Aspect Ratio: 16:9, 4:3, 4:3 Letterbox
- Reception-Demodulation: COFDM 2K/8K, MPEG-2 DVB compliant, Network: MFN/SFN, QPSK

Accessories

- AC/DC Adapter: DC-in 9 V; 110-240 v, 50/60 Hz
- Cables: A/V cable x 1, S-video cable x 1, Component video cable x 1
- Car kit: cigarette outlet adapter, 12vDC
- Remote control: AY5506 slim remote
- Included Accessories: Aerial antenna, Travel pouch
- User Manual: Multi-language

Power

- Battery Type: Built-in battery
- Battery lifetime: Up to 6 hours*

Dimensions

- Product dimensions (W x H x D): 270 x 32 x 188 mm
- Product weight: 1.5 kg
- Packaging type: D-box
- Packaging dimensions (W x H x D): 336 x 282 x 145 mm
- Master carton dimensions: 297 x 361 x 450 mm
- Master carton quantity: 3
- Master carton weight: 9.7 kg



Issue date 2009-07-17

Version: 1.0.4

12 NC: 8670 000 50569
EAN: 87 12581 47042 5

© 2009 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com

* DivX, DivX Certified and associated logos are trademarks of DivXNetworks, Inc. and are used under licence.
* Windows Media and the Windows logo are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.
* Rechargeable batteries have a limited number of charge cycles and may eventually need to be replaced. Battery life and number of charge cycles vary by use and settings.
* Battery life varies by use and settings.