



Philips
DVD soundmachine

DVD, CD, USB, FM

Tape
Remote Control
2W

AZ5740

Enjoy your favorite DVD movies, music and photos.

You can now enjoy your favorite movies, music and even photos from portable USB device on the TV with this all-in-one Philips DVD Soundmachine AZ5740. It plays DVDs, MP3/WMA-CD, Picture CDs, radio and cassette.

Everything you need

- Play DVD, (S)VCD, MP3-CD, CD(RW) and Picture CD
- USB Direct for MP3/WMA music playback
- FM tuner for radio enjoyment
- Autostop cassette deck

Easy to use

- CD to tape synchro-start recording
- On Screen Display for easy navigation
- Handy remote control for extra convenience

Rich and clear sound

- 10.2 cm (4") full range speakers for powerful sound
- Bass Reflex Speaker System delivers a powerful, deeper bass

PHILIPS

Highlights

PlayDVD,VCD,MP3-CD,CD(RW)&Pict




The Philips player is compatible with most DVD and CD discs available in the market. DVD, (S)VCD, MP3-CD, CD(RW) and Picture CD - all of them can play on the player. SVCD stands for "Super VideoCD". The quality of a SVCD is much better than a VCD, especially much more sharpen picture than a VCD because of the higher resolution. CD(RW) is a shorthand term for a CD drive that can accept the common rewritable CD format.

USB Direct



With the USB Direct mode, simply plug in your USB device to the USB port on your Philips device and your digital music will be played directly from the Philips device.

Autostop cassette deck

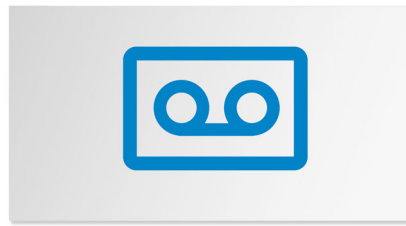

Autostop cassette deck

Bass Reflex Speaker System



Bass Reflex Speaker System delivers a deep bass experience from a compact loudspeaker box system. It differs from a conventional loudspeaker box system in the addition of a bass pipe that is acoustically aligned to the woofer to optimize the low frequency roll-off of the system. The result is deeper controlled bass and lower distortion. The system works by resonating the air mass in the bass pipe to vibrate like a conventional woofer. Combined with the response of the woofer, the system extends the overall low frequency sounds to create a whole new dimension of deep bass.

CD synchro-start recording

CD to tape synchro-start recording



Specifications

Video Playback

- Playback Media: DVD-Video, DVD+R/+RW, Picture CD, Video CD/SVCD
- Disc Playback Modes: A-B Repeat, Fast Backward, Fast Forward, OSD, Pause, PBC, Zoom

Audio Playback

- Cassette Deck Technology: Mechanical
- Playback Media: CD, CD-R, CD-RW, MP3-CD, WMA-CD
- Programmable Tracks: 20
- Disc Playback Modes: Fast Forward/Backward, Next/Previous Track Search, Repeat Play, Shuffle Play, 20-Track Programmable
- Loader Type: Top
- Number of decks: 1
- USB Direct Modes: Fast Backward/Fast Forward, Play/Pause, Previous/Next, Program Play, Repeat, Shuffle

Tuner/Reception/Transmission

- Antenna: FM Antenna
- Tuner Bands: FM

Sound

- Output power (RMS): 2x1W
- Speaker diameter: 4"
- Sound System: Stereo
- Volume Control: rotary

Loudspeakers

- Built-in speakers: 2
- Finishing: Metal

Audio Recording

- Recording Media: Tape
- Tape Recording Enhancement: CD Synchro Start Recording

Connectivity

- AV output: Ext 3.5 mm jack x1
- Headphone: 3.5 mm
- USB: USB host

Convenience

- Display Digits: 7
- Display Type: LCD

Accessories

- Included accessories: Remote Control, AC Power Cord, Audio/Video cable, *Flat pin adaptor, User Manual, Warranty Leaflet

Dimensions

- Packaging dimensions (W x H x D): 453 x 275 x 196 mm
- Product dimensions (W x H x D): 401 x 172 x 243 mm
- Weight: 3.1 kg
- Weight incl. Packaging: 3.9 kg

Power

- Mains power: 220 - 240V and 110 - 127V, 50/60Hz AC voltage selectable



Issue date 2014-06-12

Version: 1.0.5

12 NC: 8670 000 75907
EAN: 87 12581 60230 7

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

www.philips.com

* Avoid extensive use of the set in a volume higher than 85 decibel because this may damage your hearing.
* Music with Digital Right Management not supported.
* Adaptor supplied is needed for all Latin American countries, except in Brazil.