



Philips  
Micro music system

DualDock for iPod/iPhone

Desktop or wall-mount option  
CD, MP3-CD, USB, FM  
20W max



DCM2260

## Sound system that fits your home

Obsessed with sound

Play and charge all your iPod/iPhone/iPad with DualDock via Lightning & 30pins connectors. This music system sounds sensational, and offers an added bonus-it looks great in any home, with 2 in 1 table stand for flexible placement.

### Enrich your sound experience

- 20W RMS maximum output power
- Bass Reflex Speaker System delivers a powerful, deeper bass
- Digital Sound Control

### Enjoy your music from multiple sources

- DualDock to charge & play Apple devices (Lightning & 30-pin)
- USB Direct for easy MP3 music playback
- Play MP3-CD, CD and CD-R/RW
- Digital tuning with preset stations for extra convenience
- Audio-in for portable music playback


### Design that blends into your interior

- Wall-mountable option for flexible placement
- Compact design fits any space, any lifestyle

**PHILIPS**

# Highlights

## DualDock to charge & play

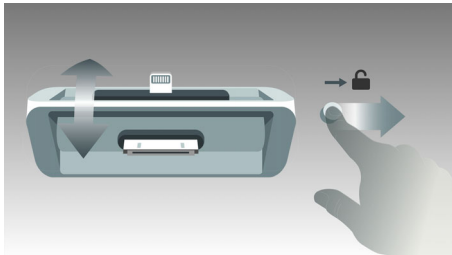

The innovative Philips DualDock with Lightning and 30-pin connector can charge and play any Apple device. Created to meld sleek styling with effortless functionality, you can switch between either connector in a flash. Enjoy your favorite tunes no matter what Apple device you want to use.

## Bass Reflex Speaker System



Bass Reflex Speaker System delivers a deep bass experience from a compact loudspeaker box system. It differs from a conventional loudspeaker box system in the addition of a bass pipe that is acoustically aligned to the woofer to optimize the low frequency roll-off of the system. The result is deeper controlled bass and lower distortion. The system works by resonating the air mass in the bass pipe to vibrate like a conventional woofer. Combined with the response of the woofer, the system extends the overall low frequency sounds to create a whole new dimension of deep bass.

## Wall-mountable



The perfect combination of a slim and versatile design, your Philips audio system is cleverly designed to blend into your living space. The base of the audio system is a stand so the system can sit securely and nicely on any shelf or cabinet. When wall mounted you have all the same flexibility of the freestanding stand.

## USB Direct for easy MP3 music



Thanks to the complete file transferability, you can easily enjoy the convenience and fun of accessing more digital music via the built-in USB Direct.

## Digital Sound Control

Digital Sound Control offers you a choice of pre-set balanced, clear, powerful, warm and bright controls you can use to optimise the frequency ranges for different musical styles. Each mode uses graphic equalizing technology to automatically adjust the sound balance and enhance the most important sound frequencies in your chosen music style. Ultimately, Digital Sound Control makes it easy for you get the most out of your music by precisely adjusting the sound balance to match the type of music you are playing.



Issue date 2017-01-14

Version: 4.0.6

12 NC: 8670 001 05529  
EAN: 87 12581 69445 6

© 2017 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

# Specifications

## Sound

- Volume control: up/down
- Maximum output power (RMS): 20W
- Sound Enhancement: Digital Sound Control

## Loudspeakers

- No. of built-in speakers: 2
- Speaker drivers: 2.75" woofer
- Speaker types: bass reflex speaker system

## Audio playback

- Disc playback modes: fast forward/backward, next/previous track search, repeat/shuffle/program
- Playback media: CD, CD-R/RW, MP3-CD, USB flash drive
- USB Direct playback modes: fast backward/fast forward, play/pause, previous/next, repeat, shuffle, stop
- Docking playback modes: fast forward and backward, menu, up and down, next and previous track, play and pause

## Tuner/Reception/Transmission

- Tuner bands: FM mono, FM stereo
- Station presets: 20
- Antenna: FM antenna (75 ohm)
- Tuner enhancement: auto digital tuning, auto scan, Easy set (plug & play)

## Connectivity

- Headphone: 3.5 mm
- USB: USB host
- Audio in (3.5mm)

## Convenience

- Alarms: CD Alarm, Radio Alarm, USB alarm
- Clock: On main display, sleep timer
- Charging device: iPad, iPhone, iPod
- Display type: LED display
- Loader type: slot

## Accessories

- Included accessories: AC-DC Adapter, FM antenna
- Remote control: 21-key remote
- User Manual: Multi languages

## Dimensions

- Set dimensions (W x D): 420 x 99 mm
- Set height (with stand): 223 mm
- Packaging width: 460 mm
- Packaging height: 142 mm
- Packaging depth: 265 mm
- Gross weight: 4.2 kg
- Net weight: 3.3 kg

## Power

- Power supply: 110-240V, 50/60 Hz

## iPod compatibility

- Compatible with: iPod classic, iPod touch, iPod touch 2nd generation, iPod touch 3rd generation, iPod touch 4th generation, iPod touch 5th generation, iPod nano 2nd generation, iPod nano 3rd generation, iPod nano 4th generation, iPod nano 5th generation, iPod nano 6th generation, iPod nano 7th generation

## iPhone compatibility

- Compatible with: iPhone, iPhone 3G, iPhone 3GS, iPhone 4, iPhone 4S, iPhone 5, iPhone 5C, iPhone 5S, iPhone 6, iPhone 6 plus

## iPad compatibility

- Compatible with: iPad, iPad 2, iPad Air, iPad Air 2, iPad mini, iPad mini 2, iPad mini with Retina display