



Philips
Portable speaker

Blue



SBA1610BLU

Mobile speaker

Filling your world with rich, dynamic sound, Philips SBA1610 speakers come with a handy mobile stand that makes them incredibly easy to use.

Impressive sound

- Class "D" Digital Amplifier for superb sound quality
- Neodymium speaker drivers deliver pure balanced sound
- 2W RMS total output power

Designed for grab and go

- Music on the go
- Up to 8 hours music playback

Simplicity

- Battery powered for portability
- Compatible with any media

PHILIPS
sense and simplicity

Portable speaker
Blue

Specifications

Product dimensions

- Product dimensions (W x H x D):
16,3 x 4,9 x 5 cm
- Product dimensions (W x H x D):
6,4 x 1,9 x 2,0 inch
- Weight: 0,169 kg
- Weight: 0,373 lb

Compatible with

- Smartphones
- iPod
- iPhone
- Mp3 player

Design and finishing

- Color: Blue

Sound

- Frequency response: 350 - 16,000 Hz
- Impedance: 4
- RMS Power rating: 2 W


Power

- Battery type: AAA
- Operating time on battery: 12 hr
- Number of batteries: 3

SBA1610BLU/00

Highlights

Class D Digital Amplifier

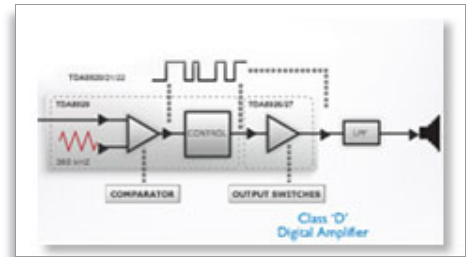

Class 'D' Digital Amplifier takes an analog signal, converts it into a digital signal and then amplifies the signal digitally. The signal then enters a demodulation filter to give the final output. The amplified digital output delivers all the advantages of digital audio, including improved sound quality. In addition, Class 'D' Digital Amplifier has greater than 90% efficiency compared to traditional AB amplifiers. This high efficiency translates into a powerful amplifier with a small footprint.



Issue date 2013-02-12

Version: 2.0.8

12 NC: 8670 000 93226
EAN: 69 23410 71685 6

© 2013 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

www.philips.com