



Philips
wireless portable speaker

Bluetooth®
with MULTIPAIR
Rechargeable battery
Black



BT2600B

Small size, great sound

Great sound merges in a small, stylish and go anywhere design, with aluminum details for a touch of quality. Bluetooth multipair allows instant music swapping between two devices.

Simplicity in use

- Built-in microphone for hands-free phone calls
- Audio-in for easy connection to almost any electronic device
- Wireless music streaming via Bluetooth
- Swap music instantly between 2 devices with MULTIPAIR

Impressive sound

- Anti-clipping function for loud, distortion free music
- Advanced audio performance with a slim design

Designed for grab and go

- Built-in rechargeable battery for music playback anywhere


PHILIPS

wireless portable speaker
Bluetooth® with MULTIPAIR, Rechargeable battery, Black

BT2600B/00

Highlights

Wireless music streaming

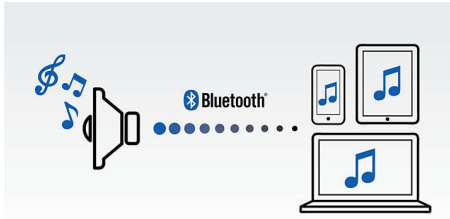


Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favorite music, sound from video or game wireless on this speaker easily.

Swap music between 2 devices

Pair with 2 smart devices simultaneously so you can stream music from whichever device you want, without the hassle of un-pairing and re-pairing. To play a song on a different device, pause the song on the original device first and then play the new song on a different device to take over. It's perfect for sharing music with friends, parties, or just playing different songs stored on different devices. Let friends and family pair at the same time, so you can swap between each other's music easily.

Anti-clipping function

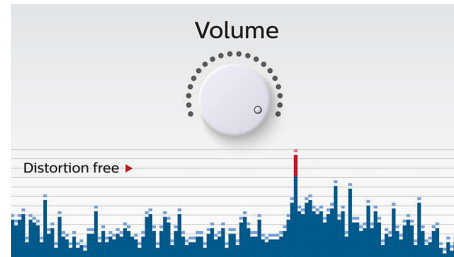

Anti-Clipping lets you play music louder and keeps it high quality, even when the battery is low. It accepts the input signals from 300mV to 1000mV and keeps your speakers safe from damage by distortion. This speaker handles anti-clipping through a dedicated audio limiter IC. This monitors the musical signal as it goes through the amplifier and keeps peaks within the amp's range, preventing the audio distortion caused by clipping without affecting loudness. A speaker's ability to reproduce musical peaks decreases along with battery power, yet anti-clipping reduces peaks caused by low battery.

Built-in rechargeable battery



Play music out loud - anytime, anywhere. The built-in rechargeable battery lets you enjoy

your personal music without the fuss of entangled power cords and the inconvenient search for an electrical outlet. Enjoy great music with the freedom of portability now.

Built-in microphone

With its built-in microphone, this speaker also works as a speaker phone. When a call comes in, the music is put on pause and you can talk via the speaker. Call for a business meeting. Or, call your friend from a party. Either way, it works great.

Audio-in



Audio-in for easy connection to almost any electronic device

Advanced audio performance

Advanced audio performance with a slim design

Specifications

Sound

- Output power (RMS): 4W
- Sound System: Mono

Design and finishing

- Color: Black

Loudspeakers

- Speaker drivers: 1 x 1.5"

Connectivity

- Bluetooth profiles: A2DP, AVRCP, HFP
- Bluetooth range: Line of sight, 10M or 30FT
- Audio in (3.5mm)

Convenience

- Built-in microphone: for speaker conference

Compatibility

- Android tablets & smartphones: with Android 2.1 and Bluetooth 2.1 or above
- iPod touch: 3rd generation or later

- iPad: iPad 1, iPad 2, new iPad, iPad mini, iPad with Retina display, iPad Air, iPad Air 2, iPad mini 2, iPad mini 3
- iPhone: iPhone 3, iPhone 3GS, iPhone 4, iPhone 4S, iPhone 5, iPhone 5C, iPhone 5S, iPhone 6, iPhone 6 Plus
- other music devices: with Bluetooth 2.1 or above

Power

- Battery type: lithium (built-in)
- Operating time on battery: 8 hour(s)

Accessories

- Included accessories: USB cable for PC charging, World Wide Warranty leaflet, Quick install guide

Dimensions

- Weight incl. Packaging: 0.32 kg
- Product dimensions (WxDxH): 107 x 97 x 32 mm
- Packaging dimensions (WxDxH): 130 x 45 x 175 mm
- Product weight: 0.21 kg



Issue date 2024-03-24

Version: 1.0.7

EAN: 48 95185 60589 0

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com