



Philips  
5.1 Home theatre with 3D  
Angled speakers

**3D Blu-ray**

dock iPod/iPhone



**HTS5582**

## Enjoy powerful home cinema with 3D Angled Speakers

### Obsessed with sound

Maximise your home cinema sound experience with dynamic 3D Directional Angled Speakers! Play all your favourite entertainment content including 3D Blu-ray on this innovative Philips 5000 series home cinema system.

#### Great listening experience

- 3D Angled Speakers disperse sound evenly around the room
- Dolby TrueHD and DTS-HD for high fidelity surround sound
- 1000 W RMS power delivers great sound for movies and music
- DoubleBASS technology for fuller and deeper bass

#### Designed to enhance your cinema at home

- Unique touch controls for easy access to your content
- Wireless rear speakers option for clutter free placement

#### Simply enjoy all your entertainment


- Full HD 3D Blu-ray for a truly immersive 3D movie experience
- Smart TV to enjoy online services and access multimedia on your TV



**PHILIPS**  
sense and simplicity


## Highlights

### 3D Angled speakers

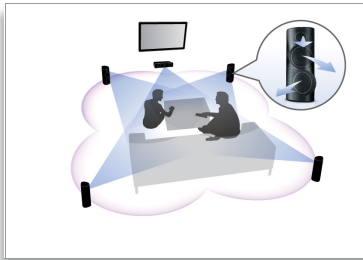

3D Angled Speakers feature angled drivers to deliver sound not only towards the front but also to the sides, creating a wider sweet spot so you can enjoy more immersive and cinematic surround sound.

### Wireless rear speakers option

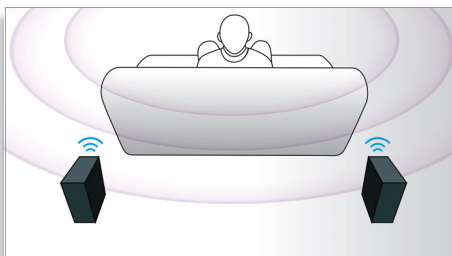

Wireless rear speakers give you scalability and mobility in speaker placement. Developed using interference-free technology, wireless speakers provide full surround sound without unsightly wire connections. You can buy the Philips wireless rear speakers separately.

### Full HD 3D Blu-ray



Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the latest generation of fast switching displays for real life depth and realism in full 1080 x 1920 HD resolution. By watching these images through special glasses with right and left lenses that are timed to open and close in synchrony with alternating images, the full HD 3D viewing experience is created. Premium 3D


movie releases on Blu-ray offer a wide, high quality selection of content. Blu-ray also delivers uncompressed surround sound for an unbelievably real audio experience.

### Smart TV



Philips home theatre systems with Smart TV offer you an array of enhanced features, including Net TV, DLNA and MyRemote. Net TV brings a wide range of online information and entertainment to your TV. Simply select Net TV in the Home Menu and start browsing for services like video-on-demand shops\* for the latest releases in HD, and Catch-up TV. With DLNA, you can access photos, music and movies stored on your PC from the comfort of your sofa. Can't find the remote control? Simply use your smartphone or tablet PC to control your home theatre via the Philips MyRemote app.

### Dolby TrueHD and DTS-HD

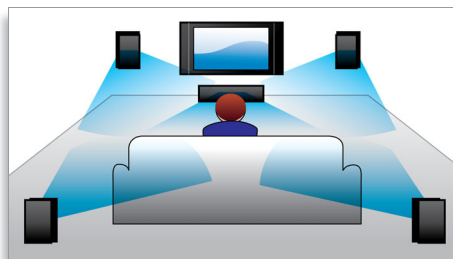

Dolby TrueHD and DTS-HD Master Audio Essential deliver the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD and DTS-HD Master Audio Essential complete your high definition entertainment experience.

### 1000 W RMS power



1000 W RMS power delivers great sound for movies and music

### DoubleBASS technology



DoubleBASS ensures you hear even the deepest bass tones from compact-sized subwoofers. It captures low frequencies and recreates them in the audible range of the subwoofer - delivering sound with more boom and panache, and ensuring you get a full, uncompromised listening experience.

### Perfect match to the Philips 5000 series TV\*



Perfect match to Philips 5000 series TV  
Relax and enjoy a great night of TV in brilliant LED

quality on the Philips 5000 Series 2011 LED TV. Powered by the Pixel Plus HD engine for clear, vivid Full HD pictures and complemented by authentic sound. Both TV and home theatre can be operated with only one remote control and the combined set ensures the best picture and sound performance with Philips Easylink via HDMI. In addition they are both designed with the same materials and finishing for a perfect visual match!

# Specifications

## Accessories

- Compatible accessories: RWSS5510 Wireless Rear Audio, STS1300 Floor stand
- Included accessories: 2 x AAA Batteries, 2 x 75 mm screws, 8 x 30 mm screws, DCK3060 Dock for iPod/iPhone, FM antenna, Power cord, Quick start guide, Remote Control, Safety and Legal Leaflet, Trademarks Sheet, World Wide Warranty leaflet, WUB1110 Wi-Fi USB Adaptor

## Matching Philips Televisions\*

- 5000 Series: 32PFL5406, 32PFL5606, 40PFL5606

## Audio Playback

- Compression format: AAC, MP3, WAV, WMA
- MP3 bit rates: 32 - 320 kbps

## Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

## Video Playback

- Compression formats: AVCHD, DivX Plus HD, MPEG1, MPEG2, MPEG4, WMV HD, WMV SD

## Optical Playback Media

- Playable Discs: AVCHD, BD, BD R/BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

## File Format

- Audio: aac, mka, mp3, wav, wma
- Picture: GIF, JPEG, JPG
- Video: asf, avi, DivX, mkv, mp4, mpeg, mpg, wmv

## Connectivity

- Smart TV: DLNA, MyRemote, Net TV
- Front/Side connections: Music iLINK, USB/Wi-Fi slot
- Rear Connections: AUX IN 1, AUX IN 2, Composite video (CVBS) output, Digital coaxial in, Digital optical in, Ethernet, FM Antenna Socket, HDMI 1.4 output (ARC), iPod/iPhone Dock Jack, Mini Easy-Fit Speaker Jacks, SD/SDHC Card slot, Wireless Rear Audio

## Convenience

- EasyLink (HDMI-CEC): 21:9 format subtitle support, Audio Return Channel, Automatic audio input mapping, Dynamic Lipsync, One touch play, One touch standby, Remote Control-Passthrough
- HDMI Features: 3D, Audio Return Channel (ARC), Content Type, Deep colour

## Dimensions

- Main Unit (W x H x D): 435 x 57 x 357 mm
- Main Unit Weight: 3.69 kg
- Centre Speaker (W x H x D): 280 x 95 x 92 mm
- Centre Speaker Weight: 1.40 kg
- Centre Speaker cable length: 2 m
- Front Speaker (W x H x D): 100 x 280 x 104 mm
- Front Speaker Weight: 1.03 kg

- Front Speaker cable length: 4 m
- Rear Tallboy Speaker (W x H x D): 260 x 1101 x 260 mm
- Rear Speaker Weight: 3.84 kg
- Rear Speaker cable length: 10 m
- Subwoofer (W x H x D): 196 x 395 x 342 mm
- Subwoofer Weight: 4.8 kg
- Subwoofer cable length: 3 m
- Packaging (W x H x D): 400 x 1100 x 400 mm
- Weight incl. Packaging: 24.6 kg

## Loudspeakers

- Loudspeaker types: 1 x Centre speaker, 2 x Satellite speakers, 2 x Tallboy speakers
- Centre speaker drivers: 2 x 3" full range woofers
- Centre speaker freq. range: 150–20k Hz
- Centre speaker impedance: 3 ohm
- Drivers per Satellite speaker: 2 x 3" Full range woofers
- Satellite speaker freq range: 150 to 20,000 Hz
- Satellite speaker impedance: 5 ohm
- Drivers per Tallboy speaker: 2 x 3" Full range woofers
- Tallboy speaker freq range: 150–20k Hz
- Tallboy speaker impedance: 5 ohm
- Subwoofer type: Passive
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer freq range: 20 to 150 Hz
- Subwoofer impedance: 3 ohm

## Picture/Display

- Picture enhancement: HD (720p, 1080i, 1080p/24fps), Progressive scan, Video upscaling

## Power

- Power consumption: 105 W
- Power supply: 220-240 V, 50 Hz
- Standby power consumption: < 0.5 W

## Sound

- Equalizer settings: Gaming, Movie, Music, News, Original
- Sound Enhancement: Dialogue Enhancer, Dolby Digital Prologic II, DoubleBass, FullSound, Night Mode, Treble, Mid and Bass Control
- Sound System: Dolby Digital 5.1, Dolby Digital Plus, Dolby True HD, DTS Digital Surround, DTS-HD High Resolution Audio
- Centre speaker output power: 230 W
- Satellite speaker output power: 135 W x 2
- Tallboy speaker output power: 135 W x 2
- Subwoofer output power: 230 W
- Total Power RMS @ 30% THD: 1000 W

## Sustainability

- Packaging: 80% recycled corrugated board, Electronic User Manual, No polyfoam, Soya based ink

## Tuner/Reception/Transmission

- RDS: Station Name
- Tuner Bands: FM
- Number of Pre-set Channels: 40



Issue date 2012-07-23

Version: 7.3.9

12 NC: 8670 000 74124  
EAN: 87 12581 59200 4

© 2012 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)

\* The home theatre can also be matched with all other Philips TVs.  
\* To check whether Video on Demand is available in your country, please visit [www.philips.com/blu-ray](http://www.philips.com/blu-ray).