



Philips
docking speaker

for iPod/iPhone/iPad



DS9000



Experience true fidelity

Obsessed with sound

Philips docking speaker is the gateway to everything you hold precious about music. Built with premium components & natural wood, it unleashes full fidelity from iPod/iPhone/iPad, offering an authentic sound experience true to the original.

Peerless sound quality

- Audiophile-quality drivers for authentic sound reproduction
- Passive crossover for full audible spectrum reproduction
- Pure digital processing technology for best sound clarity
- Precisely tuned bass pipes for deep, tight bass reproduction
- Smooth-edged enclosure to limit sound diffraction

Exquisite design and finishing

- Premium design in natural wood, fabric and metal
- Sensually curved back for elegance and precise sound
- Sustainable wood source to preserve ecological balance

Advanced intuitive control

- Proximity sensor to activate backlit control panel
- Dock any iPod/iPhone, even in its case
- Discover, share music and more features via DockStudio app



reddot design award
winner 2010



asimpleswitch.com




asimpleswitch.com

PHILIPS

sense and simplicity


Highlights

Passive crossover

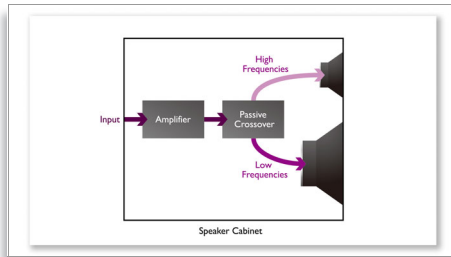

Passive crossover design lets you hear every note clearly so your music comes out amazingly pure, natural and complete. Through complex engineering, each part of the full audible spectrum of sound frequencies is separated and sent to the appropriate drivers. Signals beyond a driver's frequency response are never sent, so sound quality is vastly improved and distortion level greatly reduced. Together with premium electronic components, passive crossover delivers audio that is coherent, uncompromised and faithful to the original.

Pure digital sound

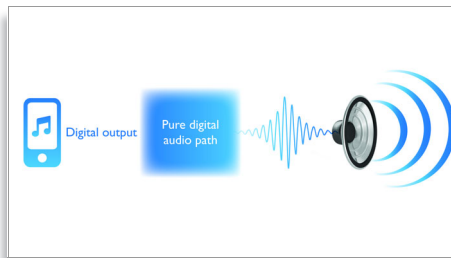

Advanced pure digital sound processing technology offers vastly superior sound performance compared to the conventional analogue audio processing technology that is found in docking players that use the analogue audio output from an iPod/iPhone. By collecting the iPod's/iPhone's digital audio output and employing digital processing at each stage of the circuit, a much higher Signal-to-Noise ratio is produced. The result is unsurpassed sound clarity that is in perfect balance.

Curved back for better sound

The clean lines and sensuality of the curved back cover not only looks fabulous – it also creates a


more effective structure for acoustics. Carefully designed, the curve increases the stiffness of the speaker cabinet, dramatically reducing internal resonance and resulting in more precise and natural sound reproduction. You get to enjoy both lovely looking speakers and sensational sound.

Proximity sensor



Most top-grade audiophile appliances allow the display to be turned off – for absolute enjoyment of music, and for power to be focused on sound reproduction. With the proximity sensor feature, you can enjoy that too. Walk away and the illuminated functional keys automatically dim. When your hand draws near, the functional keys light up so you can control your music without fuss.

DockStudio app on App Store

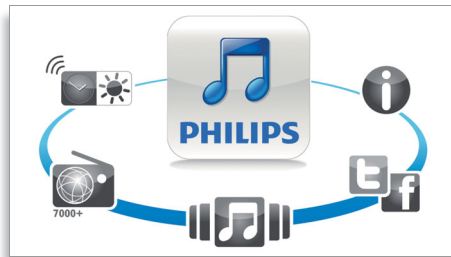

The free Philips DockStudio app brings lots of cool exclusive features to your docking speaker. You can listen to your favourite radio shows, discover new music with thousands of Internet radio stations worldwide, browse through your music collection and share what you're listening to with friends via Facebook and Twitter. In Clock mode, it lets you set multiple customised music alarms and gives updated weather reports. Download it from App Store and find out more.

Specifications

iPhone compatibility

- Compatible with: iPhone, iPhone 3G, iPhone 3GS, iPhone 4

iPod compatibility

- Compatible with: iPod, iPod mini, iPod with colour display, iPod nano 1st generation, iPod nano 2nd generation, iPod nano 3rd generation, iPod nano 4th generation, iPod nano 5th generation, iPod classic, iPod touch, iPod touch 2nd generation, iPod touch 2nd gen 8/16/32 GB, iPod 5th generation

iPod/iPhone App

- Free download from App store
- App name: DockStudio
- Compatibility: iPhone OS 3.0
- Playback: album/track navigation, playback controls
- Sound settings: 5 band equalizer, DBB, DSC-Flat, Pop, Rock, Jazz, Classic
- Clock: analogue display, digital display
- Alarm: multiple alarms, sleep timer, wake up to music, wake up to sounds of nature, wake up to photos

Audio playback

- Docking playback modes: next and previous track, play and pause

Sound

- Sound system: stereo
- Volume control: up/down
- Output power: 2 x 50 W RMS

Loudspeakers

- Speaker drivers: 2 x 1" tweeters, 2 x 4" woofers
- Loudspeaker enhancement: bass reflex speaker system

Connectivity

- Aux in

Convenience

- Charging device: iPhone, iPod

Power

- Power supply: 100 - 240 V AC, 50/60 Hz

Accessories

- Cables/Connection: 3.5-mm stereo line-in cable, power cord
- Remote control
- Others: Quick start guide
- Warranty: Warranty Certificate, Worldwide Guarantee booklet

Dimensions

- Gross weight: 9.6 kg
- Packaging width: 619 mm
- Packaging height: 276 mm
- Packaging depth: 276 mm
- Weight: 6.5 kg
- Main unit depth: 216 mm
- Main unit height: 214 mm
- Main unit width: 562 mm

Made for
iPod iPhone iPad



Issue date 2013-03-03

Version: 12.0.6

12 NC: 8670 000 61833
EAN: 87 12581 53614 5

© 2013 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

www.philips.com