




Philips
Wireless Hi-Fi Headphone



SHC8565

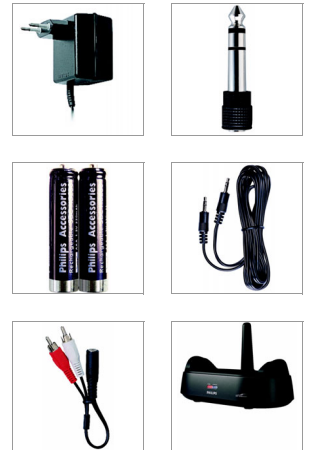

The ultimate wireless Hi-Fi experience

with bass and treble enhancements

Freedom to enjoy music around your home. With Hi-Fi sound reproduction with auto tuning and sound enhancement features, this stereo headphone is the ultimate in personal convenience.

You'll forget you're wearing them!

- Soft ear and headband cushions ensure comfort in use
- 3-way adjustment for a better fit and bass performance
- Pre-formed ear cushions ensure a comfortable fit

The perfect wireless listening experience

- Boost the treble to suit your personal preference
- Set the bass response to suit your preference
- 40 mm speaker driver delivers sound without distortion

Always ready to go

- FM Wireless transmission for freedom of movement
- Automatic tuning simplifies tuning reception frequency
- Energising docking station stores and recharges receiver



PHILIPS
sense and simplicity

Specifications

Sound

- Acoustic system: closed
- Frequency response: 10 - 22,000 Hz
- Magnet type: Neodymium
- Sensitivity: 100 dB
- Speaker diameter: 40 mm
- Signal/noise ratio: 70 dB

Tuner/Reception/Transmission

- Channel separation: >30 dB
- Pilot tone frequency: 19
- Effective range: 100 m
- Carrier frequency range: 863.0 - 865.0 MHz
- Modulation: FM
- Channel selection: automatic
- Number of channels: 3

Convenience

- Automatic power off
- Battery charging indicator
- Low battery indicator
- Double PLL
- Operating time: +/- 15 hours

Power

- Power supply headphone: 2 x 1.5 V NiMH R03/AAA
- Power supply transmitter: AC/DC adapter 12 V/200 mA

Outer Carton

- EAN: 87 10895 95793 9
- Number of consumer packages: 3
- Gross weight: 4.9 kg
- Outer carton (L x W x H): 40.2 x 35.5 x 26 cm
- Net weight: 3.12 kg
- Tare weight: 1.78 kg

Packaging dimensions

- EAN: 87 10895 95792 2
- Number of products included: 1
- Packaging type: Carton
- Packaging dimensions (W x H x D): 23.1 x 30.5 x 12.4 cm
- Gross weight: 1.43 kg
- Net weight: 1.04 kg
- Tare weight: 0.39 kg

Highlights

Soft ear and headband cushions

The durable and soft materials used for the ear cushions and headband cushion of these Philips headphones ensure comfortable prolonged use.

3-way adjustable ear shells

Enjoy a comfortable fit and experience better bass performance thanks to the three-way adjustable ear shells that fit naturally around your ears.

Ergonomic design ear cushions

The ergonomic three-dimensional ear cushion shape evenly distributes the load for a better and more comfortable fit.

Treble Boost

An easy-to-locate control on the headphone allows you to boost the treble performance with just one touch.

Bass boost

An easy-to-locate control on the headphone allows you to boost the bass performance with just one touch.

40 mm speaker driver

The 40 mm speaker driver is made of a composite Mylar material for a highly sensitive yet powerful element that delivers sound without audible distortion.

FM Wireless transmission

With high-frequency FM wireless transmission, which can even pass through walls, you can even listen to your music when you're in another room.

Automatic tuning

Pressing the handy tuning button on the headphone sets the microprocessor-controlled circuit going to optimally tune the transmission frequency for the best possible reception and superb audio quality.

Energising docking station

The docking station is the most convenient way to store your receiver when not in use. At the same time, it will recharge your receiver unit and have it ready for use at any moment.



Issue date 2012-09-07

Version: 5.0.8

12 NC: 9082 100 07828
EAN: 87 10895 95792 2

© 2012 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com