



Philips  
Wireless Bluetooth®  
headphones

40mm drivers/semi-closed back  
Over-ear



SHB7150FB



## High performance wireless sound

one touch pairing

Enjoy hour after hour of wireless music or calls with Philips wireless headphones. Featuring NFC, Bluetooth connectivity, superior 40mm neodymium drivers and soft, over-ear cushions, this is freedom of movement and comfort at its finest.

### Premium sound quality

- 40mm neodymium drivers for sharp treble and deep bass
- Advanced echo and noise reduction for crystal clear calls
- Over-ear noise isolation cushions keep your music yours

### Play music wireless or wired

- Pair with your NFC enabled device with one touch
- Wireless or wired - enjoy music any way you like!
- Bluetooth-enabled wireless music & call control
- Supports Bluetooth 3.0 HSP/HFP/A2DP/AVRCP mobile devices

### Longer wearing comfort

- Fully adjustable headband that fits you
- Soft, over-ear leather cushions for long-listening comfort

# PHILIPS

Wireless Bluetooth® headphones  
40mm drivers/semi-closed back Over-ear

SHB7150FB/27

# Highlights

## 40mm neodymium drivers



Ultra-compact yet incredibly strong, our 40mm neodymium drivers generate an incredibly powerful magnetic field. They offer impressively subtle vocal shadings and rich bass that can add unexpected new dimensions to your favorite songs.

## Choice of wireless or wired

Pick up your call and listen to music wirelessly, or connect directly through a 3.5mm jack. These new NFC-enabled headphones really do offer you the best of both worlds! Simply pair them with any NFC-enabled device to enjoy crystal-clear wireless listening pleasure. Or connect using the 3.5mm jack for the same immersive listening experience. The choice is yours!

## Easy NFC pairing


Pair with any NFC enabled device effortlessly. Gone is complicated wireless headphone pairing. Our new NFC technology is user friendly and easy to use, with one touch pairing for any NFC enabled smart device.

## Noise isolation cushions




Over-ear cushions fit around the ears and block noise from outside so you can enjoy your music uninterrupted.

## Wireless music & call control

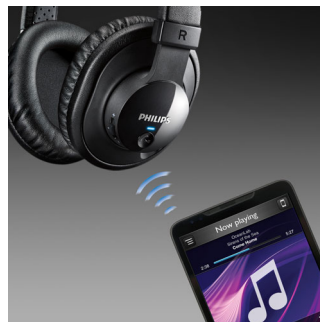

When it comes to endless music listening pleasure and hassle-free switching between music and calls, nothing beats Bluetooth! Enjoy your favorite songs by pairing your Philips headset with your NFC-enabled smartphone or tablet. A tap on the earshell's intuitive controls is all that's needed to lower volume or pause a song while you handle incoming and outgoing calls.

## Fully adjustable headband

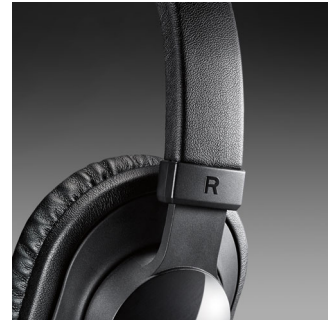

The fully adjustable headband can adjust the size of the headphones, so they will always be the right size for you.

## Over-ear leather cushions



Your Philips headset comes with soft leather over-ear cushions that hug the contours of your ears. They are so comfortable and secure you'll forget you have them on! Not only are they comfortable, they are an incredibly effective seal, giving you hour after hour of music listening pleasure.

# Specifications

## Design

- Color: Black

## Sound

- Frequency range: 10 - 22 000 Hz
- Impedance: 32 ohm
- Magnet type: Neodymium
- Maximum power input: 100 mW
- Speaker diameter: 40 mm
- Sensitivity: 103 dB
- Acoustic system: Semi-closed

## Connectivity

- Audio Connections: 3.5mm Line in
- Bluetooth profiles: A2DP, AVRCP, HFP, HSP
- Maximum range: Up to 15 m

## Convenience

- Call Management: Answer/End Call, Reject Call, Last number redial, Microphone mute, Call on Hold, Switch between call and music, Switch between 2 calls
- Volume control

## Accessories

- Audio cable: 1.2 m audio cable
- Quick start guide: Included
- USB cable: Included for charging

## Power

- Battery Type: LI-Polymer
- Music playtime: 9 hr
- Standby time: 200 hrs
- Talk time: 9 hrs

## Outer Carton

- Gross weight: 3.104 lb
- Gross weight: 1.408 kg
- GTIN: 1 06 09585 24368 9
- Outer carton (L x W x H): 28.3 x 22.3 x 24 cm
- Outer carton (L x W x H): 11.1 x 8.8 x 9.4 inch
- Nett weight: 1.501 lb
- Nett weight: 0.681 kg
- Number of consumer packagings: 3
- Tare weight: 0.727 kg
- Tare weight: 1.603 lb

## Packaging dimensions

- Packaging dimensions (W x H x D): 19.5 x 24 x 8.5 cm
- Packaging dimensions (W x H x D): 7.7 x 9.4 x 3.3 inch
- Gross weight: 0.382 kg
- Gross weight: 0.842 lb
- Nett weight: 0.500 lb
- Nett weight: 0.227 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 0.342 lb
- Tare weight: 0.155 kg
- Type of shelf placement: Both
- UPC: 6 09585 24368 2

## Product dimensions

- Product dimensions (W x H x D): 6.5 x 7.4 x 3.0 inch
- Product dimensions (W x H x D): 16.6 x 18.7 x 7.7 cm
- Weight: 0.388 lb
- Weight: 0.176 kg



Issue date 2017-08-29

Version: 6.1.3

12 NC: 8670 001 15569  
UPC: 6 09585 24368 2

© 2017 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)