


Philips  
Micro Theater

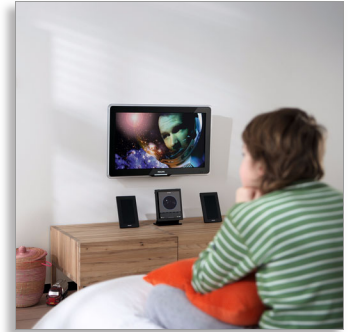

MCD289

## Super-sleek wall-mountable theater

with wireless subwoofer

Enhance movie and music playback with the MCD289 and experience easy and clutter-free installation via a digital wireless subwoofer. It plays DVD, DivX and USB direct playback. Comes with table-top and wall-mount options.

### Enrich your movie experience

- Play DVD, DivX®, (S)VCD, MP3-CD, WMA-CD, CD(RW) & Picture CD
- Dolby Digital for ultimate movie experience
- 12-bit/108MHz video processing for sharp and natural images
- Progressive Scan component video for optimized image quality

### Enrich your sound experience

- Digital wireless subwoofer for powerful bass
- Class 'D' digital amplifier for quality sound performance
- USB Direct for music and photo playback
- Digital Sound Control for optimized music style settings
- Dynamic Bass Boost for deep and dramatic sound
- Loudness for bass and treble enhancement
- Total 100W RMS

### Design that blends into your interior

- Stylish slim design with table-stand and wall-mount options

# PHILIPS

# Highlights

## Dolby Digital

Because Dolby Digital, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb quality surround sound audio with realistic spatial cues.

## USB Direct

Simply plug in your USB device on the system and share your stored digital music and photos with your family and friends.

## Digital Sound Control

Digital Sound Control offers you a choice of pre-set Jazz, Rock, Pop and Classic controls you can use to optimise the frequency ranges for different musical styles. Each mode uses graphic equalizing technology to automatically adjust the sound balance and enhance the most important sound frequencies in your chosen music style. Ultimately, Digital Sound Control makes it easy for you get the most out of your

music by precisely adjusting the sound balance to match the type of music you are playing.

## Dynamic Bass Boost

Dynamic Bass Boost maximizes your music enjoyment by emphasizing the bass content of the music throughout the range of volume settings - from low to high – at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

## Loudness

In the sound spectrum, high and low frequencies are relatively less audible to human ears - especially at low volumes. By activating the Loudness feature, the bass and treble will be amplified so you can savor a more balanced sound perception overall.

## 12-bit/108MHz video processing

12-bit Video DAC is a superior Digital-to-Analogue-Converter that preserves every detail of the authentic picture quality. It shows subtle shades and smoother graduation of colors, resulting in a more vibrant and natural picture. The limitation of the usual 10bit DAC become in particular apparent while using large screens and projectors.

## Progressive Scan

Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending a field comprising the odd lines to the screen first, followed by the field with the even lines, both fields are written at one time. A full image is created instantaneously, using the maximum resolution. At such a speed, your eye perceives a sharper picture with no line structure.



# Specifications

## Sound

- Output Power: 2x20W RMS+ 60W
- Sound Enhancement: Digital Sound Control 4 modes, Dynamic Bass Boost, Loudness, Class "D" Digital Amplifier
- Sound System: Dolby Digital
- Output power (RMS): Total 100W RMS

## Loudspeakers

- Main Speaker: Bass Reflex Speaker System, 3" woofer
- Subwoofer type: Active

## Video Playback

- Playback Media: DivX, DVD-Video, Video CD/ SVCD, Picture CD, DVD+R/+RW, DVD-R/-RW
- Disc Playback Modes: A-B Repeat, Angle, PBC, Zoom, Parental control, Disc Menu, Fast Backward, Fast Forward, OSD, Resume Playback from Stop, Slow Motion
- DVD Region.: 3
- Loader Type: Slot
- Video Enhancement: Progressive Scan

## Still Picture Playback

- Picture Compression Format: JPEG
- Picture Enhancement: Slideshow with MP3 playback
- Playback Media: Picture CD, CD-R/RW, DVD+R/+RW

## Audio Playback

- Playback Media: CD, CD-R, CD-RW, MP3-CD, WMA-CD
- Disc Playback Modes: Repeat/one/all/program, Shuffle Play, 20-Track Programmable, Fast Forward/Backward, Next/Previous Track Search
- ID3-tag support
- Loader Type: Slot
- USB Direct Modes: Fast Backward/Fast Forward, Play/Pause, Previous/Next, Program Play, Repeat, Shuffle, Stop

## Tuner/Reception/Transmission

- Tuner Bands: FM Stereo

- Auto digital tuning
- Station presets: 20
- Tuner Enhancements: Auto Store

## Connectivity

- Aux in: Line-in, 3.5 mm
- Headphone: 3.5 mm
- Other connections: FM Antenna, Digital audio coaxial out, AV out
- Video Output - Analog: S-Video (on Hosiden), Component Y Pb Pr (cinch)
- USB: USB host

## Convenience

- Alarms: CD Alarm, Sleep timer, Radio Alarm, USB alarm
- Clock: On main display
- Display Type: VFD display
- OSD Languages: English, Traditional Chinese, Portuguese, Spanish
- Indications: DIM mode
- Wall mountable / Ceiling Throw: Wall Mountable

## Accessories

- Included accessories: FM antenna, Audio/Video cable, World Wide Warranty leaflet, AC Power Cord, Component video cable (R/G/B)
- Remote control: 47-key with 2xAAA batteries
- User Manual: English, Traditional Chinese
- Quick start guide: Eng, Trad. Chin

## Dimensions

- Set dimensions (W x H x D): 200 x 250 x 110 mm
- Main speaker dimensions (W x H x D): 140 x 220 x 33 mm
- Packaging dimensions (W x H x D): 486 x 368 x 224 mm
- Subwoofer dimensions (W x H x D): 170 x 197 x 302 mm
- Weight incl. Packaging: 7.5 kg

## Power

- Power supply: 110-240V, 50/60 Hz



Issue date 2014-02-07

Version: 2.0.5

12 NC: 8670 000 36681  
EAN: 87 12581 39224 6

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)