


Philips 6000 series
Blu-ray Disc/DVD player

3D playback
DivX Plus HD
Net TV



BDP6000

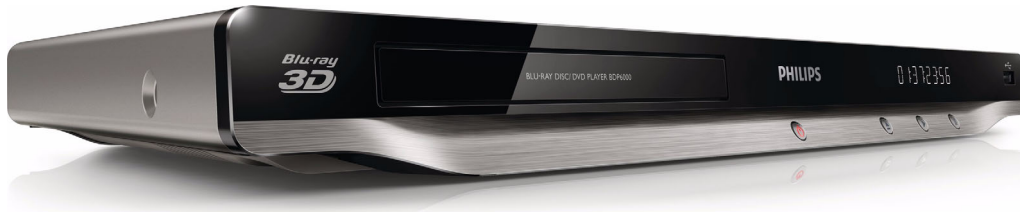

Blu-ray 3D and the best of the Internet on your TV

Be amazed with Blu-ray 3D and discover a new dimension in your movie experience at home. Enjoy the best of Internet on your TV with Net TV, hassle-free with the speedy built-in Wi-Fi-n. And playback more than ever before with DivX Plus HD.

See more

- CinemaPerfect HD for clearer and sharper video playback
- Blu-ray 3D Disc playback for a full HD 3D experience at home
- Net TV for popular online services including video stores*
- DivX Plus HD Certified for high-definition DivX playback
- DLNA Network Link to enjoy photos and videos from your PC
- Subtitle Shift for widescreen without any missing subtitles

Hear more

- Dolby TrueHD and DTS-HD MA for HD 7.1 surround sound

Engage more

- Built-in Wi-Fi-n for faster, wider wireless performance
- USB 2.0 plays video/music from USB flash/hard disk drive
- Turn your Smartphone into a remote for Philips AV products
- USB keyboard connectivity for easy Net TV and Web browsing
- EasyLink to control all HDMI CEC devices via a single remote



asimpleswitch.com

PHILIPS

Blu-ray Disc/DVD player
3D playback DivX Plus HD, Net TV

BDP6000/12


Highlights

Blu-ray 3D Disc playback



Full HD 3D provides the illusion of depth for a heightened, realistic cinema viewing experience at home. Separate images for the left and right eyes are recorded in 1920 x 1080 full HD quality and alternately played on screen at a high speed. By watching these images through special glasses that are timed to open and close the left and right lenses in synchronisation with the alternating images, the full-HD 3D viewing experience is created.

Dolby TrueHD and DTS-HD MA

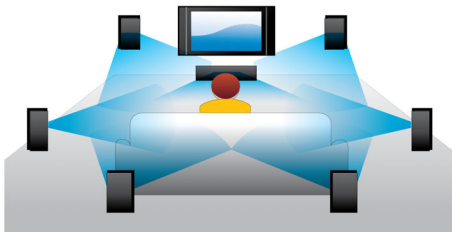

DTS-HD Master Audio and Dolby TrueHD deliver 7.1 channels of the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. DTS-HD Master Audio and Dolby TrueHD complete your high definition entertainment experience.

DivX Plus HD Certified



DivX Plus HD on your Blu-ray player and/or DVD player offers the latest in DivX

technology to let you enjoy HD videos and movies from the Internet directly on your Philips HDTV or PC. DivX Plus HD supports the playback of DivX Plus content (H.264 HD video with high-quality AAC audio in an MKV file container) while also supporting previous versions of DivX video up to 1080p. DivX Plus HD for true HD digital video.

DLNA Network Link



The DLNA Network link provides easy access to personal photos, music, videos or movies on your PC or Home Network. It uses the Ethernet (LAN) connection with DLNA protocol that ensures that DLNA-certified products will work together seamlessly. By connecting your Blu-ray Disc player to your home network, you will be able to access information from all DLNA-certified devices. You can access your world of entertainment at the simple push of a button with the intuitive user interface, which is designed for easy browsing.

Net TV with video on demand*



Experience many online services including video-on-demand. Enjoy movies, pictures, infotainment and other online content directly on your TV whenever you like via the Philips Blu-ray Disc player or home theatre. Now, you can also have access to selected online video stores* directly on your TV. Simply select a rental video and enjoy it. A movie night at

home has never been this easy. *Availability varies per country, please visit www.philips.com/blu-ray for more information.

CinemaPerfect HD



Philips' CinemaPerfect HD engine offers a new standard in clear and sharp video playback. This intelligent engine reduces noise and sharpens images to bring you higher quality video images than previously seen. Video noise reduction and super scaling work to reduce the noise that is produced when video is compressed into MPEG format. With improved colour processing, the engine produces sharp, deep images on screen.



asimpleswitch.com

Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas — Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.



Specifications

Picture/Display

- Aspect ratio: 21:9, 16:9, 4:3
- Blu-ray 3D: Full HD 1080p
- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive scan, Video upscaling
- D/A converter: 12 Bit/148 MHz
- Advanced video processing: CinemaPerfect HD

Video Playback

- Playback Media: BD Video, BD-ROM, BD-R/RE 2.0, DVD, DVD-Video, DVD+R/+RW, DVD-R/-RW, Video CD/SVCD, CD-R/CD-RW, USB flash drive, DivX, CD
- Compression formats: DivX Plus™ HD, MKV, H.264, VC-1, MPEG2, XviD, AVCHD, WMV
- Disc Playback Modes: Standard Play, Pause, Search forward/reverse, Slow Forward, Resume Playback from Stop, Skip, Disc Menu, Repeat, A-B Repeat, Zoom, Angle
- Video Enhancement: Deep Color, x.v. Colour, Video Upscaling, Progressive Scan
- BD Region Code: B
- DVD Region Code: 2
- DVD Region.: 2

Sound

- Sound System: DTS-HD Master Audio, Dolby True HD, Dolby Digital Plus, DTS, Dolby Digital
- Signal to noise ratio: = 100 dB
- Dynamic Range (1 kHz): = 90 dB
- Frequency response: (20 kHz): = |0.2|dB (Max./Min. 2ch, DVD) Hz Hz
- D/A converter: 24-bit, 192 kHz

Audio Playback

- Playback Media: CD, CD-R/RW, MP3-CD, MP3-DVD, USB flash drive
- Compression format: DTS, Dolby Digital, AAC (multi-channels), MP3, PCM, WMA

Digital Photo Playback

- Playback Media: CD-R/RW, DVD+R/+RW, DVD-R/-RW, USB flash drive
- Picture Compression Format: JPEG
- Picture Enhancement: High Definition Resolution, Slideshow, Rotate, Zoom, Slideshow with MP3

playback

Connectivity

- Rear Connections: HDMI output, Digital coaxial out, Composite video (CVBS) output, Analogue audio Left/Right out, Ethernet, SD/SDHC Card slot
- Front/Side connections: USB 2.0
- Network connections: 802.11 b/g/n, Built-in Wi-Fi
- PC network link: DLNA 1.5 certified

Convenience

- EasyLink (HDMI-CEC): One touch play, One touch standby
- On-Screen Display languages: English, German, French, Dutch, Italian, Portuguese, Spanish, Danish, Finnish, Polish, Swedish, Norwegian, Turkish, Czech, Greek
- Child Protection: Parental Control
- BD-Live (1 GB USB memory needed)
- Firmware upgradeable: Firmware upgradeable via USB, Online firmware upgrade
- Online services: Net TV
- Ease of Use: AV remote app, Fast wake up

Accessories

- Included accessories: Audio/Video cable, User Manual, CD-R (User Manual), Quick start guide, Product Registration Card, Remote Control, 2 x AAA Batteries
- User Manual: English, German, French, Dutch, Spanish, Italian, Portuguese, Danish/Norwegian, Finnish, Greek, Polish, Russian, Swedish, Turkish

Power

- Power supply: 220-240 V, 50/60 Hz
- Power consumption: 18 W
- Standby power consumption: 0.18 W

Dimensions

- Packaging dimensions (W x H x D): 495 x 99 x 303 mm
- Weight incl. Packaging: 2.10 kg
- Product dimensions (W x H x D): 435 x 42 x 208.5 mm
- Product weight: 1.65 kg



Issue date 2014-07-15

Version: 3.0.6

12 NC: 8670 000 76761
EAN: 87 12581 60463 9

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com